

hTC
BOLT™

User Guide



Table of Contents

Getting Started	1
Important Information	2
Radio Frequency Exposure Operating Instructions	2
Important Note on Recoverable Data	2
Introduction	3
About the User Guide	3
Access Instructions on Phone.....	3
Launch the Guide.....	3
Using the Phone Guide.....	3
Check Basic Operations	4
Screen Use for First-Time Users	4
Set Up Your Phone	5
Parts and Functions	5
Charge the Battery.....	7
SIM Card.....	8
SD Card	11
Insert SD Card	12
Unmount the SD Card.....	13
Format SD Card.....	13
Remove SD Card.....	14
Turn Your Phone On and Off.....	14
Use the Touchscreen.....	16
Activate Your Phone	21
Complete the Setup Screens	22
Transfer Content to Your New Phone.....	23
Transfer Content from an Android Phone.....	23
Transfer Content from an iPhone	25
Transfer Content Between Your Phone and Computer.....	25
Ways of Transferring Contacts and Other Content into Your Phone	26
Water and Dust Resistant.....	26
Care and Maintenance Tips	26
Cleaning and Drying	27
Basic Operations.....	29

Basics.....	29
Home Screen and Applications (Apps) List	29
Onscreen Navigation Keys	30
Phone Settings Menu.....	30
Using Quick Settings.....	31
Capture Screenshots	32
Portrait and Landscape Screen Orientation	32
Applications.....	33
Apps List	33
Launch an App.....	36
Phone Number.....	38
Silent Mode	38
Airplane Mode.....	39
Working with Text	39
Edit Text.....	39
Enter Text by Typing.....	40
Enter Text with Word Prediction	41
Enter Text by Voice.....	42
Adjust the Keyboard Settings	42
Typing Faster and More Accurate	43
Google Account	45
Create a Google Account	46
Sign In to Your Google Account	47
Google Play Store.....	47
Find and Install an App	47
Request a Refund for a Paid App.....	48
Update an App.....	49
Uninstall an App.....	49
Get Help with Google Play.....	49
Google Wallet.....	50
Fingerprint Scanner	50
Add a Fingerprint the First Time	50
Add, Remove, or Edit Fingerprints.....	51
Lock and Unlock Your Screen	52
Update Your Phone	52

Update Your Phone Software	53
Update Your Profile.....	54
Update Your PRL.....	54
Your Phone's Home Screen.....	55
Home Screen Basics	55
Home Screen Layout	55
Status Bar	56
Notification Panel	58
Manage App Notifications	59
Front Indicator Light (LED).....	59
Change LED Notification Settings	60
HTC BlinkFeed - Your Dynamic Home Screen	60
Customize the Home Screen	64
Choose a Home Screen Layout.....	64
Set the Home Wallpaper.....	65
Set Multiple Wallpapers	66
Set a Time-based Wallpaper	66
Organize Your Widget Panels	67
Work with Stickers, Widgets and App Shortcuts	68
Customize the Lock Screen.....	70
Themes	73
Download Themes	73
Bookmark Themes.....	73
Create Themes	74
Mix and Match Themes.....	74
Find Your Themes	75
Share Themes	75
Delete a Theme	75
Motion Launch	76
Turn Motion Launch On or Off	76
Wake Up to the Lock Screen	77
Wake Up and Unlock	77
Wake to the Home Widget Panel.....	78
Wake to HTC BlinkFeed	78
Launch the Camera	79

Motion Launch Troubleshooting	79
Making Connections.....	81
Phone Calls and Voicemail	82
Place and Answer Calls	82
Call Using the Phone Dialer.....	82
Call Emergency Numbers	84
Call Using a Speed Dial Number	84
Voice Dialing	85
Call a Number in a Text Message, Email Message, or Calendar Event	85
Make International Calls	85
Return a Missed Call.....	86
Answer Phone Calls.....	86
In-Call Screen Layout and Operations.....	88
Place Calls from History/People	89
Call History.....	89
Open Call History.....	90
Save a Number From Call History	90
Prepend a Number From Call History.....	90
Block a Caller.....	91
Erase Call History	91
Voicemail.....	91
Voicemail Setup	91
Visual Voicemail Setup	92
Review Visual Voicemail.....	92
Listen to Multiple Voicemail Messages.....	93
Visual Voicemail Options	94
Configure Visual Voicemail Settings.....	94
Optional Calling Services.....	95
Wi-Fi Calling.....	95
Conference Calling	96
Caller ID Blocking	96
Call Waiting.....	96
Call Forwarding.....	97
Internet Calls.....	97
Ringtone Settings.....	98

Call Settings	99
Call Features	99
Voicemail Settings	99
Hearing Aids	99
CDMA Call Settings	99
Contacts	102
Your Contacts List	102
Find People	103
Set Up Your Profile	104
Add Entries to the People App	104
Get in Touch with a Contact	105
Manage People Entries	106
Import or Copy Contacts	107
Merge Entries in People	107
Send Contact Information	108
Contact Groups	109
Back Up and Restore Your Contacts	111
Private Contacts	111
Messaging	113
Text and Multimedia Messaging	113
Send a Text Message (SMS)	113
Send a Multimedia Message (MMS)	114
Send a Group Message	114
Save and Resume Composing a Draft Message	115
Read and Reply to a Message	115
Block Unwanted Messages	116
Delete Messages and Conversations	117
Messenger Options	117
Gmail	118
Create and Send a Gmail Message	118
Check Received Gmail Messages	118
Manage Gmail Messages	120
Add a Gmail Account	123
Add an Exchange ActiveSync Account in Gmail	123
Get Help with Gmail	124

Internet and Social Networking	125
Data Services General Information (4G LTE and 3G Networks)	125
4G LTE	125
Your User Name	125
Data Connection Status and Indicators	126
Turn the Data Connection On or Off	126
Manage Your Data Usage	127
Chrome Browser	128
Use Browser Tabs	129
Add Bookmarks	129
Browsing History	129
Private Browsing	130
Set Browser Options	130
Chrome Support	131
Hangouts	131
Twitter	132
Facebook	132
Global Services	134
Activate Sprint Worldwide Service on Your Account	134
Your Phone's SIM Card for International GSM Roaming	134
Enable Global Roaming Mode	134
Set the Communications Method for Global Use	135
Select a Carrier	135
Make and Receive Worldwide Calls	135
Sprint International Voicemail Service	136
Set Up Your Voicemail Access Number for International Use	136
Access Your Voicemail Internationally	137
International Data Roaming	137
Access Email and Data Services Internationally	138
Contact Sprint for Assistance with International Service	138
Connectivity	141
Transfer Files Between Your Phone and a Computer	141
USB Type-C	141
Wi-Fi	141
Turn Wi-Fi On and Connect to a Wireless Network	141

Connect to a Wi-Fi Network via WPS	142
Disconnect from a Wireless Network.....	142
Wi-Fi Direct	142
Virtual Private Networks (VPN).....	143
Add a VPN Connection	143
Connect to a VPN	143
Disconnect From a VPN	144
Mobile Hotspot	144
Share Internet Connection via USB Tethering.....	144
Bluetooth	145
Bluetooth Information.....	145
Connect a Bluetooth Headset or Car Kit.....	145
Reconnect a Headset or Car Kit	146
Disconnect From a Bluetooth Device	146
Send Information Using Bluetooth	147
Where Sent Information is Saved	147
Receive Files Using Bluetooth.....	148
Share Content with NFC	149
Turn NFC On	149
Beam Content.....	149
HTC Connect	150
Share Media Using HTC Connect	151
Stream Music to Speakers Powered by Qualcomm AllPlay Media Platform.....	152
Stream Music to Blackfire Compliant Speakers	153
Apps and Entertainment.....	156
Camera and Video	157
Camera Overview	157
Open the Camera and Adjust the Settings	158
Choose a Capture Mode.....	158
Capture Mode Settings	159
Set the Photo Quality and Size.....	159
Touch Autoexposure.....	160
Zooming	160
Turn the Camera Flash On or Off	160
Use the Volume Button for Taking Photos and Videos	160

Close the Camera App.....	161
Take a Picture	161
Capture Better Photos	161
Record a Video	163
Set the Video Resolution	163
Turn on High Resolution Audio.....	163
Take a Photo While Recording a Video - VideoPic®	164
Camera Features	164
Take Continuous Camera Shots.....	164
Use HDR.....	164
Record Slow Motion Videos.....	165
Selfies and People Shots.....	165
Zoe Camera	169
Panoramic Shots.....	169
Hyperlapse.....	169
Scenes	170
Manually Adjust Camera Settings.....	170
Google Photos	172
View Photos and Videos	172
Share Your Photos.....	172
Edit Your Photos	173
Productivity.....	176
Calendar.....	176
Schedule or Edit an Event	177
View Calendar Events.....	177
Choose Which Calendar to Show.....	177
Dismiss or Snooze Reminders	178
Google Drive	178
Google Maps.....	179
Search for Information	182
Perform Searches on the Web and Your Phone	182
Search the Web with Your Voice	182
Set Search Options.....	182
Get Instant Information with Google Now	183
Now on Tap.....	185

Boost+	186
Turn Smart Boost On or Off.....	186
Clear Junk Files	187
Use Game Battery Boost	187
Check Activities of Downloaded Apps	188
Create a Lock Pattern for Some Apps.....	188
Calculator	188
Clock	189
Set an Alarm	189
Additional Clock Features	190
Weather.....	191
Voice Recorder	191
HTC Sync Manager	192
HTC Help	193
Entertainment and Activities	194
Google Play Music App.....	194
Play Music with Google Play	194
Google Play Music Screen Layout.....	195
Create Playlists in Google Play Music	195
Sprint Music Plus	196
YouTube.....	197
Watch YouTube Videos	197
Post a Video to YouTube	198
Sprint Zone.....	198
HTC BoomSound and Adaptive Audio	199
Set Up the HTC BoomSound Adaptive Audio Earphones.....	199
Adjust the Earphones to Ambient Sound Levels	200
Turn HTC BoomSound Adaptive Audio On or Off	200
Settings	201
Connections Settings	202
Basic Settings	202
Airplane Mode Settings.....	204
Wi-Fi Settings.....	204
Wi-Fi Calling.....	204
Bluetooth Settings.....	204

Mobile Data Settings	204
HTC Connect Settings	204
More Wireless & Network Settings	204
Device Settings	206
Display, Gestures & Buttons Settings	206
Glove Mode	206
Auto-rotate Screen	206
Display Size	206
Brightness	207
Color Temperature	207
Night Mode	207
Screen Saver	208
Screen Timeout (Sleep)	208
Buttons Settings	208
Media Gesture	208
Motion Launch Gestures	209
HTC BoomSound and Adaptive Audio	209
Sound & Notification Settings	209
Sound Profile and Vibrate	209
Volumes	209
Notification and Alarm Sound	210
Do Not Disturb	210
Incoming Calls - Ringtone	212
Incoming Calls - Other Options	212
System Sound Settings	213
Notifications - Flash Notifications	213
Notifications - App Light Notifications	213
Notifications - Lock Screen Notifications	213
Notifications - Emergency Broadcasts	214
Apps Settings	214
Uninstall Third-party Apps	214
Clear Application Cache and Data	214
Disable Apps	215
Storage Settings	215
Types of Storage	215

SD Card Storage Settings	215
Copy Files To or From Your Phone	218
Make More Storage Space	219
Power Settings	219
Battery Optimization for Apps	219
Use Power Saver Mode	220
Use Extreme Power Saving Mode	220
Check Battery Usage	221
Check Battery History	221
Display the Battery Percentage	221
Battery Saving Tips.....	221
Memory Settings	223
Personal Settings	224
Personalize Settings	224
Customize the Home and Lock Screen Settings	224
Ringtone.....	224
Notification Sound.....	224
Alarm.....	225
Font.....	225
Keyboard and Dialer Color	225
Fingerprint Scanner Settings	225
Accounts & Sync Settings.....	225
Add Your Social Networks, Email Accounts, and More	225
Add One or More Google Accounts.....	226
Manage Your Online Accounts	226
Location Settings	227
Location Setting	227
Google Location History.....	228
Security Settings	228
Screen Lock Settings.....	228
Lock Screen and Password Settings.....	230
Allow Installation of Third-Party Programs.....	230
Work with Certificates	230
Backup and Reset.....	231
Backup.....	231

Reset Your Phone.....	232
Get Content From Another Phone	233
System Settings	234
Accessibility Settings	234
Navigate Your Phone with TalkBack	235
Google Settings	237
Language & Keyboard Settings	237
Change the Phone Language.....	237
Keyboard and Input Methods - Virtual Keyboard.....	238
Keyboard and Input Methods - Google Voice Typing.....	238
Speech Settings.....	238
Date & Time Settings	238
Printing	239
System Updates.....	239
About Phone	240
Getting Help	241
For Assistance	242
Troubleshooting	242
Specifications	243
Sprint Account Information and Help	244
Sprint Account Passwords.....	244
Manage Your Account	245
Sprint Support Services	246
Copyright Information.....	246
Index.....	248

Getting Started

The following set of topics will introduce you to your phone, help you get set up with service, provide an overview of the phone screen, and get you started with basic phone operations.

Important Information

The following topics provide important information that should be read prior to using your HTC Bolt™.

Radio Frequency Exposure Operating Instructions

This device was tested for compliance with the applicable FCC and Industry Canada specific absorption rate (SAR) limits for radio frequency (RF) exposure during typical body-worn operations. To ensure that RF exposure levels remain at or below the tested levels, use a belt-clip, holster, or similar accessory that maintains a minimum separation distance of 1.0 cm between your body and the device, with either the front or back of the device facing towards your body. Such accessories should not contain any metallic components. Body-worn accessories that do not meet these specifications may not ensure compliance with applicable SAR limits and their use should be avoided.

Important Note on Recoverable Data

Files and other data that have been deleted, cleared, removed, or erased from your device may still be recoverable by third-party data recovery software. Even a factory reset may not permanently erase all data from your phone, including personal information.

Introduction

The following topics describe the basics of using this guide and your new phone.

About the User Guide

Thank you for purchasing your new HTC phone. The following topics explain how best to use this guide to get the most out of your phone.

Before Using Your Phone

Read the Get Started guide and Important Information booklet that were packaged with your phone thoroughly for proper usage.

Accessible services may be limited by subscription contract conditions.

Descriptions in the User Guide

Note that most descriptions in this guide are based on your phone's setup at the time of purchase. Unless otherwise noted, instructions begin from the phone's home screen, which is displayed by tapping . Some operation descriptions may be simplified.

Screenshots and Key Labels

Screenshots and other illustrations in this user guide may appear differently on your phone. Key labels in the user guide are simplified for description purposes and differ from your phone's display.

Other Notations

In the user guide, the phone may be referred to either as "phone," "device," or "handset." A microSD™ or microSDHC™ card is referred to as an "SD Card" or a "memory card."

Access Instructions on Phone

These topics will help you find help on your new phone and will introduce the basics of using your phone's touchscreen if you are a new user.

Launch the Guide

A mobile user guide is available online and is easily accessible from the Apps screen.

- Tap  >  >  **HTC Mobile Guide.**

Using the Phone Guide

The mobile user guide contains all information found here. In addition, there is a search box where you can quickly look for information. Just enter what you want to look for and related topics will appear.

Check Basic Operations

To help you learn how to use your phone faster, check the following sections.

- [Set Up Your Phone](#)
- [Basic Operations](#)
- [Your Phone's Home Screen](#)

Screen Use for First-Time Users

These topics will get you up and running with using the phone's touchscreen.

- [Use the Touchscreen](#)
- [Onscreen Navigation Keys](#)

Set Up Your Phone

The following topics give you all the information you need to set up your phone and wireless service the first time.

Parts and Functions

These topics illustrate your phone's primary parts and key functions.

Note: Your phone's screens and apps layouts are subject to change. This user guide uses sample images only.

Phone Layout

The following illustration outlines your phone's primary external features and keys.



Front Panel

Part	Description
Earpiece	Lets you hear the caller and automated prompts.

Proximity sensor	<p>Detects how close an object is to the surface of the screen. This is typically used to detect when your face is pressed up against the screen, such as during a phone call.</p> <p>While talking on the phone, the sensor detects talk activity and turns off the screen to prevent accidental key taps.</p> <p>Note: If you want to use a case or screen protector, don't cover and block the proximity sensor. Purchase a case or screen protector designed for HTC Bolt.</p>
LED	Displays a phone notification, charging status, or alert.
Volume button	Allows you to adjust the ringtone or media volume or adjust the voice volume during a call.
Power/Lock button	Press quickly to turn off and lock the phone screen. Press and hold to turn the phone on or off or switch to airplane mode.
Recent apps	Tap to display your most recently used apps.
Home/Fingerprint scanner	<p>Tap to display the main home screen.</p> <p>This is also the fingerprint scanner that allows you to quickly wake up and unlock your phone with your fingerprint. You can register up to 5 fingerprints. See Fingerprint Scanner.</p>
Back	Tap to return to the previous screen.
Nano SIM card tray and eject hole	Holds the preinstalled Sprint 4G LTE™ nano SIM card. See SIM Card .
microSD card tray and eject hole	Allows installation of a microSD card for additional storage. The microSD card is sold separately. See SD Card .
Touchscreen	Displays all the information needed to operate your phone, such as the call status, the Contacts list, and the date and time. Also provides one-tap access to all of your features and applications.
Front camera	Takes selfie pictures and videos with greater detail and clarity.

Back Panel

Part	Description
Dual flash	Helps illuminate subjects in low-light environments when the camera is focusing and capturing a picture or video.
Rear camera	Captures quality photos and videos.
Speaker	Lets you hear the different ringtones and sounds. This speaker also lets you hear the caller's voice and automated prompts.
USB Type-C™ charger/ Accessory jack	Allows you to connect the phone with the AC power adapter using the USB cable or with the provided HTC BoomSound® Adaptive Audio earphones. (Items included in the phone package). Note: The HTC BoomSound Adaptive Audio earphones provided in the box can only be used with HTC Bolt and other compatible HTC phones supporting HTC BoomSound Adaptive Audio.
Microphone	Captures your voice during phone and conference calls.

CAUTION! Inserting an accessory into the incorrect jack may damage the phone.

Charge the Battery

Follow these instructions to charge your phone's battery using either the included AC adapter or via a USB connection on your computer.

Important:


Use only the adapter and the USB cable that came with your phone to charge the battery. When the battery power is too low, make sure to use the power adapter to charge, not the USB cable connection with your computer.

Notes:

- If the battery has been discharged for several days, you may need to charge HTC Bolt for several minutes before powering it on.
- The battery is built-in and non-removable. Do not attempt to remove the battery.
- As a safety precaution, the battery may stop charging to avoid overheating.
- When you're using the Internet and charging the battery, your phone may become warmer. This is normal.
- To conserve energy, unplug the power adapter from the electrical outlet after you finish charging.

Charge Using the AC Adapter

1. Plug one end of the USB cable into the AC adapter.
2. Plug the other end of the USB cable into the Charger/Accessory Jack on the bottom panel of your phone.

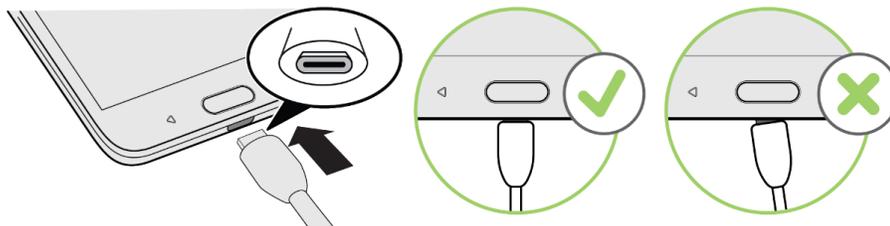

3. Plug the other end of the USB cable into the AC adapter.
4. Plug the AC adapter into an electrical outlet.
 - ❖ The indicator light illuminates when charging starts. The light turns green when the battery is fully charged. Fully charging a battery may take up to three hours.
5. After charging, disconnect the phone from the charger.
 - Unplug the AC adapter from the outlet, and remove the USB cable from the phone.

Charge Using a PC Connection

Before using a PC connection to charge your phone, ensure that the computer is turned on. Depending on the type of connection, your phone's battery may not charge.

1. Insert the small end of the USB cable into the Charger/Accessory jack on the bottom of your phone.
2. Insert the large end of the USB cable into an external USB port on your computer.
3. After charging, disconnect the USB cable from both the phone and the computer.

SIM Card

The SIM card is an IC card containing phone number and other customer information.

Handling a SIM Card

Keep the following in mind when handling a SIM card.


- You are responsible for any damage caused by inserting the SIM card in another-brand IC card reader, etc. Sprint is not responsible in such case.
- Always keep the IC chip clean.
- Wipe clean with a dry, soft cloth.

- Avoid applying labels. May damage SIM card.
- See instructions included with the SIM card for handling.
- The SIM card is the property of Sprint.
- The SIM card is replaceable (at cost) in case of loss/damage.
- Return the SIM card to Sprint when canceling subscription.
- Returned SIM cards are recycled for environmental purposes.
- Note that SIM card specifications and performance may change without notice.
- It is recommended that you keep a separate copy of information that is stored on the SIM card. Sprint is not responsible for damages from stored information that is lost.
- Always follow emergency procedures to suspend service if your SIM card or phone (SIM card inserted) is lost or stolen. For details, contact Customer Service.
- Always power off the phone before inserting/removing SIM card.

! Nano SIM Card

HTC Bolt uses a nano SIM card. The nano SIM card is preinstalled on HTC Bolt. If you need to remove or replace the card, refer to the following instructions.


Use a standard nano SIM card only. Inserting a modified card that is thicker than the standard nano SIM card may cause the card to not fit properly or damage the card slot.

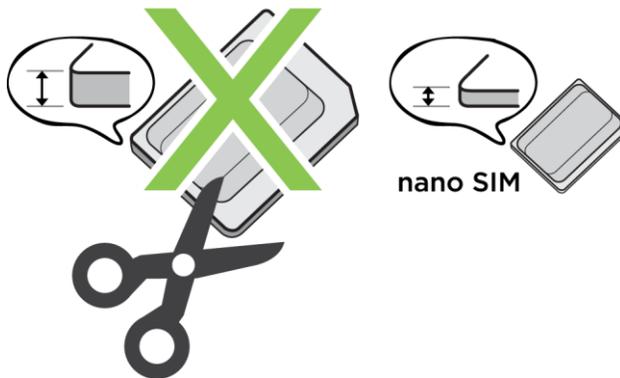

! Slots with Card Trays

There are trays inside the nano SIM and microSD slots that are used for inserting your cards.

When inserting the eject tool into the tray eject holes to remove the card trays, make sure not to press on the trays to avoid damaging the eject mechanism inside the slots.

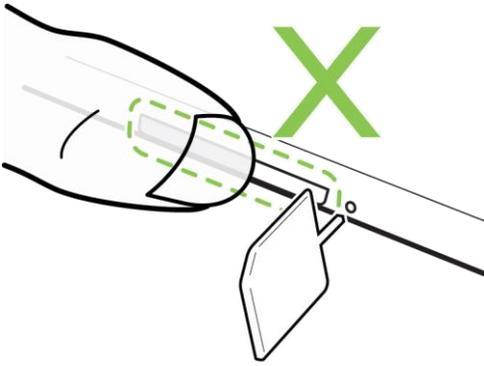


Also, if you want to use a protective case, make sure to buy a case that's designed for HTC Bolt and doesn't block the trays.

Insert SIM Card

The nano SIM card is preinstalled on HTC Bolt. If you need to remove or replace the card, refer to the following instructions.


Remember to power off your phone before inserting a SIM card.

1. Hold the phone face up.
2. Insert the tip of the tray eject tool (included in the box) into the tray eject hole next to the nano SIM card tray slot (lower slot).

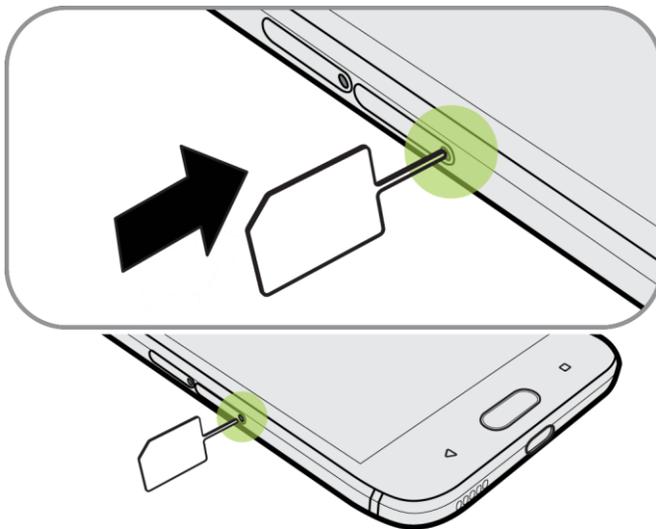


3. Push the tip all the way into the hole until the tray ejects, and then pull the tray out.

4. Place the nano SIM card—contacts facing down—into the tray.

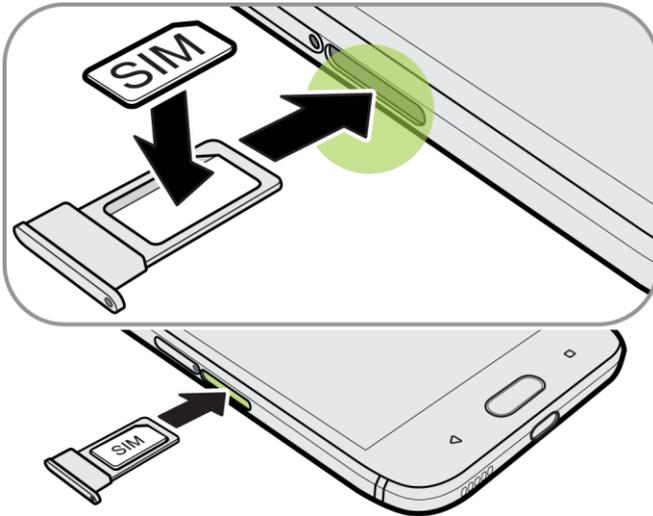

5. To reinsert the nano SIM card tray, center it first in the slot, and then slide it all the way in.
6. Press on the cover attached to the tray and make sure that the cover doesn't protrude from the side.

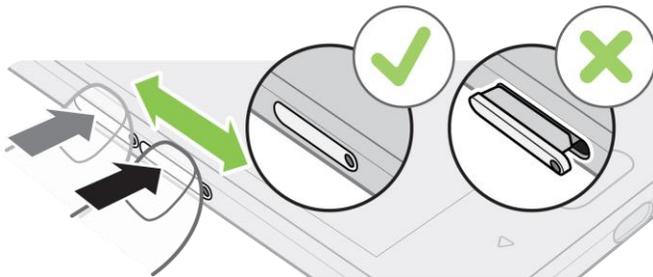

SD Card

Your phone supports the use of an optional SD card (not included) to expand its storage capacity. It supports cards up to 2 TB. Some cards may not operate properly with your phone.

! SD Card Cautions

Data: Information stored on the SD card can become lost or changed accidentally as a result of damage. It is recommended that you keep a separate copy of important data. Sprint is not responsible for damages from data that is lost or changed.

Reading/Writing Data: Never power off the phone while reading or writing data.


Battery Level: A low battery charge may prevent reading/writing to SD card.

Handling SD Card: Use/store SD cards away from the reach of infants. May cause choking if swallowed.


Insert SD Card

Follow these steps to insert an optional SD card (not included). Make sure to power your phone off before inserting or removing an SD card.


1. Hold the phone face up.
2. Insert the tip of the tray eject tool (included in the box) into the tray eject hole next to the microSD card tray slot (upper slot).

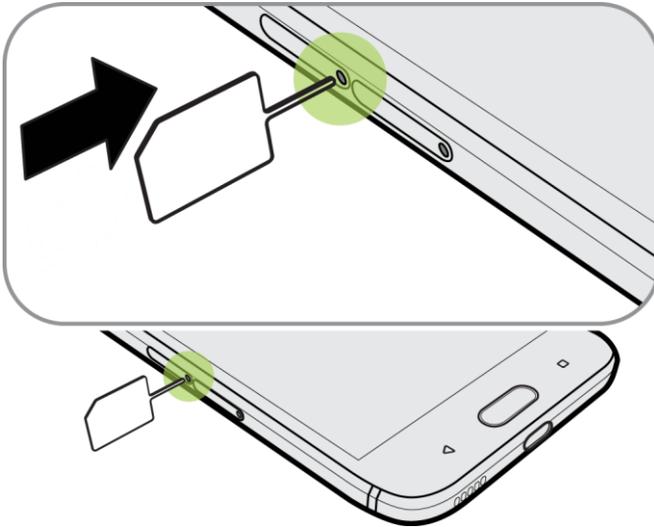

3. Pull the microSD card tray out, and place the SD card—contacts facing down—into the tray.

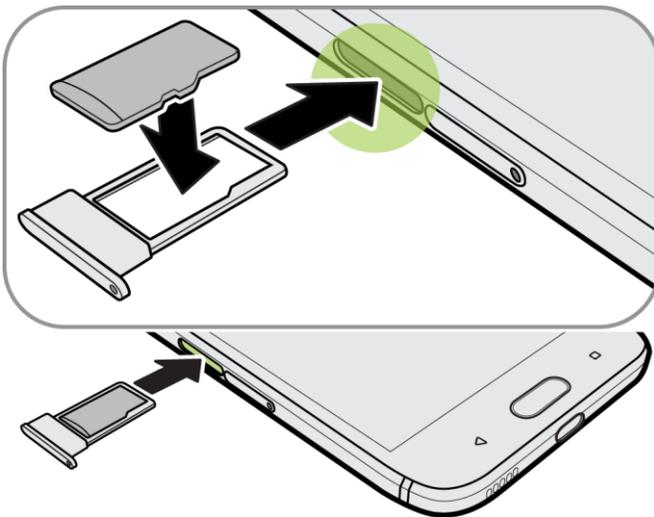

4. To reinsert the microSD card tray, center it first in the slot, and then slide it all the way in.
5. Press on the cover attached to the tray and make sure that the cover doesn't protrude from the side.

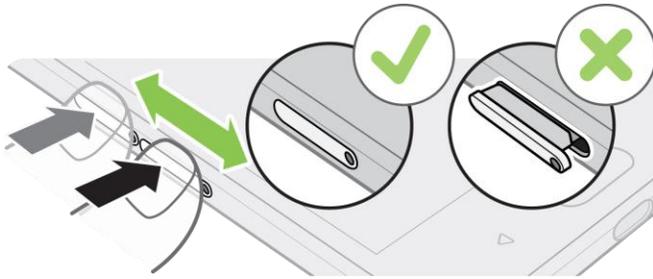

6. Turn on the phone.

- ❖ If it's the first time you inserted the SD card, you'll be prompted to set it up.

Unmount the SD Card

When you need to remove the SD card while the phone is on, unmount the SD card first to prevent corrupting or damaging the files in the SD card.

1. Tap > > **Settings**.
2. Tap **Storage**.
3. If the SD card appears under Removable storage, tap next to the card name, and then tap **Eject**.

– or –

If your SD card appears under Internal storage, tap the card name, and then tap > **Eject**.

Important: If the SD card is used as internal storage and there are apps that were moved to the card, you will not be able to open these apps after unmounting the card.

Format SD Card

When you want to change the storage setting of the SD card from removable storage to internal storage, you will be prompted to format it first.

Note: When you format or erase the SD card, the files CANNOT be retrieved. To help prevent the loss of important data, please check the contents before you erase the card.

Important: Formatting or erasing the SD card may not permanently erase all data from the card, including personal information.


1. Tap > > **Settings**.
2. Tap **Storage**.
3. Do one of the following:

- If the SD card appears under Removable storage, tap  next to the SD card name, and then tap **Format as internal** > **Erase & format** > **Format**. After format is completed, you can choose to move photos, files, and apps to the SD card.
- If your SD card appears under Internal storage, tap the SD card name, and then tap  > **Format as portable** > **Format**. After format is completed, tap **Done**.

Remove SD Card

Follow these instructions to remove an SD card. Always power the phone off before inserting or removing an SD card.

1. Hold the phone face up.
2. Fully insert the tray eject pin (included in the box) into the small hole next to the microSD card tray slot until the tray ejects.

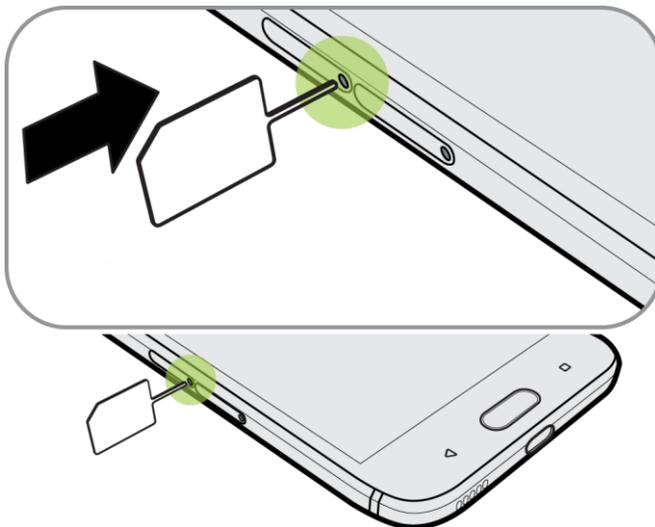


3. Gently pull the SD card out of the slot.
4. Replace the SD card and tray.
5. Press the tray cover firmly to make sure that there are no gaps or that the tray is not protruding.

Turn Your Phone On and Off

The instructions below explain how to turn your phone on and off.

Turn Your Phone On

- Press and hold the **Power/Lock** button on the right panel of the phone.

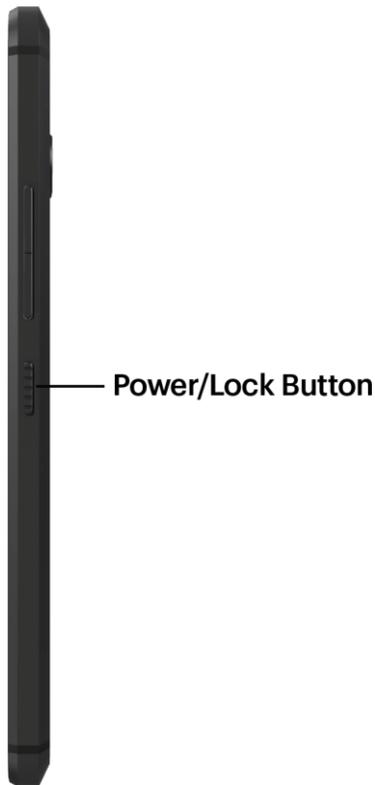


- ❖ Your phone will power on. Depending on the settings, you may see the lock screen.

You will feel or hear the phone vibrate when it has been turned on. The first time you turn on your phone, it will search for Sprint service, and begin the setup application.

- If your phone is not yet activated, see [Activate Your Phone](#) for more information.

Turn Your Phone Off

1. Press and hold the **Power/Lock** button to open the Phone options menu.

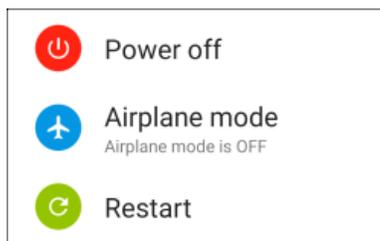

Note: When the screen is locked and you press the **Power/Lock** button it will only turn off the screen and not the phone. You will need to turn the screen on before you press and hold the **Power/Lock** button to turn the phone off. See [Lock and Unlock Your Screen](#) for details.

2. Tap **Power off** to turn the phone off.

❖ Your phone will power off.

Restart Your Phone

Restarting the phone will close all running apps and will clear all temporary files in the phone's memory. Make sure to save your work before restarting the phone.

1. Press and hold the **Power/Lock** button for about two seconds.
2. On the Phone options menu, tap **Restart**.
3. In the Restart phone confirmation box, tap **Restart**.

Note: If the phone or touchscreen becomes unresponsive, press and hold the **Power/Lock** and **Volume** down buttons for at least 12 seconds to restart the phone.

Use the Touchscreen

Your phone's touchscreen lets you control actions through a variety of touch gestures.

Important: When the **TalkBack** option in the Accessibility settings is turned on and the Explore by touch setting is selected, the regular touch gestures are replaced by the TalkBack gestures. For details, see [Accessibility Settings](#).

Tap or Touch

When you want to type using the onscreen keyboard, select items onscreen such as application and settings icons, or press onscreen buttons, simply tap or touch them with your finger.



Touch and Hold

To open the available options for an item (for example, a contact or link in a Web page), touch and hold the item.



Swipe or Slide

Quickly swipe your finger vertically or horizontally across the screen to go to other widget panels, scroll through documents, and more.



Drag

To drag, touch and hold your finger with some pressure before you start to drag. While dragging, do not release your finger until you have reached the target position.



Flick

Flicking the screen is similar to swiping, except that you need to swipe your finger in light, quick strokes. This finger gesture is always in a vertical direction, such as when flicking the contacts or message list.



Touch and Flick

On the Home screen, you can easily move a widget or icon from one screen to another. Touch and hold the widget or icon with one finger, and flick the screen to the new location with another finger.



Pinch and Spread

"Pinch" the screen using your thumb and forefinger to zoom out or "spread" the screen to zoom in when viewing a picture or a Web page. (Move fingers inward to zoom out and outward to zoom in.)




Slide two fingers together to zoom out of the picture or text.




Two-finger Swipe

Swipe down from the status bar with two fingers to open Quick Settings.

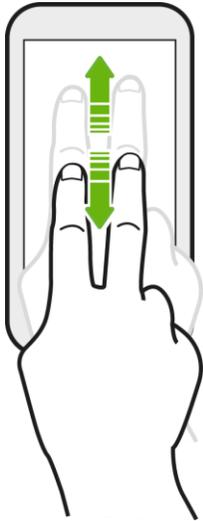

Three-finger Gesture

- Swipe up using three fingers to share content such as photos, videos, and music from your phone. You can also share streaming media from apps such as YouTube™.
- Swipe down to disconnect from the device.

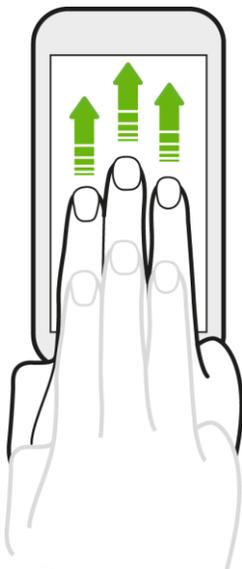

Notes:

- Media gesture is turned on in Settings by default, which makes the three-finger gesture work only when sharing content or using HTC apps.

- The 3-finger gesture may not be available when TalkBack gestures are enabled. For details, see [Navigate Your Phone with TalkBack](#).

Three-finger Tap

Tap the screen with three fingers to activate a command on an app that supports this gesture.



Activate Your Phone

Follow the instructions below to activate your phone if it has not already been activated. Depending on your account or how and where you purchased your phone, it may be ready to use or you may need to activate it on your Sprint account.

- If you purchased your phone at a Sprint Store, it is probably activated and ready to use.
- If you received your phone in the mail and it is for a new Sprint account or a new line of service, it is designed to activate automatically.
 - When you turn the phone on for the first time, you should see a **Hands Free Activation** screen, which may be followed by a **PRL Update** screen and a **Firmware Update** screen. Follow the onscreen instructions to continue.
- If you received your phone in the mail and you are activating a new phone for an existing number on your account (you're swapping phones), you can activate on your computer online or directly on your phone.
 - **Activate on your computer:**
 - Go to sprint.com/activate and complete the online instructions to activate your phone.
 - **Activate on your phone:**
 - Turn on your new phone. (Make sure the old one is turned off.) Your phone will automatically attempt Hands-Free Activation.

- Tap **Activate** to override auto-activation and start the manual activation wizard.
- Follow the onscreen prompts to complete the activation process.

To confirm activation, make a phone call. If your phone is still not activated, visit sprint.com/support for assistance. If you do not have access to the Internet, call Sprint Customer Service at **1-888-211-4727** from another phone.

Tip: Do not press the **Power/Lock** button while the phone is being activated. Pressing the **Power/Lock** button cancels the activation process.

Note: If you are having any difficulty with activation, visit sprint.com/support.

Complete the Setup Screens

The setup screens help you set up certain features and preferences on your phone. Once your phone has been turned on, you will see a Welcome message. You can then complete the setup process.

Note: You may be able to complete the setup screens before your phone has been activated on your account.

1. From the Welcome screen, select a language and tap **Start** to get started.



- To skip any section, tap **Next** or **Skip**.

Note: If you are visually impaired or hard of hearing, touch and hold the screen with two fingers to enable TalkBack. Tap **Accessibility settings** to change accessibility options.

2. Follow the onscreen instructions to complete each section. For each topic, you will have the option to skip it and continue to the next screen.

- **Terms of use** – Read any applicable End User License Agreements or Terms of use for using your phone, and tap **Next** to continue.
- **Set up Internet access** – Select **Mobile data** or select a Wi-Fi® network to connect to. For secured Wi-Fi networks, you will need to enter a password. See [Turn Wi-Fi On and Connect to a Wireless Network](#).
- **Hands Free Activation** – See [Activate Your Phone](#).
- **Add your account** – Enter your Google Account and password. If you don't have a Google Account, tap **Or create a new account**. See [Add a Gmail Account](#) for details. You can also read Google's backup and location services.

Note: You do not need to sign up for a Google Account to use your phone. However, to download apps from the Google Play™ Store or chat in Google Hangouts™, you must link your phone to a Google Account.

- **Google services** – Read information about Google's location services and ways to improve your Android experience.
- **Which device?** – If you have backed up your old phone's data to your Google Account, you can easily restore that backup on your new phone using Android Backup Service.
 - If you want to restore a previous device backup with all your apps, tap the device from the list and tap **Restore**. If you want to restore a previous device backup with certain apps, tap  next to **Restore all apps**, select which apps you want restored, and then tap **Restore**.
 - If you don't want to restore any backup, scroll down the screen and tap **Don't restore**.
- **Protect your phone** – Register a fingerprint to help secure your phone. Tap **Skip for now** to do this later in **Settings > Fingerprint scanner**. See [Fingerprint Scanner](#) for details.

3. Tap **Finish**.

- ❖ Your phone is now set up for use. If you skipped any part of the setup, you can access additional options through the Apps screen or through Settings.

Note: Some features that need to connect to the Internet such as location-based services and auto-sync of your online accounts may incur extra data fees. To avoid incurring data fees, disable these features under Settings.

Transfer Content to Your New Phone

You can easily transfer content, contacts, messages, calendar events, music, photos, videos, and more from other phones or your computer to your new phone using the HTC Transfer Tool, Bluetooth®, or direct USB connection.


Transfer Content from an Android Phone

On your old Android phone, download the HTC Transfer Tool and use it to transfer your content to your new HTC phone.

The types of locally stored content on your old phone that the HTC Transfer Tool can transfer include contacts, messages, calendar events, music, photos, videos, and some settings. More types of data such as call histories, email accounts, and some HTC app settings can be transferred from HTC phones that have HTC Sense 5.5 or higher.

Note: You need Android version 2.2 or later to use the HTC Transfer Tool on your old phone.

1. Tap  >  >  **Settings** > **Get content from another phone**.
2. Choose whether to transfer from an old HTC Android phone or other Android phone.
3. On the Get content from another phone screen, tap **Next**.
4. Follow the steps shown on your new phone to download and install the HTC Transfer Tool from Google Play to your old phone, install it, and open the tool.
5. When you see a PIN on your old phone, make sure the same PIN also appears on your new phone before you continue.

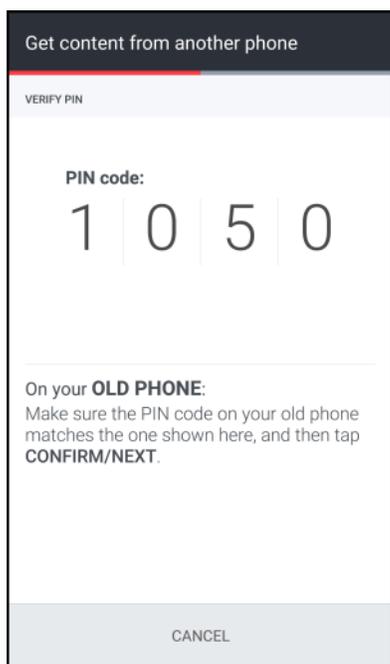

Note: If the PIN code doesn't appear, tap **Retry** on your old phone. If it still won't appear, this may mean that your old phone is unable to connect to HTC Bolt. When this happens, try another transfer method.

6. Tap **Confirm** on your old phone.
7. On your old phone, choose the types of content you want to transfer, tap **Transfer**, and then tap **Yes**.
8. Wait for the transfer to finish.
9. Tap **Done** on both phones.

Transfer Content from an iPhone

If you have an iPhone®, there are easy ways to transfer your contacts, messages, and other content to your HTC Bolt.

- Back up and restore iPhone content through iCloud®. For details, see [Transfer iPhone Content Through iCloud](#).
- Back up iPhone content using iTunes® on your computer, and then use HTC Sync Manager to transfer the content to HTC Bolt. For details, see [HTC Sync Manager](#).

Transfer iPhone Content Through iCloud

If you have an iCloud account, sync iPhone content to your iCloud storage, and then transfer the content to HTC Bolt. You can transfer the following types of content from iCloud: contacts, bookmarks, text messages, messages from iMessage®, calendar events, and photos.

1. Tap  >  >  **Settings** > **Get content from another phone**.
2. Tap **iPhone** > **Import from iCloud backup**.
3. Follow the steps shown onscreen to back up your iPhone content to your iCloud storage, and then tap **Sign in**.
4. Choose the iPhone backup that you want to transfer to HTC Bolt, and then tap **Next**.
5. Choose the types of content you want to transfer, and then tap **Import**.
6. Wait for the transfer to finish, and then tap **Done**.

Note: Only some contact details can be transferred, such as the contact name, photo, postal address, email address, birthdate, anniversary date, and notes.

Transfer Content Between Your Phone and Computer

There are two ways you can transfer content to or from your computer.

- **Connect your phone to your computer.** Your computer will recognize it just like any removable USB drive, and you can copy your media between them.
- **Download and use the HTC Sync Manager software on your computer.** You can set it up to automatically get music, photos, and videos off your phone to your computer. You can also sync playlists from your computer to the phone.

If you have an iPhone, you can even connect it and transfer the camera roll (photos and videos) to your computer. Then reconnect your phone and copy them over. For details, see [HTC Sync Manager](#).

- Use cloud storage services to put your media in one place so you can manage them anywhere—on your computer, HTC Bolt, and other mobile devices.

Ways of Transferring Contacts and Other Content into Your Phone

There are different ways you can individually add contacts and other content to your new HTC phone.

- **Sync with your computer.** Use HTC Sync Manager to sync contacts, documents, playlists, and more between your phone and a computer running a Windows® or Mac OS X® operating system. You can also use it to transfer iTunes backup that contains contacts, messages, and other content from an iPhone to your computer, and then to your HTC phone. For details, see [HTC Sync Manager](#).
- **Google Account.** Google contacts are imported to your phone after you sign in to your Google Account. You can also create more Google contacts right from your phone.
- **Social network accounts.** Log in to your favorite social networks to sync contact information from them.
- **Microsoft® Exchange ActiveSync®.** Your phone syncs your work contacts from the Microsoft Exchange ActiveSync Server in your workplace.
- **Outlook.com account.** Sync personal contacts from your Microsoft Outlook.com account.
- **Phone contacts.** You can create contacts locally on your phone, if you don't prefer to store them on your online accounts.

Water and Dust Resistant

HTC Bolt is water and dust resistant and has an IP57 rating as defined in the International Standard IEC 60529. With the nano SIM and microSD slot cover closed tightly, this phone is water resistant if it is briefly submerged by accident in fresh water less than 1 meter (3.28 feet) deep and no longer than 30 minutes at room temperature.

HTC Bolt must not be exposed to non-fresh water, high water pressure, strong or fast-moving water, or sand since these may cause overheating, electric shock, or damage to the phone. Do not attempt to charge or otherwise use the USB port when HTC Bolt is wet. Normal wear and tear may decrease the water and dust resistance over time.

Warranty will be void if the phone is not used in accordance with the instructions and precautions addressed in this user guide, including, but not limited to, using the phone in environments or situations that exceed the limitations of the IP57 rating. For usage precautions and tips on care and maintenance, see [Care and Maintenance Tips](#) and [Cleaning and Drying](#). Also make sure to read the Important Information Booklet that comes with the phone.

Care and Maintenance Tips

Follow these tips and precautions to help maintain water and dust resistance for your phone.

- Never attempt to insert or remove the nano SIM and microSD cards with gloves, wet hands, or when the phone is wet.

- Before closing the card slot covers, wipe off every drop of water or dirt with a clean, dry cloth. Also make sure that no hairs, fibers, or small particles are caught between the covers and the slot openings to prevent water from seeping through the gaps and entering the phone.
- Parts that maintain water resistance such as the card slot cover may degrade over time. If these parts degrade or get damaged, the phone will no longer be water resistant. If this happens, contact your retail store or mobile operator. You may be charged for parts replacement.
- Do not intentionally submerge HTC Bolt. If the phone accidentally gets immersed in water, do not press the **Power/Lock** and **Volume** button and do not operate the phone.
- Do not expose the phone to fast or strong-moving water such as shower spray, running taps or faucets, waterfalls, or ocean waves.
- Do not expose the phone to or let the USB port come in contact with the following:
 - Water containing soap, detergent, or shower gel
 - Sea water, swimming pools, spas, hot water, and hot springs
 - Any liquid besides tap water such as alcohol, juices, and condiments
 - Sand



- If the phone is exposed to fresh water, make sure to dry it thoroughly. To avoid damaging the phone, do not charge when contaminants are present or the USB port is not completely dry. In these circumstances, do not connect any external device.
- Never use a hair dryer to dry wet parts of the phone.
- The power adapter and accessories are not water resistant. Never use them in wet areas such as in the bathroom or kitchen since contact with water may cause malfunction, electric shock, or other hazards.
- Avoid leaving the phone in humid places such as the bathroom or kitchen for too long since it is not moisture-proof.

Cleaning and Drying

If HTC Bolt has had contact with salt water, liquid chemicals, dust, or other contaminants, immediately rinse the phone. When the phone is wet, make sure to dry it thoroughly.

To avoid damaging HTC Bolt, don't charge the phone when contaminants are present or the USB port is not completely dry. In these circumstances, do not connect any external device.

The sound volume of the earpiece, speakers, and microphone may be less audible if these parts are not dried well.

Rinsing

- Before rinsing, make sure the nano SIM and microSD slot covers are closed tightly. See [SIM Card](#) and [SD Card](#) for details.
- Rinse the phone using fresh water. Rinse by hand only. Don't use a brush or sponge.
- While rinsing, do not press on the card slot covers to avoid having gaps around the covers which may allow water to seep through the gaps.

Drying

- Gently wipe off the water from the phone with a clean, dry cloth. Don't use cotton swabs to wipe the earpiece, speakers, microphone, and connection port.
- The display may not respond accurately to touch gestures when it's wet. For the touch screen and lenses, wipe with a soft dry cloth such as a microfiber cloth that will not scratch the surface.
- Leave the phone at room temperature for 3 hours or so to let it dry completely. If buttons and any connection port such as the USB port are still wet, make sure to let them dry completely before you use the phone.
- If condensation forms inside the display such as when there's a drastic change in temperature, place the phone at room temperature until condensation disappears.

Basic Operations

The following topics outline basic features and operations of your phone.

Basics

The following topics offer an overview of your phone's basic operations.

Home Screen and Applications (Apps) List

Most of your phone's operations originate from the home screen or the apps list.

1. From any screen, tap  to display the home screen.



- Swipe left and you'll discover widget panels for adding your favorite widgets, apps, and more so they're just a tap away. And if you need more room for your stuff, you can add more widget panels. For details, see [Customize the Home Screen](#).
- Swipe right for HTC BlinkFeed® to show posts from your social networks, headlines from your favorite news media, and more. For details, see [HTC BlinkFeed - Your Dynamic Home Screen](#).
- You can change the apps on the launch bar at the bottom of the Home screen. See [Work with Stickers, Widgets and App Shortcuts](#).
- You can add an onscreen navigation key. See [Onscreen Navigation Keys](#) for details.

2. Tap  to see all apps installed on your phone.

Tip: While you're in another screen or app, tap  to return to the last Home screen you visited.

Onscreen Navigation Keys

Your phone has onscreen navigation keys at the bottom of the screen which rotate when you change the orientation. The onscreen navigation keys do not show up when the screen is off, when you're on the Camera viewfinder screen, or when you chose to hide it.

Standard Navigation Keys

Key	Description
Back 	Go to the previous screen.
Home 	Go to the Home screen. Touch and hold to launch Now on Tap. See Now on Tap for details.
Recent apps 	Show the thumbnails of the most recently used apps and Google Chrome tabs.

Phone Settings Menu

You can customize your phone's settings and options through the Settings menu.

 
1. Open Settings from the Apps screen or notification panel.
 - Swipe down from the status bar, and then tap .
 - Tap  >  >  **Settings**.
2. Here are some of the basic settings you can change:
 - Tap the On/Off switch next to an item such as **Wi-Fi** to turn it on or off. Tap the item itself to configure its settings.
 - Tap **Sound & notification** to set a ringtone, choose a sound profile, and configure incoming call sound settings.
 - Tap **Personalize** to change the wallpaper, add widgets and shortcuts to the widget panel, and more.
 - Tap **Accounts & sync** to add and sign in to your different accounts, such as email, social networks, and more.
 - Tap **Security** to help secure your phone, for example with a screen lock.

For more information, see [Basic Settings](#).

Using Quick Settings

In the Quick Settings panel, easily turn settings such as Wi-Fi and Bluetooth on or off.

1. Swipe down from the top of the screen to open the notification panel.
 - ❖ Right below the Settings button, you'll see the first six Quick Settings tiles.




2. To see all of the Quick Settings tiles:
 - With two fingers, swipe down from the status bar.



– or –

- Swipe down twice from the status bar.

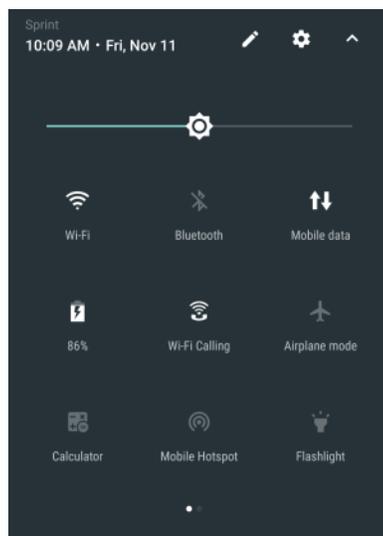

3. Tap a tile to turn a setting on or off, display the status of a setting, or adjust it.

Customize Quick Settings

You can remove, replace, or rearrange the tiles in Quick Settings.

1. With two fingers, swipe down from the top of the screen to open Quick Settings.
2. Tap  and do one of the following:
 - Touch and hold a tile, and then drag it to your desired position.
 - Touch and hold a tile, and then drag it down under the Drag to add tiles section to hide it from the Quick Settings panel.
 - Under the Drag to add tiles section, drag a tile up to show it in the Quick Settings panel.
3. Tap .

Note: There is a limit to the number of tiles that can be shown in the first panel of Quick Settings. You may need to swipe left on the Quick Settings panel to see more Quick Settings tiles.


Capture Screenshots

Capture the phone screen to show off your high game score, write a blog post about your phone's features, or post a status update about a song you're playing.

1. Press and hold the **Power/Lock** button and the **Volume** down button at the same time.
2. When you see the icon  in the status bar, open the notification panel.
3. Slide two fingers apart on the Screenshot captured notification.
4. Tap **Share**.

Portrait and Landscape Screen Orientation

The default orientation for your phone's screen is portrait (vertical), but many apps will change to landscape orientation (widescreen) when you rotate the phone sideways.

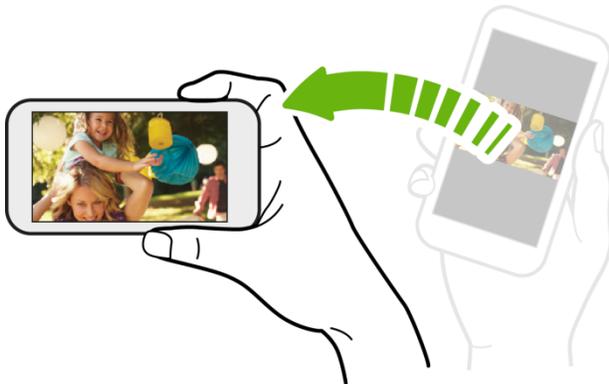

Note: Not all screens will adjust for landscape orientation.

Turn Screen Rotation On or Off

1. Swipe down from the status bar with two fingers to open the Quick Settings panel.
2. Tap **Auto rotate** to turn the option on or off.

Note: You can also set the rotation option from the main settings menu. From home, tap  >  **Settings > Display, gestures & buttons**, and then select or clear the **Auto rotate screen** option.

Applications

The following topics describe how to access the applications (apps) list and launch apps on your phone.

Apps List

The Apps screen includes any apps you download and install on your phone. The following table outlines the primary apps that have been preinstalled on your phone.

App	Function/Service
 1Weather	Check out the latest in weather news and forecast.
 Amazon	Shop the Internet using the Amazon app.
 Amazon Assistant	Works with the browser to show the best results, deals, and offers from Amazon.
 Amazon Kindle	Shop and read books right on your phone.
 Amazon Music	Shop and listen to music using this app.
 Amazon Video	Watch movies and videos with your Amazon account.
 App Spotlight	Gain access to hundreds of top paid apps using a single subscription.
 Boost+	Optimize your phone's performance, maximize your storage capacity, and add a level of privacy to some of your apps.
 Calculator	Perform basic and advanced mathematical operations. See Calculator .
 Calendar	View, create and send events. See Calendar .
 Caller ID	See who's calling before you answer calls with the Caller ID app.

 Camera	Take photos and capture videos. See Camera and Video .
 Chrome	Browse the Internet. See Chrome Browser .
 Clock	Check the time, set an alarm, or use the World Clock, Stopwatch and Timer. See Clock .
 Docs	Create, edit, and share documents.
 Downloads	View all your downloaded files here.
 Drive	Manage your Google Drive online storage. See Google Drive .
 Facebook	Check what's new with your social network. See Facebook .
 Flashlight	Use your phone's dual flash as a handy flashlight.
 Gmail	Create, send, and receive emails. See Gmail .
 Google	Open Google Search or Google Now. See Perform Searches on the Web and Your Phone and Get Instant Information with Google Now .
 Hangouts	Send SMS, MMS, or start a video chat. See Hangouts .
 Help	Find useful content on how to use your phone, view troubleshooting information, and more. See HTC Help .
 HTC Mobile Guide	View your phone's online user guide.
 Instagram	Edit and share your favorite photos with this photo-sharing app.
 Lookout	Help protect your phone from viruses and other threats.
 Maps	View maps and get detailed turn-by-turn navigation to your destination. See Google Maps .
 Messenger	Chat with your Facebook buddies with this app.
 Messenger	Create and send text and multimedia messages. See Text and Multimedia Messaging .

 News Republic	Find out the latest headlines in news, entertainment, sports, and more.
 People	Add, manage, and get in touch with people that matter to you most. See Contacts .
 Phone	Call friends, check out your call history, manage your contacts list, and more. See Phone Calls and Voicemail .
 Photos	View and edit photos and videos you've captured using the phone's camera or those you've stored online.
 Play Movies & TV	Search, buy, and watch movies and shows on your phone.
 Play Music	Search, buy, and listen to music on your phone.
 Play Store	Search, buy, and install apps to your phone. See Google Play Store .
 Prime Photos	Sign in to your Amazon Cloud Drive account and start storing photos and videos to the cloud.
 Record	Track your activities, sleep, and workouts by connecting your fitness device to your phone.
 Settings	Change your phone settings. See Basic Settings .
 Sprint Family Locator	Locate your family member's whereabouts with this essential app.
 Sprint Fun & Games	Search, download, and play game apps on your phone.
 Sprint Music Plus	Search, download, and listen to music tracks on your phone. See Sprint Music Plus .
 Sprint TV & Movies	Search, download, and watch movies and shows on your phone.
 Sprint Zone	Manage your Sprint account from your phone. See Sprint Zone .
 Themes	Personalize your phone with themes. See Themes .
 Voice Recorder	Record and share your voice or create a voice memo. See Voice Recorder .

 Voice Search	Search the Web using your voice. See Search the Web with Your Voice .
 Voicemail	Check and read your voicemail messages. See Voicemail .
 Weather	Check the weather in your location and in other cities around the world. See Weather .
 Wi-Fi Calling	Make and receive calls over Wi-Fi. See Wi-Fi Calling .
 YouTube	Watch or upload videos online. See YouTube .

Note: Available apps are subject to change without prior notice.

Launch an App

There are several options for opening an app from the Home screen.

- Tap an app on the launch bar at the bottom of the Home screen.
- Tap  to go to the Apps screen, and then tap the app you want to use.
- On the Apps screen, tap , then enter the name of the app you're looking for.

Open an App or Folder from the Lock Screen

- On the lock screen, drag an app or folder icon up to unlock the screen and directly go to the app or folder.

If you've set up a screen lock, you'll be asked to provide your credentials first before your phone opens the app or folder.

Tip: The shortcuts on the lock screen are the same ones on your Home screen's launch bar. To change the lock screen shortcuts, you'll have to replace the apps or folders on the launch bar.

Switch Between Recently Opened Apps

When you're multitasking and using different apps on your phone or opened multiple Web pages from the Web browser, you can easily switch between the apps or Web pages you've recently opened.

- Tap  to see recently-opened apps.
 - To switch back to an app, just tap it.
 - To remove an app from the list, drag it left or right.
 - To clear the recent apps list, tap **Clear all**.

Refresh Content of an App

In some apps, you can easily refresh content that's synced or downloaded from the Web with a simple finger gesture.

1. While viewing content such as weather or Google Now, scroll to the top of the screen.
2. Pull down the screen with your finger, and then release to refresh.

Arrange Apps on the Apps Screen

Personalize the Apps screen to your liking. You can rearrange the apps and change the layout.

1. Tap  > .
2. Tap  and then choose how to arrange apps, such as alphabetically. If you want to group apps into folders or rearrange them, select **Custom**.

Move Apps and Folders

1. Tap  > .
2. Tap  > **Custom**.
3. Tap  > **Rearrange apps**.
4. Touch and hold an app or folder, and then do one of the following:
 - Drag the app to another position on the same page. Wait until you see the occupying icon move away before releasing your finger.
 - Drag the app to the  or  arrow to move it to another page.
5. When you're done moving apps and folders, tap .

Group Apps into Folders

1. Tap  > .
2. Tap  > **Custom**.
3. Tap  > **Rearrange apps**.
4. Touch and hold an app, and then drag it over to another app to automatically create a folder.
5. To add more apps, drag each app over to the folder.
6. To name the folder, open the folder, tap its title bar, and then enter a folder name.

7. When you're done grouping apps and folders, tap ✓.

Remove Apps from a Folder

1. Tap  > .
2. Tap  > **Custom**.
3. Tap  > **Rearrange apps**.
4. Tap the folder to open it.
5. Touch and hold an app, and then drag it out to the Apps screen. Wait until you see the occupying icon move away before releasing your finger.
6. When you're done removing apps, tap ✓.

Hide or Show Apps on the Apps Screen

1. Tap  > .
2. Tap  > **Show/Hide apps**.
3. Select the apps you want to hide, or clear their check boxes to unhide them.
4. Tap **Done**.

Phone Number

Follow the instructions below to display your phone's wireless phone number.

1. Tap  >  >  **Settings**.
2. Tap **About** > **Phone identity**.
 - ❖ You will see the number listed under **Phone number**.

Silent Mode

Silent mode sets your phone's ringtone, operation sounds, notifications, etc., not to sound to avoid disturbing others around you.

Note: Camera shutter, video start/stop tones, and certain other sounds may still be active during silent mode.

To set to silent mode:

1. Tap  >  >  **Settings**.
2. Tap **Sound & notification** > **Sound profile**.

3. Select **Silent**.

Tip: You can also set the phone to silent mode using Quick Settings. See [Using Quick Settings](#) for details.

To restore the sound to normal mode:

1. Tap  >  >  **Settings**.
 2. Tap **Sound & notification** > **Sound profile**.
 3. Select **Normal**.
- ❖ Your phone's sound settings are now restored.

Tip: You can also restore the phone sound using Quick Settings. See [Using Quick Settings](#) for details.

Airplane Mode

When you enable Airplane (flight) mode, all wireless radios on your phone are turned off, including the call function, data services, Bluetooth, and Wi-Fi. You can still use many of your phone's features, such as Camera when you are on an airplane or in any other area where making or receiving calls or data is prohibited.

When you disable Airplane mode, the call function is turned back on and the previous state of Bluetooth and Wi-Fi is restored.

Notes:

- You can manually turn Bluetooth and Wi-Fi back on after enabling Airplane mode.
- If USB tethering is turned on, enabling Airplane mode turns it off. You need to manually turn USB tethering on after you disable Airplane mode.
- To turn Airplane mode on or off:
 - Press and hold the **Power/Lock** button, and then tap **Airplane mode**.
 - or –
 - Swipe down from the status bar to open Quick Settings and then tap .

When enabled, the Airplane mode icon  is displayed in the status bar.

Working with Text


Enter, select, edit, and share text from apps that allow text input.

Edit Text

You can select and copy text, and then paste or share it.

Select, Copy, and Paste Text

1. Touch and hold on a word.
2. Drag the start and end anchors to highlight the surrounding text you want to select.

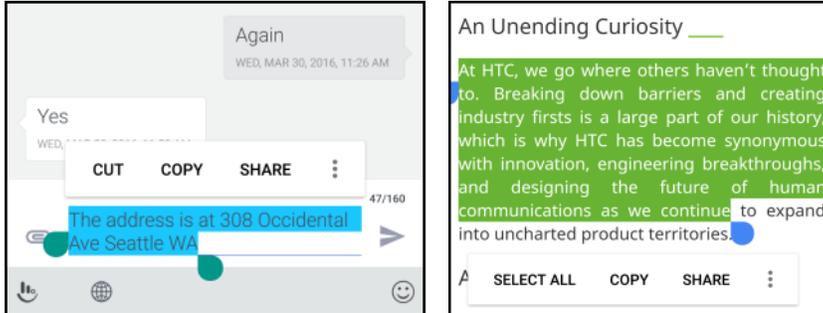

3. After you have selected the text you want to copy, tap **Copy** or . The selected text is then copied to the clipboard.
4. In a text entry field (for example while composing an email), touch and hold at the point where you want to paste the text.
5. Tap  or **Paste**.


Tip: To copy the address of a link on a webpage, touch and hold the link, and then tap **Copy link address**.

Share Text

1. After you have selected the text you want to share, tap **Share** or .
2. Choose where to paste and share the selected text, such as in an email message or social network status update.

Enter Text by Typing

The onscreen keyboard becomes available when you tap a text field in an app. Enter letters and numbers, change the keyboard layout or language, and more.

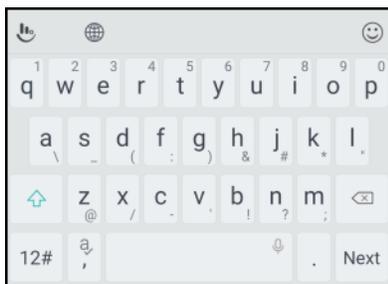

- Tap the keys on the onscreen keyboard to enter letters and numbers, as well as punctuation marks and symbols.


- Tap  to enter an uppercase letter. Tap  twice to turn on caps lock.
- Touch and hold keys with gray characters at the top to enter numbers, symbols, or accented letters. Some keys have multiple characters or accents associated with them.
- To delete your text entry one letter at a time, tap . To quickly delete words, touch and hold .
- Tap  to show number and symbol keys. Tap  to return to the main keyboard.



- Tap  to choose from a wide selection of emojis.
- Tap  to check out more features, options, and settings. You can resize the keyboard space, change the layout and design, download dictionaries, and more.
- Tap  to close the onscreen keyboard.

Enter Text with Word Prediction

The onscreen keyboard has predictive text to help you type quickly and accurately. Predictive text input is enabled by default, and word suggestions are displayed as you type.

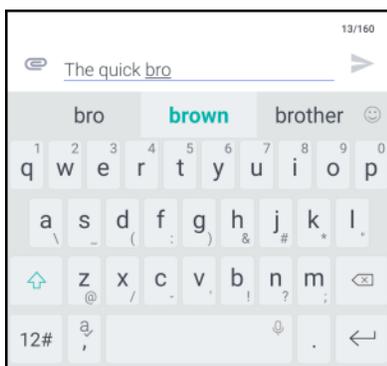

To enter a word in predictive mode, do any of the following:

- Tap the space bar to insert the highlighted word in the suggestion list.
- Tap a word from the suggestion list.

To turn word prediction on or off:

- Touch and hold  on the keyboard, and then tap the **Prediction** switch to turn word prediction on or off.

Enter Text by Voice

Try speaking the words to enter them in most text fields that let you use the touch input keyboard.

1. Tap an area where you want to enter text.
2. On the onscreen keyboard, touch and hold .
3. When you see the microphone image, speak out the words you want to type.

Tip: To set the voice input language, tap  > **Languages**. You can choose one or more languages. Available languages depend on the voice input languages supported by Google.

4. If a word doesn't match what you've spoken and it's underlined, tap the underlined word to delete it or to see more choices.
5. Enter punctuation marks by saying the name (for example, say "comma").

Adjust the Keyboard Settings

You can change the keyboard language and layout based on your preference.

Enabling Smart Keyboard Options

Turn on the keyboard's advanced features to help you type faster, such as contextual prediction, auto-correction, and more.

1. Tap  >  >  **Settings**.
2. Tap **Language & keyboard**.
3. Tap **Virtual keyboard > TouchPal - HTC Sense Version > Smart input**.
4. Select the options to enable.

Change the Keyboard Language

If multiple keyboard languages are available on your phone, you can choose which languages to enable in the onscreen keyboard.

1. Tap  >  >  **Settings**.
2. Tap **Language & keyboard > Languages > Add a language**.
3. Choose the languages you want.
4. To change the keyboard language, do any of the following while entering text:

- Swipe the space bar key () left or right.
- Tap  and then choose the language you want to use.

Change the Keyboard Layout

You can change the keyboard layout depending on your typing preference.

1. While entering text, tap .
2. Under the current keyboard language, tap the keyboard layout you want to use. Depending on the selected language, you can select **Phonepad**, **Full**, or **T+**.

Typing Faster and More Accurate

The onscreen keyboard of your phone is highly customizable. You can modify its settings and options to enhance your typing experience. Here are some tips that you could try.


Turn On Contextual Prediction

1. Tap  >  >  **Settings**.
2. Tap **Language & keyboard**.
3. Tap **Virtual keyboard > TouchPal - HTC Sense Version > Smart input**.
4. Select **Contextual prediction**.
 - ❖ This option enables next word prediction and will also allow the keyboard to learn from the usual word patterns you type for better word suggestions.

Switch to Landscape Mode

1. With two fingers, swipe down from the status bar and check if **Auto rotate** is turned on.
2. Open the app you need, and then tap a text field to show the keyboard.
3. Turn your phone sideways to bring up a bigger keyboard.

4. You can then tap  > **Split**.

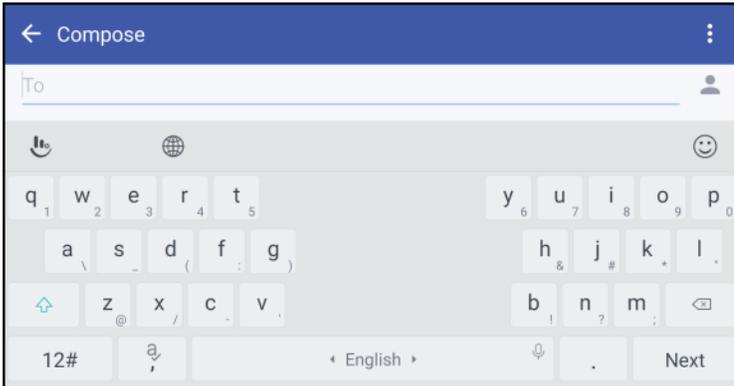

5. To return to the normal keyboard, tap  > **Normal**.


Resize or Reposition the Keyboard

1. Open the app you need, and then tap a text field to show the keyboard.
2. Tap , and then tap **Resize**.




3. Drag any of the border arrows to resize your keyboard.

4. To move the keyboard up, drag the center button up.

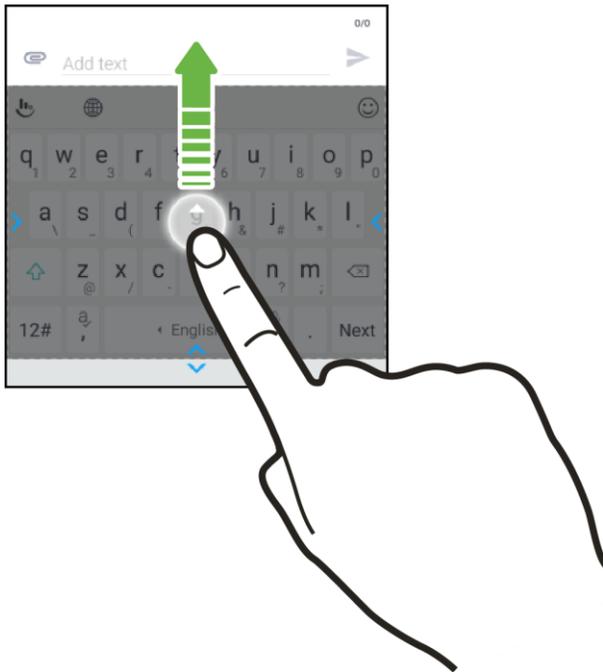

Show Numeric Keys on the Top Row of the Keyboard

1. Open the app you need, and then tap a text field to show the keyboard.
2. Tap , swipe to the left, and then tap **Settings**.
3. Tap **General settings** and select **Number Row**.

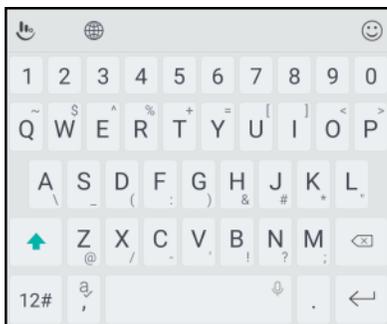

Google Account

You will need a Google Account to access several phone features such as Gmail, Google Maps, Hangouts, and the Google Play applications. Before you are able to access Google applications, you must enter your account information. These applications sync between your phone and your online Google Account.

Google Account Cautions

Be sure not to forget your Google Account ID or password.

Create a Google Account

If you do not already have a Google Account, you can create one online or using your phone.

Notes:

- You can also create and sign into your Google/Gmail account through your phone's Setup application.
- Although you need a Gmail account to use certain features of your phone, such as Google Play, you do not need to use Gmail as the default account for your phone.

Create a Google Account Online

1. From a computer, launch a Web browser and navigate to google.com.
2. On the main page, click **Sign in > Add account > Create account**.
3. Follow the onscreen prompts to create your free account.
4. Navigate to your Gmail inbox.

Create a Google Account Using Your Phone

1. Tap  >  >  **Settings > Accounts & sync**.
2. Tap  > **Google**.
3. Tap **Or create a new account**.
4. Enter your first name and last name, and then tap **Next**.
5. Enter your desired email address, and then tap **Next**.
6. When prompted, enter and re-enter a password, and then tap **Next**.
7. In the Rescue info screen, enter the phone number to use to recover your account password in case you forgot.
 - ❖ If you've entered a phone number, a security code will be sent to that phone and you will be asked to enter the code in the Verify phone number screen.
8. Tap **Accept** to agree to the Terms of Service and Privacy Policy.
9. In Your Google Account screen, tap **Next**.
10. Select your preferences in the Google services screen and then tap **Next**.
11. Set up your payment information or select **No thanks** and then tap **Continue**.

- ❖ The Accounts & sync screen shows your Google Account.

12. To go to your Gmail inbox, tap  >  >  Gmail.

Sign In to Your Google Account

If you have a Google Account but have not yet signed in with your phone, follow these instructions to sign in to your Google Account.

1. Tap  >  >  **Settings**.
2. Tap  > **Google**.
3. Enter your email address and tap **Next**.
4. Enter your password and tap **Next**.

- ❖ You are signed in to your Google Account, and your phone will synchronize the selected items.

5. To go to your Gmail inbox, tap  >  >  Gmail.

Google Play Store

Google Play is the place to go to find new Android apps, books, movies, and music for your phone. Choose from a wide variety of free and paid content ranging from productivity apps and games to bestselling books and blockbuster movies and music. When you find what you want, you can easily download and install it on your phone.

To access the Google Play Store app, you must first connect to the Internet using your phone's Wi-Fi or mobile data connection and sign in to your Google Account. See [Sign In to Your Google Account](#) for details.

Installing Applications

Many different kinds of applications can be installed on your phone from Google Play (provided by Google Inc.). Sprint is not responsible in any way for user-installed applications (quality, reliability, legality, fitness for a purpose, credibility, accuracy, etc.) or resulting malfunctions (viruses, etc.).

Important: Our policies often do not apply to third-party applications. Third-party applications may access your personal information or require us to disclose your customer information to the third-party application provider. To find out how a third-party application will collect, access, use, or disclose your personal information, check the application provider's policies, which can usually be found on their website. If you aren't comfortable with the third-party application's policies, don't use the application.

Find and Install an App

When you install apps from Google Play app and use them on your phone, they may require access to your personal information (such as your location, contact data, and more) or access to certain functions or settings on your phone. Download and install only apps that you trust.

1. Tap  >  >  **Play Store**.

2. When you open the Google Play Store app for the first time, the Terms of Service window will appear. Tap **Accept** to continue.
3. Browse through the categories (**Apps & Games** or **Entertainment**), find an item you're interested in, and tap the name.
 - Browse through featured apps. Scroll through the list of featured apps when you open Google Play.
 - Search for an app. Tap the Google Play search bar, enter the name or type of app you're looking for, and then tap **Search** on the keyboard.
4. When you find the app that you like, tap it and read its description and user reviews.
5. To download or purchase the app, tap **Install** (for free apps) or the price button (for paid applications).
6. Tap **Accept** on the permissions pop-up.
 - ❖ If you selected a paid application, after tapping **Accept**, you're asked how you want to pay for the app. Follow screen instructions to continue.
7. Tap **Open**.

Warning: Read the notification carefully! Be especially cautious with applications that have access to many functions or a significant amount of your data. Once you tap **OK** on this screen, you are responsible for the results of using this item on your phone.

Tip: Apps sometimes get updated with improvements or bug fixes. To automatically download updates, after installing, tap  > **Auto-update**.

Purchasing Applications

Purchase apps at your own risk. Sprint is not responsible for any harm to you or third parties resulting from the use of purchased applications.

Request a Refund for a Paid App

If you are not satisfied with an app, you can ask for a refund within 15 minutes of the purchase. Your credit card is not charged and the app is uninstalled from your phone.

If you change your mind, you can install the app again, but you can't request a refund a second time.

1. Tap  >  >  **Play Store**.
2. Tap , and then tap **My apps & games**.
3. Tap the app to uninstall for a refund. The details screen for the app opens.
4. Tap **Refund**, and then tap **Yes** to confirm. Your app is uninstalled and the charge is cancelled.

Update an App

Depending on your settings, many apps will update automatically, or you can update apps directly from the Play Store app.

Update an App Directly

1. Tap  >  >  **Play Store**.
2. Tap  > **My apps & games**.
3. Tap the app you want to update, and then tap **Update**.
 - ❖ The app update is downloaded and installed.

Set Automatic Updates

1. Tap  >  >  **Play Store**.
2. Tap  > **Settings** > **Auto-update apps**.
3. Tap an auto-update option, such as auto-update apps over Wi-Fi only.

Note: Automatic updates are unavailable for some apps.

Uninstall an App

You can uninstall any app that you have downloaded and installed from Google Play.

1. Tap  >  >  **Play Store**.
2. Tap  > **My apps & games**.
3. On the **Installed** tab, tap the app you want to uninstall, and then tap **Uninstall** > **OK**.
 - ❖ The app is uninstalled and removed from your phone.

Get Help with Google Play

The Google Play Store app offers an online help option if you have questions or want to know more about the app.

1. Tap  >  >  **Play Store**.
2. Tap  > **Help & feedback**.

The Web browser will take you to the Google Play Help Web page, where you will find comprehensive, categorized information about Google Play.

Google Wallet

You must have a Google Wallet account associated with your Google Account to purchase items from the Google Play Store app.

To create a Google Wallet account, do one of the following:

- On your computer, go to google.com/wallet to create a Google Wallet account.
– or –
- The first time you use your phone to buy an item from Google Play, you're prompted to enter your billing information to set up a Google Wallet account.

Warning: When you've used Google Wallet once to purchase an application from the Google Play Store app, the phone remembers your password, so you don't need to enter it the next time. For this reason, you should secure your phone to prevent others from using it without your permission. (For more information, see [Screen Lock Settings](#).)

Fingerprint Scanner

You can quickly wake up and unlock the phone using your fingerprint. You can add up to 5 fingerprints.

When setting up and using the fingerprint scanner, follow these tips:

- Make sure your finger and the fingerprint scanner are dry and clean.
- Use the entire pad of your finger, including the sides and tip.
- When recording your fingerprint, touch the scanner until it vibrates.
- The fingerprint scanner has 360° readability—you can touch a recorded finger at any angle to the scanner to turn on the screen or unlock the phone.


Note: You may not be able to set the fingerprint scanner to unlock the phone, if you've signed in to an Exchange ActiveSync account that requires you to set a different screen lock option (such as password). Check with your Exchange Server administrator if your Exchange ActiveSync account supports the fingerprint scanner.

Add a Fingerprint the First Time

It's quick and easy to add a fingerprint.

1. Tap  >  >  **Settings > Fingerprint scanner.**
2. Tap **Add fingerprint > Next.**
 - If you haven't already set up a lock screen pattern, PIN, or password, you'll be asked to set one up.
3. Tap **Start.**

4. Choose which finger or thumb to use, touch the scanner until it vibrates, then lift your finger or thumb.

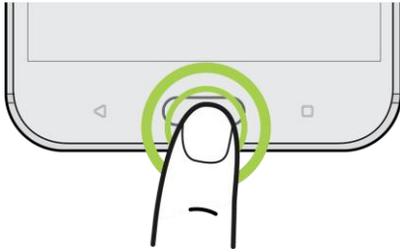

5. Repeatedly touch the scanner until the fingerprint has been successfully recorded. You'll get the best results if you hold your finger in the same direction when touching the scanner.



6. After you've successfully recorded your fingerprint, tap **Done**. Otherwise, tap **Add another fingerprint** to register another one.

❖ You can now use your fingerprint to wake up and unlock your phone.

Important: You'll need to input your backup lock screen pattern, PIN, or password if the scanner doesn't identify your fingerprint after five attempts. You'll only have 10 additional attempts before your data is deleted from your phone.

Add, Remove, or Edit Fingerprints

Follow these steps to manage your fingerprints on your phone.

1. Tap  >  >  **Settings** > **Fingerprint scanner**.
2. Enter your pattern, PIN, or password.

3. Do any of the following:
 - Tap **Add fingerprint** to add another fingerprint.
 - Tap a recorded fingerprint to rename or delete it.
 - Tap **Reset fingerprint scanner** to delete all recorded fingerprints.
 - Select **Wake up screen** if you want to be able to tap the fingerprint scanner to wake up the screen.

Lock and Unlock Your Screen

Your phone allows you to quickly turn the screen off when not in use and to turn it back on and unlock it when you need it.

Turn the Screen Off When Not in Use

- To quickly turn the screen off, press the **Power/Lock** button. Pressing the **Power/Lock** button again or receiving an incoming call will turn on your phone screen and show the lock screen.

To save battery power, the phone automatically turns off the screen after a certain period of time when you leave it idle. You will still be able to receive messages and calls while the phone's screen is off.

Note: For information on how to adjust the time before the screen turns off, see [Display, Gestures & Buttons Settings](#).

Unlock the Screen

Unlock the screen to access your phone.

1. Do any of the following:
 - Swipe up to unlock the screen.
 - Touch and hold the fingerprint sensor.
2. If you've set up a screen lock, you'll be asked to provide your credentials before your phone unlocks.

Tip: If you've set an alarm, you can snooze or dismiss the alarm right from the lock screen. Just drag  or  up.

Update Your Phone

From time to time, updates may become available for your phone. You can download and apply updates through the **Settings > System updates** menu.

Software Update Cautions

During update: The phone cannot be used until the software update is complete. It may take time to update your phone's software.

Signal during update: Update your phone where signal reception is good, and do not change location during the update process. Make sure the battery is adequately charged before beginning an update. A weak signal or low battery during an update may cause the update to fail. An update failure may disable the phone.

Other functions during update: Other phone functions cannot be used during a software update.

Update Your Phone Software

You can update your phone's software using the System updates option.

Before Updating Your Phone

Updating your phone may result in a loss of saved data depending on the condition of your phone (malfunctioning, damaged, water seepage, etc.). You must back up all critical information before updating your phone firmware.

Note: Updating your phone firmware may not permanently erase all data from your phone, including personal information.

Back Up All Data Prior to Update

To back up your Gmail information:

1. Tap  >  >  **Settings > Accounts & sync.**
2. Do any of the following:
 - Turn on the **Auto sync** option. When auto sync is on, Gmail email, Calendar, and Contacts automatically synchronize whenever a change is made.
 - Tap **Google**, select the Google Account you want to back up, and then select the items you want to synchronize. Tap  > **Sync now** to sync your Google Account information.

To back up your Google applications:

Applications you've purchased from Google Play are reloaded remotely and can be re-installed after the update is applied. After the update, make sure that you add your Google Account on the phone.

1. Tap  >  >  **Play Store.**
2. Tap  to open the slideout menu.
3. Tap **My apps & games**, swipe to the **All** tab, and then tap the app you want to restore.
4. Follow the onscreen instructions.

As an added precaution, to preserve any data on your microSD card, please unmount it from your phone prior to starting the update process.

- See [Storage Settings](#) for details.

Update the Operating System

This option allows you to update the phone's operating system (OS) via an over-the-air connection.

1. Tap  >  >  **Settings** > **System updates**.
2. Tap **HTC software update** > **Check now**.

Note: If you want to conserve data usage, you can select the **Update over Wi-Fi only** option before you tap **Check now**.

3. Follow onscreen instructions to download and install any available updates.
 - ❖ Your phone automatically downloads and installs any available updates. You may be required to power your phone off and back on to complete the software upgrade.

Confirm Your Current Phone Firmware

- Tap  >  >  **Settings** > **About** > **Software version**.
 - ❖ The software version is displayed.

Update Your Profile

This option allows you to automatically update your online user profile information. If you choose to change your user name and select a new one online, you must then update the user name on your phone.

1. Tap  >  >  **Settings** > **System updates**.
2. Tap **Update profile** and follow onscreen instructions.
 - ❖ The phone will download and install the profile update and you will see a confirmation when complete.

Note: If your data services or account syncing ever seems to go out unexpectedly, use this feature to reconnect with the network.

Update Your PRL

This option allows you to automatically download and update the PRL (preferred roaming list).

1. Tap  >  >  **Settings** > **System updates**.
2. Tap **Update PRL** and follow onscreen instructions.
 - ❖ The phone will download and install the PRL update and you will see a confirmation when complete.

Your Phone's Home Screen


The following topics describe how to use and customize your phone's home screen, understand the status bar, and use the notification panel.

Home Screen Basics

The home screen is the starting point for your phone's applications, functions, and menus. You can customize your home screen by adding application icons, shortcuts, folders, widgets, and more.

Home Screen Layout

Your home screen extends beyond the initial screen. Swipe the screen left or right to display additional screens.

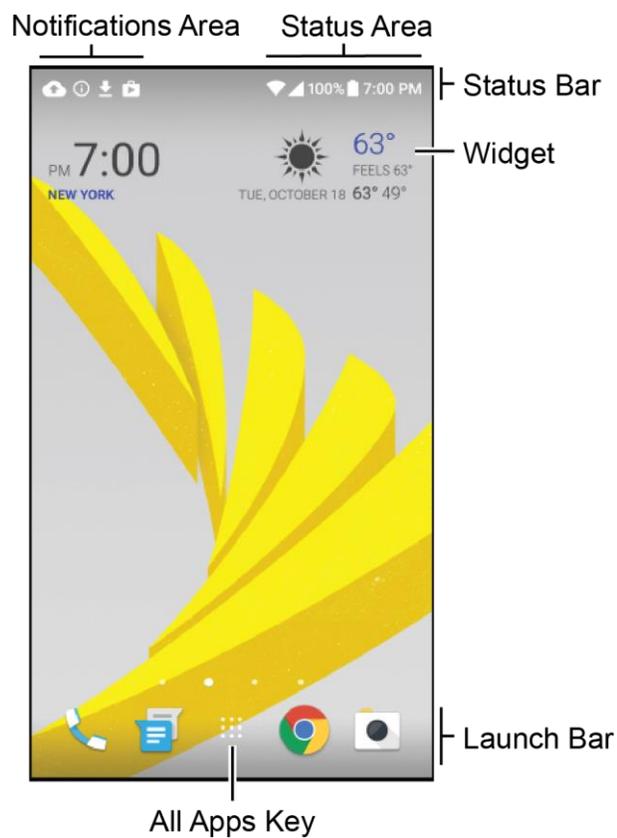

Item	Description
Notifications Area	The notification area of the status bar (on the left) displays notifications for incoming messages, missed calls, application updates, and more.

Status Area	The status area of the status bar (on the right) displays phone and service status information such as signal strength, battery status, Wi-Fi and data connectivity, ringer status, and time.
Status Bar	The status bar displays icons to notify you of your phone's status (on the right side) and notifications (on the left side).
Widgets	Widgets are self-contained onscreen apps that reside on your phone's home screen.
Launch Bar	Primary shortcuts are application shortcuts that appear in the same location on all of your phone's home screens. These are customizable except for the All Apps Key, which remains static.
All Apps Key 	Tap to open the applications (apps) list. The apps list key is a primary shortcut available from all home screens.

Tip: Tap **Home**  to return to the main home screen from any other screen.

Status Bar

The status bar at the top of the home screen provides phone and service status information on the right side and notification alerts on the left. To view the notifications window or access the quick settings menu, tap the status bar and drag it down.

Status Bar Layout



Main Notification Icons

Icon	Notification
	Mobile Hotspot is on
	New text or MMS message
	New voicemail
	New Gmail message
	Screen captured

	General notification (for example, sync error)
	More notifications available (tap to view)
	Missed call
	Call in progress
	Downloading
	Uploading
	USB connection

Main Status Icons


Icon	Status
	Bluetooth active
	Headset connected
	Location service (GPS) is on
	Location service (GPS) is off
	Wi-Fi active
	Vibrate
	Speakerphone active
	Network (full signal)
	Sprint 4G LTE data service
	Sprint 3G data service
	Roaming
	Airplane mode

	Data synchronizing – connected to HTC Sync
	Alarm set
	Battery (charging)
	Battery (full charge)

Notification Panel


When you see notification icons, open the notification panel to check out details of the notifications that you've received. You can also quickly access settings from the notification panel.

1. Slide down from the top of the screen to open the notification panel.

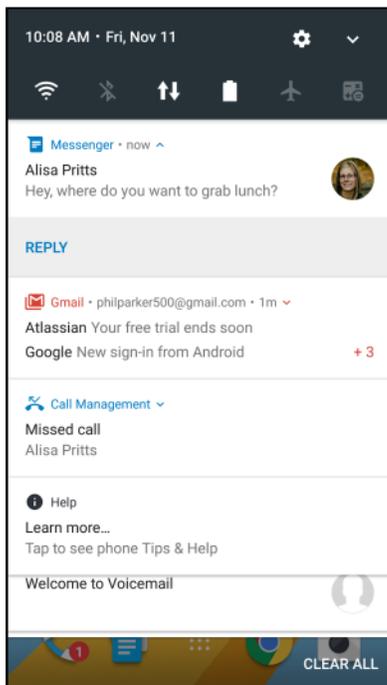

2. On the notification panel:

- Some notifications allow you to take immediate action. For example, tap **Reply** to reply directly to a received text message or tap **Call back** to return a missed call. Tap **✓** on a notification to show all actions that you can immediately take without opening the related app.

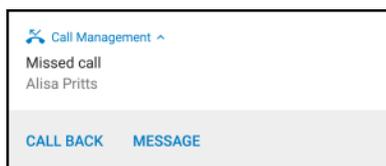

- Tap the notification to open the corresponding app.
- To dismiss just one notification in the list, drag it left or right. To dismiss all notifications and close the notification panel, tap Clear all.
- Slide two fingers apart on the notification to expand it and see more details or see if there are more notifications bundled inside it. Slide two fingers together on the notification to minimize it again.
- Touch and hold a notification to customize the corresponding app's notification settings. You can change what app notifications you want to receive. See [Manage App Notifications](#).
- If you have several notifications, scroll through the list screen to see them all.


Manage App Notifications

You can set the priority of app notifications or completely block notifications for apps you don't want to be notified about.

1. Tap  >  >  **Settings** > **Sound & notification**.
2. Tap **Notifications**, and then tap the app you want manage. You can also touch and hold a notification, and then select the notification option for that app.
3. Tap the On/Off switch next to **Block all**, **Show silently**, or **Override Do Not Disturb** depending on your preference.
 - ❖ Settings for app notifications are applied to notifications in the notification panel and the lock screen.

Front Indicator Light (LED)

The Front Indicator Light (LED) provides phone information at a glance.

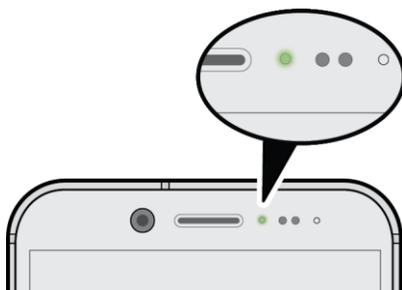

The indicator shows:

- Solid green light when your phone is connected to the power adapter or a computer and the battery is fully charged.
- Flashing green light when you have a pending notification (for example, a new message or a missed call).
- Solid orange light when the battery is being charged.

- Flashing orange light when the battery level reaches very low. (Power is below 14%.)

Change LED Notification Settings


You can change when to flash and which apps will flash the LED when there are new notifications.

1. Tap  >  >  **Settings** > **Sound & notification**.
2. Under Notifications, tap **Flash LED for notifications** and choose whether to always flash the LED or flash it only when the screen is off.
3. Tap **Manage LED notifications** and choose which app notifications you want the LED to flash for.

Tip: In other apps, check their settings to find out if they have an option for flashing the LED.

HTC BlinkFeed - Your Dynamic Home Screen

Get the latest news about your interests or status updates from your right on HTC BlinkFeed. Set up which social networks, news sources, and more will appear. To go to HTC BlinkFeed, swipe right from the Home screen.

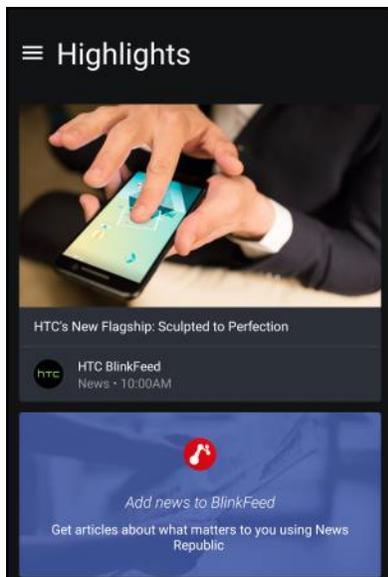

- Swipe up or down to browse stories on HTC BlinkFeed.
- Tap a tile to view the content.
- While viewing a news article, swipe left or right to see more stories.
- While in HTC BlinkFeed, you can tap either  or  to scroll to the top.
- Scroll to the top and pull down on the screen to manually refresh the stream.
- Swipe right on HTC BlinkFeed to open the slideout menu to choose the type or add your custom topics to display.

Tip: You'll see the clock widget on HTC BlinkFeed if you've set HTC BlinkFeed as the main Home screen.

Turn HTC BlinkFeed On or Off

You can turn HTC BlinkFeed on or off.

1. On the Home screen, slide two fingers together.



2. Tap .
3. Do one of the following:
 - To turn on HTC BlinkFeed, swipe right until you see **+ BlinkFeed**, then tap it.
 - To turn off HTC BlinkFeed, swipe to the thumbnail and then tap **Remove**.

Get Restaurant Recommendations

If you're having a hard time thinking where to eat, get recommendations for nearby restaurants in HTC BlinkFeed.

Before you get restaurant recommendations, make sure:

- You've added personalized content to HTC BlinkFeed. See [HTC BlinkFeed - Your Dynamic Home Screen](#).
1. On HTC BlinkFeed, swipe right to open the slideout menu.
 2. Tap **+** and make sure **Mealttime recommendations** is selected.

To get restaurant recommendations, you'll need to actively use HTC BlinkFeed daily. Restaurant recommendations will show up as a tile in HTC BlinkFeed and also on your lock screen.

View Restaurant Recommendations

View photos of the restaurant, get directions to the restaurant, and more. When you see a restaurant recommendation tile, tap it to view more information.

You can do the following:

- Tap the photo tile or **View Photos** to browse photos of the restaurant.

- Tap the map icon or address to see the location in Google Maps. From there, you can get directions.
- If you see a phone number, tap the phone number to call the restaurant.
- Tap the dots at the bottom for more options.

Add Sources to HTC BlinkFeed

Add news sources such as News Republic™ to select from a wide variety of news services. Discover stories and articles on HTC BlinkFeed based on your interests, favorite categories, and popular news channels or websites.

1. Tap  or swipe right to go to HTC BlinkFeed.
2. Swipe right to open the slideout menu.
3. Tap , and then select the sources you want to add.

Select Feeds

Discover stories and articles on HTC BlinkFeed.

Note: You need to add News Republic before you can select feeds.

1. Tap  or swipe right to go to HTC BlinkFeed.
2. Swipe right to open the slideout menu.
3. Next to **News Republic**, tap  > **Add topics**.
4. Swipe across the screen to browse the categories.
5. Select one or more feeds.

Show Content From Your Apps and Social Networks

See your friends' posts in social networks or show content from your HTC apps right on HTC BlinkFeed.

Notes:

- You need to sign in to your social networks to see their feeds on HTC BlinkFeed.
 - When adding a social network to HTC BlinkFeed, you need to give HTC Sense permission to access it.
1. Tap  or swipe right to go to HTC BlinkFeed.
 2. Swipe right to open the slideout menu.
 3. Tap , and then select the apps and social networks you like.

Search and Add Topics of Interest

You can search for and select topics of interest to display them on HTC BlinkFeed.

1. Tap  or swipe right to go to HTC BlinkFeed.
2. Swipe right to open the slideout menu.
3. Next to **News Republic**, tap  > **Add topics**.
4. Tap , and enter keywords of what you're looking for.
5. Tap a result to add it to My topics in the News Republic app. You can also tap **Show feeds from RSS providers** to see RSS feeds related to the topic. If you don't see the tile, scroll up.

Subscribe to Foreign News Sources

Keep up to date on current events outside your region. You can have news sources from different countries appear on HTC BlinkFeed.

1. Tap  or swipe right to go to HTC BlinkFeed.
2. Swipe right to open the slideout menu.
3. Next to **News Republic**, tap  > **Add topics**.
4. Tap  next to the name of the locale or region and then select another one.
5. Select the feeds to add.

Read with Convenience

Make reading HTC BlinkFeed content more convenient with resizable fonts or night reading mode.

1. Tap  or swipe right to go to HTC BlinkFeed.
2. Swipe right to open the slideout menu.
3. Tap an article to open it in News Republic.
4. Tap , and do one of the following:
 - Tap **Night mode** to switch to night reading mode.
 - Tap **Font size**, and then select a font size.

Customize the Highlights Feed

Go to the Highlights feed to see a mix of top trending articles and status updates from the feed sources you added. You can also set the Highlights feed to only show items from your favorite news sources, categories, and apps.

Note: You cannot add custom topics to the Highlights feed.

1. Tap  or swipe right to go to HTC BlinkFeed.
2. Swipe right to open the slideout menu.
3. Tap  > **Settings** > **Choose Highlights topics**.
4. Select the feed sources you want to appear in Highlights.

Post to Your Social Networks

You can easily post a status update from HTC BlinkFeed.

Notes:

- You need to sign in to your social networks to see their feeds on HTC BlinkFeed.
- When adding a social network to HTC BlinkFeed, you need to give HTC Sense permission to access it.

1. Tap  or swipe right to go to HTC BlinkFeed.
2. Swipe right to open the slideout menu.
3. Tap  > **Compose**, and then choose a social network.
4. Compose your status update and post it on your social network.

Remove Content From HTC BlinkFeed

Whether it's a tile or an entire feed, you can remove content you don't want to see on HTC BlinkFeed.

- To remove a tile, touch and hold the tile you want to remove, and then tap **Remove**.
- To remove a feed source, in the slideout menu next to **News Republic**, tap  > **Add topics**, then tap any tile marked with  to remove it.
- To remove social networks or apps from HTC BlinkFeed, in the slideout menu, tap . Then uncheck the social networks or apps you want to hide from HTC BlinkFeed.

Customize the Home Screen

Learn how to set the wallpaper and add, move, or remove shortcuts, widgets, and folders from the home screen. Your phone allows you to change the wallpaper, add or remove widget panels, change your main Home screen, and add shortcuts, folders, and widgets at any time.

Choose a Home Screen Layout

You can choose between two Home screen layouts.

Classic Layout

The Classic layout allows you to add traditional app shortcuts and widgets on your Home screen. By design, this layout will follow and fit what you've added on the Home screen according to an invisible grid.



Freestyle Layout

The Freestyle Home screen layout frees you from grid constraints and allows you to place your icons and widgets anywhere you want them on the Home screen. You can use custom stickers as app shortcuts, too.



Select a Home Screen Layout

1. Touch and hold an empty space on a widget panel.
2. Tap **Change Home screen layout**.
3. Choose the Home screen layout that you want.

Set the Home Wallpaper

Choose from the available wallpapers, or use any photo you've taken with the camera.

Note: You can only change the wallpaper while in Classic home screen layout.

1. Tap and hold an empty space on a widget panel.
2. In the pop-up menu, tap **Change Home screen wallpaper**.
3. Choose from where you want to select a wallpaper.

- To use a wallpaper stored on your phone, tap **HTC wallpapers** or **Live wallpapers**.
 - Tap **Themes store** to use a wallpaper from the Theme app. See [Themes](#) for details.
 - To use a photo you captured with the camera, tap **Photos**.
 - Tap **Sprint ID** to select a wallpaper from a downloaded Sprint ID pack.
4. Tap **Apply** or **Set wallpaper**.

Set Multiple Wallpapers

You can split a panorama photo into three parts so that it extends to three Home screen panels as one photo. Or, you can choose to set three different wallpapers for each widget panel.

Notes:

- You can only apply Multiple wallpapers while in Classic home screen layout.
- You can only set the Multiple wallpapers for three widget panels. The right-most photo will be used as the wallpaper for any additional panels.

1. Touch and hold an empty space on a widget panel.
2. Tap **Edit current theme > Home wallpaper**.
3. Tap  > **Multiple**.
 - ❖ You'll then see three page thumbnails.
4. Tap **Change wallpaper** under the first page thumbnail.
5. Select from the preset wallpapers or tap  to choose from your photos.
 - If you've selected a panorama photo, you need to crop it starting from the area that will fit the left widget panel of the Home screen.
6. Repeat steps 4 and 5 to change the wallpaper for the second and third widget panels.
7. Tap .

Set a Time-based Wallpaper

Set your home wallpaper to automatically change during the day and night.

Note: You can only use a Time-based wallpaper while in Classic home screen layout.

1. Touch and hold an empty space on a widget panel.
2. Tap **Edit current theme > Home wallpaper**.
3. Tap  > **Time-based**. You'll then see two page thumbnails.

4. Tap **Change wallpaper** under the Day thumbnail to choose the wallpaper you want to display during the day.
5. Select from the preset wallpapers or tap  to choose from your photos.
6. Tap **Change wallpaper** under the Night thumbnail to choose the wallpaper you want to display during the night.
7. Tap .

Organize Your Widget Panels

Organize your widget panels depending on your needs.

Change Your Main Home Screen

Set HTC BlinkFeed or a widget panel as your main Home screen.

1. Touch and hold an empty space on a widget panel.
2. In the pop-up menu, tap **Manage Home screen pages**.
3. Swipe left or right until you see the panel that you want to use as your main Home screen.
4. Tap **Set as home**.
5. Tap .

Note: Tapping  from an app will first return you to the last panel you were in. Just tap  again to go to your main Home screen.

Add or Remove a Widget Panel

Notes:

- You won't be able to add a new widget panel if you've already reached the maximum limit.
 - If it's not removed, HTC BlinkFeed always appears as the first panel. A widget panel cannot be inserted before HTC BlinkFeed.
1. Touch and hold an empty space on a widget panel.
 2. In the pop-up menu, tap **Manage Home screen pages**.
 3. To add a new widget panel, swipe until you see the  icon, and then tap it.
 4. To remove a widget panel, swipe left or right until you see the panel, and then tap **Remove**.
 5. Tap .

Arrange Widget Panels

Note: A widget panel cannot be moved or inserted before HTC BlinkFeed.

1. On HTC BlinkFeed or any widget panel, slide two fingers together to customize the Home screen.
2. Touch and hold a widget panel thumbnail, and then drag it left or right to the position you want.
3. Tap .

Work with Stickers, Widgets and App Shortcuts

Customize the launch bar, and add stickers, widgets, and app shortcuts to the Home screen.


Customize the Launch Bar

The launch bar on your Home screen gives you one-tap access to commonly used apps and other shortcuts. You can replace the apps on the launch bar with other apps that you often use.

Notes:

- You can only customize the launch bar while in Classic layout.
- If you're using the Freestyle layout, you will only see the launch bar on the lock screen. Icons displayed will be the same ones you have in the Classic layout.

1. Touch and hold the app you want to replace, and then drag it out to .

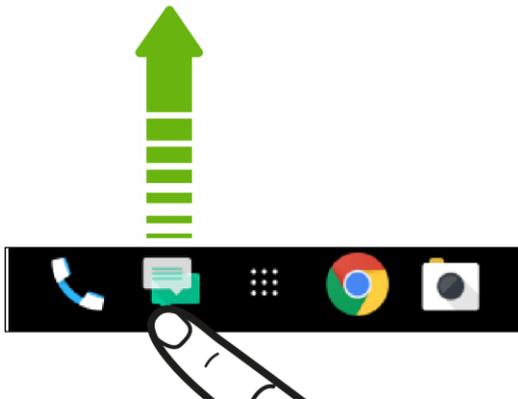

2. Tap  to go to the Apps screen.
3. Touch and hold an app, and then drag it to the empty slot on the launch bar.

Tips:

- You can also group apps on the launch bar into a folder.
- The apps or shortcuts you see on the lock screen are the same as the ones in the launch bar.

Add Widgets on Your Home Screen

Widgets make at-a-glance important information and media content easily available. Choose from a selection of widgets and add the most useful ones to your Home screen.

1. Touch and hold an empty space on a widget panel.
2. In the pop-up menu, tap **Add apps and widgets**.
3. Tap  > **Widgets**.
4. Scroll through the widgets or tap  to search for specific widgets. Some widgets are available in different styles and sizes.
5. Touch and hold a widget, and then drag it to a widget panel you want to add it to.

Change the Widget Settings

You can modify basic settings of some widgets (for example, the Clock widget) from the Home screen. Some widgets can also be resized after you've added them to your Home screen.

- Touch and hold the widget on your Home screen, and then drag it to . You can then customize the widget settings.
- To resize the widget, touch and hold the widget. If a border appears around the widget, drag the sides of the border to enlarge or shrink the widget size.

Add Apps and Other Shortcuts on Your Home Screen

Place apps you often use on your Home screen. You can also add shortcuts to frequently used settings, bookmarked Web pages, and more.

1. Touch and hold an empty space on a widget panel.
2. In the pop-up menu, tap **Add apps and widgets**.
3. Tap  > **Apps** or **Shortcuts**.
4. Scroll through the apps or shortcuts, or tap  to search for one.
5. Touch and hold an app or shortcut icon, and then drag it to a widget panel where you want to add it.

Note: To add an app from the Apps screen, touch and hold an app and drag it to a widget panel.

Use Stickers as App Shortcuts

Replace the usual app shortcuts with stickers to blend with your home wallpaper design. You can link individual stickers to different apps.

1. Switch to Freestyle layout. To find out how, see [Choose a Home Screen Layout](#).

2. Touch and hold an empty space on a widget panel.
3. In the pop-up menu, tap **Add stickers**.
4. Tap  > **Stickers**.
5. Scroll through the stickers, and then drag a sticker to a widget panel you want to add it to.
6. Tap the newly added sticker, and then tap an app to link to the sticker.

Note: If you need to link the sticker to a different app, touch and hold it on the widget panel, and then drag it to **Relink**.

7. To show or hide the name of the app it's linked to, touch and hold the sticker on the widget panel, and then drag it to **Show label** or **Hide label**.

Tip: You can choose to show or hide labels for all stickers on the Home screen. Touch and hold an empty space on a widget panel, and then tap **Show/hide labels for stickers**.

Move or Remove Items on Your Home Screen

1. Touch and hold the widget or app shortcut you want to move or remove.
2. To move the item to another position on the same panel, just drag it to a new area and then release it.
3. To move the item to another Home screen panel, flick left or right to rotate the screen to another widget panel, and then release it.



4. To remove the item, drag it to , and when the item turns red, release it.

Customize the Lock Screen

Use the home wallpaper, or use any photo you've taken with the camera as the lock screen wallpaper.

Change the Lock Screen Wallpaper

1. Touch and hold an empty space.
2. Tap **Edit current theme** > **Lock screen wallpaper**

3. Select from the thumbnails or tap  to choose from your photos.
4. Tap **Apply** or **Save**.

Set a Screen Lock

Help protect your personal information and help prevent others from using HTC Bolt without your permission. Choose to set a screen lock pattern, numeric PIN, or other means of securing your phone. You'll be asked to unlock the screen every time HTC Bolt is turned on or when it's idle for a certain period of time.

1. Tap  >  >  **Settings** > **Security**.
2. Tap **Screen lock** and select a screen lock option.
3. On the secure startup screen, select whether you want the phone to require the PIN after restarting, and tap **Continue**.
4. Set up the screen lock.
5. Select which notifications to show in the lock screen, and then tap **Done**.
6. Tap  next to Screen lock, and then tap **Automatically lock phone**.
7. Specify the idle time before the screen is locked.

You can also clear **Make pattern visible** or **Make passwords visible** if you don't want your screen lock to display as you enter it onscreen.

Set up Smart Lock

Set up your phone to detect your face or another trusted device before you can unlock the screen.

1. Tap  >  >  **Settings** > **Security**.
2. Tap **Screen lock**, and then select and set up a screen lock.
 - ❖ This will be your backup screen lock method to use in case the phone doesn't recognize you or a trusted device.
3. On the Security screen, tap **Smart Lock**.
4. Confirm your screen lock.
5. Tap **Trusted face** and follow the onscreen instructions.
6. Tap **Lock phone after** then specify the idle time before the screen is locked.

To help make Smart Lock more reliable and more secure, you can train HTC Bolt to recognize your face in different situations, such as when you're wearing glasses or sporting a beard.

- Tap **Smart Lock**, confirm your screen lock, and then tap **Trusted face > Improve face matching**. Follow the onscreen instructions.

Change Lock Screen Shortcuts

To change apps (or other shortcuts) on the lock screen, change the ones on the launch bar. To find out how, see [Customize the Home Screen](#).

Turn Off the Lock Screen

You can turn the lock screen off in Settings.

1. Tap  >  >  **Settings > Security**.
2. Tap **Screen lock**, confirm your screen lock, and then tap **None**.

To turn the lock screen on again, in Security settings, tap **Screen lock** and set up a screen lock.

Turn Lock Screen Notifications On or Off

On the lock screen, you can see notifications such as missed calls, text messages, calendar events, and more. You can choose to turn lock screen notifications on or off.

1. Tap  >  >  **Settings > Sound & notification**.
2. Tap **On the lock screen > Don't show notifications at all**.

If you change your mind later, you can tap **Show all notification content** to turn lock screen notifications on.

Interact with Lock Screen Notifications

Besides seeing notifications on the lock screen, you can also interact with them.

- Tap twice on a notification to go directly to the related app.
- To see the entire list of notifications on the lock screen, swipe down on the lock screen. You can tap on a blank area of the screen to return to the lock screen.
- Swipe left or right on the notification to remove it.
- Touch and hold a notification to show, block, or silence notifications from the related app.

HTC BlinkFeed Notifications

From time to time, you'll see HTC BlinkFeed notifications, such as a suggestion for a nearby restaurant or a recommended article.

1. Double-tap the notification to see the full notification. For restaurant recommendations, tap  or the notification text.

2. Tap the notification again to get more information about the restaurant recommendation or to read the article in HTC BlinkFeed.

Tip: If you don't want to see restaurant recommendations on your lock screen, go to HTC BlinkFeed, and then tap  >  and clear the **Mealttime recommendations** option.

Themes

Themes brings a quick and easy way for you to customize your phone with wallpapers, sounds, icons, and more. Log in with your HTC Account to browse from the available themes in the Themes store, or make your own.



Download Themes

Find and download pre-made themes that make it easy for you to personalize your phone.

1. Tap  >  >  **Themes**.
2. Tap **Get started**.
3. Sign in with your preferred account.
4. On the Recommended screen, swipe left or right under each category to browse recommended items.
5. To see all available items for a category, swipe left and tap **See all**.
6. Tap an item to see the details screen.
7. Tap **Download**.

To apply the theme after it has finished downloading, tap **Apply**. If your theme has custom sounds, all of your ringtones and alert tones will also change.

Bookmark Themes

While browsing themes, you can bookmark them so you can easily find them later.

1. Tap  >  >  **Themes**.

2. Browse the categories to find something you like.
3. Tap the item and then tap . You'll find the bookmark in **My themes**. See [Find Your Themes](#).

Tip: You can remove the bookmark by tapping .

Create Themes

You can create and customize your own theme and even share it for others to download.

1. Tap  >  >  **Themes**.
2. Tap  > **Choose Home image** to set the main wallpaper for your theme.
3. Select an image from your phone, or take a photo with Camera.
4. Move or enlarge the crop box to the area of the image you want to include.
5. Crop and save the image.
6. Tap **Next**.
7. Swipe up or down to the pre-defined style to select for your theme.
8. Do any of the following:
 - If you don't want to customize your theme further, tap **Next** to save your theme.
 - Tap **Edit**, then tap any of the categories you want to customize, and experiment with the settings until you're satisfied.
 - When you're ready, tap **Preview** to see what your theme will look like.
9. Tap **Finish**, then name your theme and tap **OK** to save your theme.
10. To apply the theme right away, make sure you select the **Apply this theme now** option.


Mix and Match Themes

After selecting a theme, you can mix and match parts from other themes such as sounds, icons, wallpapers, and more.

Note: To mix and match themes, you need to first download theme components from the catalog.

1. Tap  >  >  **Themes**.
2. Tap  > **Edit current theme**.
3. Tap any of the other categories you want to change.
4. Tap an item in the category. If the category is empty, tap  beside the category name and choose one of the collections to select from.

5. Tap **Download** to get the content, and then tap **Apply** to apply the change to your current theme.
6. Tap  until you see the preview screen. Continue making changes until you're satisfied with the result.

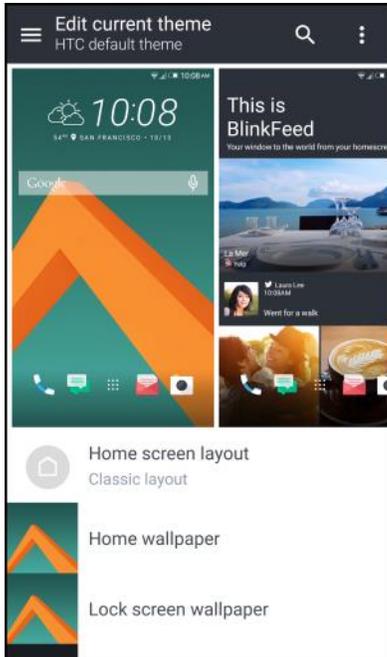

7. Tap **Save copy** to save your new theme, or if you're editing a theme that you copied, tap **Save** to save the changes.

Find Your Themes

Themes you created or downloaded can be found in your theme collection. You'll also find the theme you bookmarked.

1. Tap  >  >  **Themes**.
2. Tap  > **My themes**.

Share Themes

Share themes, wallpapers, icons, and more with friends and family.

1. Tap  >  >  **Themes**.
2. Browse to the theme you want to share and tap it to view the details.
3. While viewing the details page of any item in the catalog, tap  to share.

Delete a Theme

You can delete a theme if you no longer want to keep it on your phone.

1. Tap  >  >  **Themes**.
2. Tap  > **My themes**.
3. Tap the theme you want to remove from your collection.
4. Tap  > **Remove**.

If the theme you deleted is currently applied, it will still be applied to your phone until another theme is applied.

Motion Launch

Motion Launch is a combination of a motion gesture followed by a finger gesture. With Motion Launch, you don't have to reach for the **Power/Lock** button to wake up your phone. Using a combination of simple gestures, you can wake up to your home screen, HTC BlinkFeed, and more.


- [Wake Up to the Lock Screen](#)
- [Wake Up and Unlock](#)
- [Wake to the Home Widget Panel](#)
- [Wake to HTC BlinkFeed](#)
- [Launch the Camera](#)

Turn Motion Launch On or Off

Motion Launch is on by default. You can turn it off in Settings.

1. Tap  >  >  **Settings**.
2. Tap **Display, gestures & buttons**.
3. Tap **Motion Launch gestures**.


4. Select the Motion Launch gestures you want.

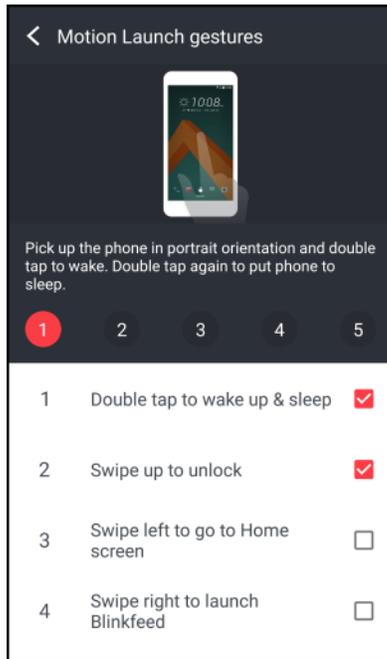

Wake Up to the Lock Screen

Go from sleep mode to the lock screen without reaching for the **Power/Lock** button.

1. Lift the phone in portrait orientation.
2. Immediately double-tap the screen.

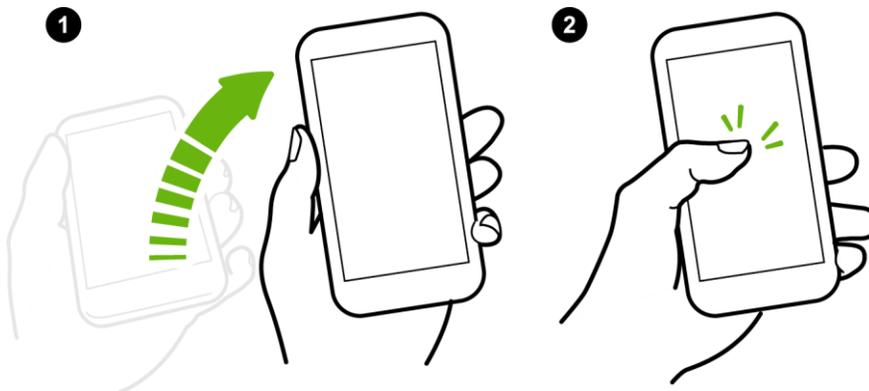


Make sure you're not touching the screen when the phone vibrates.

Wake Up and Unlock

Go from sleep mode and unlock HTC Bolt to the last screen you were using without reaching for the **Power/Lock** button.

Note: If you've set up a screen lock with credentials, you'll be asked to provide your credentials first before HTC Bolt unlocks.

1. Lift the phone in portrait orientation.
2. Immediately swipe up from the bottom half of the screen.

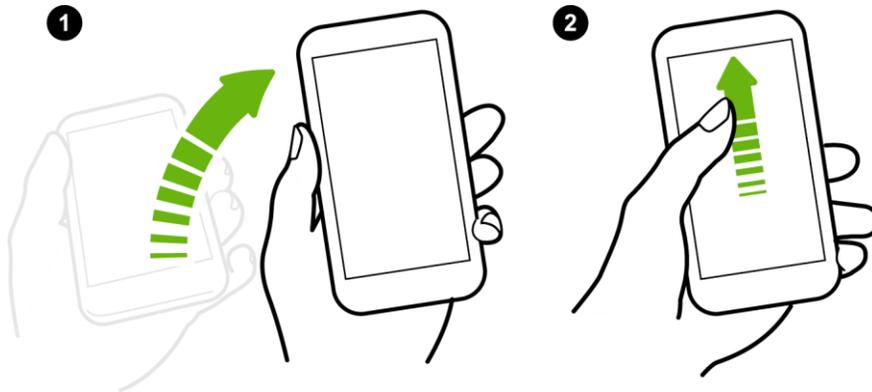


Make sure you're not touching the screen when the phone vibrates.

Wake to the Home Widget Panel

Go from sleep mode to the Home widget panel without reaching for the **Power/Lock** button.

Note: If you've set up a screen lock with credentials, you'll be asked to provide your credentials first before HTC Bolt unlocks.

1. Lift the phone in portrait orientation.
2. Immediately swipe left from the right side of the screen.

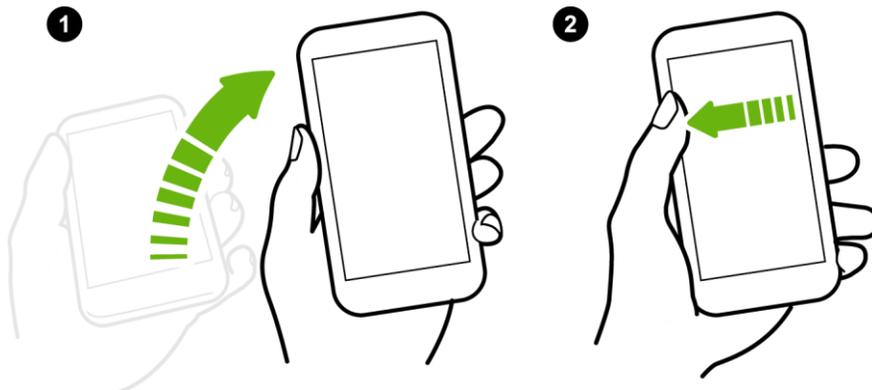

Make sure you're not touching the screen when the phone vibrates.


Wake to HTC BlinkFeed

Go from sleep mode to HTC BlinkFeed without reaching for the **Power/Lock** button.

Note: If you've set up a screen lock with credentials, you'll be asked to provide your credentials first before HTC Bolt unlocks.

1. Lift the phone in portrait orientation.

2. Immediately swipe right from the right side of the screen.

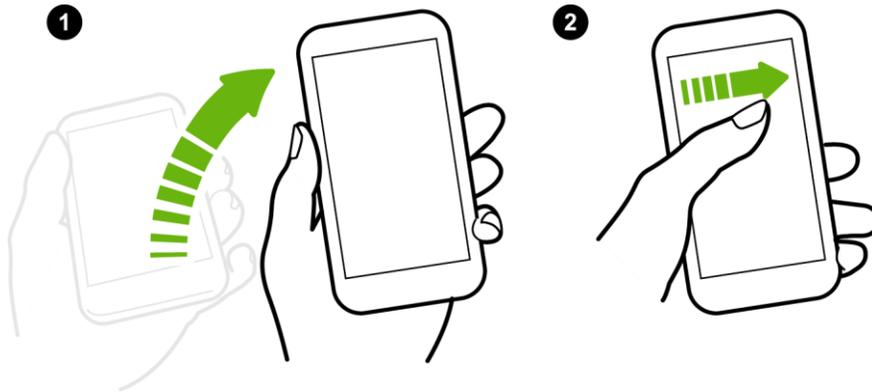

Make sure you're not touching the screen when the phone vibrates.

Launch the Camera

Go from sleep mode to the Camera app without pressing the **Power/Lock** button.

1. Lift the phone in portrait orientation.
2. Immediately swipe down twice on the screen.



Note: If you've set up a screen lock with credentials, you'll be asked to provide your credentials when you exit the Camera app.

Motion Launch Troubleshooting

In **Settings > Display, gestures & buttons**, tap **Motion Launch gestures** and make sure that the Motion Launch gestures you want to use are selected. If Motion Launch is already on but your phone is not responding to your gestures, see the possible causes below.

- There was no motion gesture before the finger gesture. Make sure to lift the phone first before doing the finger gesture.
- Length of swiping was too short. Swipe a longer distance across your screen.

- When swiping up to unlock the screen, you didn't swipe from the bottom half of the screen.
- You may have covered the proximity sensor while holding the phone.
- The duration of swiping may be too long. Release your finger when the phone vibrates.

Making Connections

The following set of topics will cover your phone's ability to help you make connections, from phone calls and maintaining contacts, to text messages, email, Internet, and international services.

Phone Calls and Voicemail

The following topics outline the use of your device's phone app to place and receive calls, use voicemail, set up and manage contacts, and more.

Place and Answer Calls

The following topics describe how to directly dial calls, how to answer incoming calls, and how to use the in-call screen options.

Adjust In-Call Volume

- **Adjusting Call Volume:** Press the **Volume** up or down button during the call.

Troubleshooting

Question: Difficulty during call.

Answer 1: It may not be possible to make a call properly in a noisy location.

Answer 2: When calling using the speaker, check the call volume. Raising the call volume may make calling difficult.

Question: Sound pops momentarily during a call.

Answer: Are you changing location while calling? Sound pops when signal is weak and the phone switches to a different area.

Emergency Call Caution

Emergency calls are restricted in Airplane mode.


Call Using the Phone Dialer

The most common way to place a call is by using the phone's dialer screen.

Call Using Smart Dial

You can either dial a number directly, or use Smart dial to quickly place a call. Smart dial searches and calls a stored/synced contact or a number from your call history.

1. Tap  >  to display the phone's dialer screen.
2. Enter the phone number or first few letters of the contact's name to see the top matching contact.
3. If there are a number of matches found (for example, 3 Matches), tap the number to see all the matches.

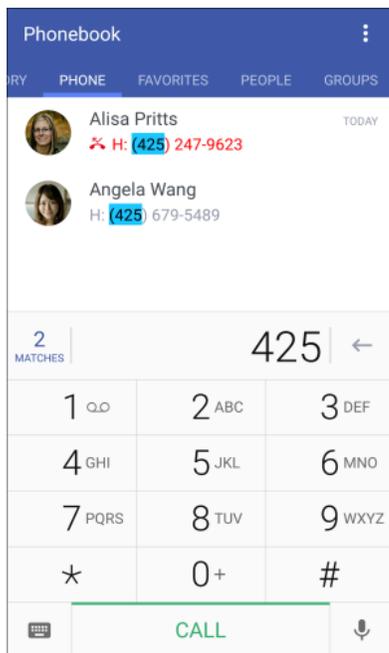

4. Tap the contact you want to call.
 - To check other phone numbers associated with the contact, tap the contact photo.
 - If the phone number has an extension, tap  after connecting to the main line and then dial the extension number.
5. To hang up, tap **End call**.

Change the Phone Dialer Layout

Switch between a large or standard dial keypad.

1. Tap  >  to display the phone's dialer screen.
2. Tap  > **Large dial pad** or **Standard dial pad**.

Troubleshooting

Question: Call does not connect.

Answer 1: Was the number dialed using the area code? Try dialing the number starting with "0."

Answer 2: Are you in an area with poor wireless coverage? Try calling again from another area.

Dial an Extension Number

To skip voice prompts when dialing an extension number, do one of the following.

- After dialing the main number, touch and hold . A comma (,) is added to the number you are dialing. Enter the extension number, and then tap . You will be connected to the mainline and then to the extension number.

-or-

- After dialing the main number, touch and hold . A semicolon (;) is added to the number you are dialing. Enter the extension number, and then tap . After connecting to the main line, tap **Send** to dial the extension number.

Tip: You can save phone numbers with an extension in the People app.

Call Emergency Numbers

You can place calls to 9-1-1 even if the phone's screen is locked or your account is restricted.

Important: You won't be able to make an emergency call if you don't have a network signal.

1. Unlock the screen. For more information, see [Lock and Unlock Your Screen](#).

2. Tap  > .

3. Tap    .

- ❖ As long as you are in an area covered by wireless service, the emergency call is placed.

Note: When your account is restricted or if you've enabled but forgotten your lock password or lock pattern, you can still make emergency calls by tapping **Emergency call** on the screen.

Enhanced 9-1-1 (E9-1-1) Information

This phone features an embedded Global Positioning System (GPS) chip necessary for utilizing E9-1-1 emergency location services where available.

When you place an emergency 9-1-1 call, the GPS feature of your phone seeks information to calculate your approximate location. Depending on several variables, including availability and access to satellite signals, it may take up to 30 seconds or more to determine and report your approximate location.

Important: Always report your location to the 9-1-1 operator when placing an emergency call. Some designated emergency call takers, known as Public Safety Answering Points (PSAPs), may not be equipped to receive GPS location information from your phone.

Call Using a Speed Dial Number

Speed dial numbers let you dial numbers by touching and holding a single number on the Phone keypad.

1. Tap  >  to display the phone dialer's screen.
2. Touch and hold the speed dial key on the Phone keypad. The display confirms that you have dialed the number when it shows "Dialing" on the upper right side of the screen.

Set Up Speed Dial

Your phone can store up to eight phone numbers in speed dial locations. (The number 1 is reserved for Sprint voicemail access.)

To assign a speed dial number to a contact:

1. Tap  >  >  **People**, and then tap a contact.
2. Tap  > **Set speed dial**.
3. Tap **Not assigned** under Number to select the contact's number that you want to assign to the speed dial key.
4. Tap **Not assigned** under Location and then select a speed dial location.
5. Tap **Save**.

Note: If you assign a number to an already assigned speed dial location, the new phone number will automatically replace the previous speed dial assignment.

Voice Dialing

Call a contact hands-free using your voice.

1. Tap  > .
2. Tap .
3. Say the name of contact you want to call. For example, say "Call [person's name in phonebook]."
4. Follow screen instructions to make the call.

Call a Number in a Text Message, Email Message, or Calendar Event

While viewing a text message, email, or a Calendar event that has a phone number in it, you can just tap the phone number to place a call.

- For additional information, see [Text and Multimedia Messaging](#), [Gmail](#), and [Calendar](#).

Make International Calls

When placing international calls, plus code dialing automatically adds the international dialing code for your location (for example, 011 for international calls made from the U.S.).

Notes:

- Make sure the **North American dialing** option is enabled under **Settings > Call > CDMA call settings > Plus code dialing**.

- To call someone in your contacts list, the stored phone number needs to have a "+" sign followed by the country code, area code, and phone number.

1. Tap  > .
2. Enter the first few letters of a contact name, and then tap a contact to call. If you don't have the number stored, touch and hold the  until a "+" sign appears. Then enter the country code, area code, and phone number, and tap .

❖ The Phone dialer automatically adds your international dialing code to the number.

Note: The Phone dialer dials as is and doesn't automatically add your international access code when you dial a phone number that has a "+1" in front or when there's no plus sign in front of the number.

Important: International calls may incur additional fees. Contact Sprint customer service for details.

Change the International Dialing Code


By default, the international dialing code is set to 011. When you're traveling in another country, you can set the international dialing code to your current location.

1. Tap  >  >  **Settings**.
2. Tap **Call** > **CDMA call settings** > **Plus code dialing** > **International dialing**.
3. Enter the dialing code of the country where you're located, and then tap **OK**.

Return a Missed Call

You'll see this icon  in the status bar when you missed a call.

1. Slide the notification panel open to check who the caller is.
2. To return the call, tap  on the missed call notification to expand it, and then tap **Call back**.

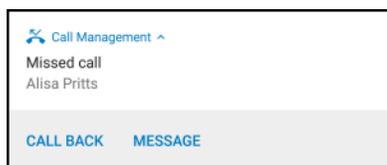

Tips:

- You can also tap the notification to display call history and then tap the entry to call it.
- If you have multiple missed calls, tap the missed calls notification to open the **Call history** tab.

Answer Phone Calls

The following information lets you know how to answer incoming calls, mute the ringer on incoming calls, reject incoming calls, and more.

When you receive a phone call from a contact, the Incoming call screen appears and displays the caller ID icon, name, and phone number of the calling party. When you receive a phone call from someone who is not stored in People, only the default caller ID icon and phone number appear on the Incoming call screen.

Notes:

- Your phone will automatically adjust the ringtone volume when you use the polite ringer and pocket mode features.
- If your phone is turned off, all calls automatically go to voicemail.

Answer or Reject an Incoming Call

- If the display is on when you get a call, tap **Answer** or **Decline**.
- If the display is locked when you get a call, drag  or  upwards.
- You can also press the **Power/Lock** button twice to reject a call.

Tip: After declining a call, you can send a text message to the caller. All declined calls go to your voicemail.


Mute the Ringing Sound without Rejecting the Call

- Press the **Volume** button.
- Briefly press the **Power/Lock** button.
- Place the phone face down on a level surface. (You can do this even on the lock screen.)

Note: If your phone is already facing down, it will still ring when there are subsequent incoming calls.

In-Call Screen Layout and Operations

While you're on a call, you will see a number of onscreen options.

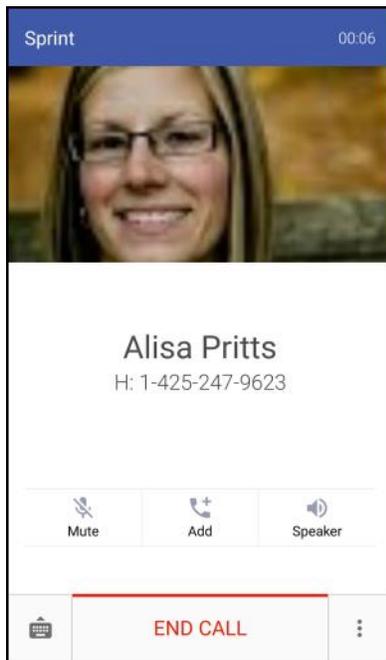

- **Mute** : Mute the microphone during an active call. Tap again to unmute the microphone.

Note: If Mute is activated, the speaker mode is deactivated.

- **Add** : Tap to add a call and initiate a conference call (3-way call).
- **Speaker** : Route the phone's audio through the speaker (On) or through the earpiece (Off).
 - Activate **Speaker** to route the phone's audio through the speaker. (You can adjust the speaker volume using the **Volume** button.)
 - Deactivate **Speaker** to use the phone's earpiece.

Warning: Because of higher volume levels, do not place the phone near your ear during speakerphone use.

- **Dialpad** : Use the onscreen dialpad to enter additional numbers, for example, an extension or access code.
 - For example: When you call your bank's 800 number, use your dialpad to enter your account number and PIN.
- Tap  to view more in-call options.
 - **People:** Display your contacts list.

- **Open contact card:** Display the caller's contact information.

End a Call

There are a couple of options for ending a phone call.

- On the call screen, tap **End call**.
- Slide the notification panel open, and then tap **Hang up** on the call notification.

If the phone number of the person who called is not in your contacts list, you can choose to save the number to your contacts list after you hang up.

Place Calls from History/People

You can also place calls directly from your contacts list or from the Call history screen.

Call From Call History

You can directly call numbers stored in your Call history.

1. Tap  > .
2. Swipe right to display the **Call history** tab.
3. Tap an entry to place a call.

Note: You cannot make calls from Call history to entries identified as **No ID** or **Restricted**.

Tip: Touch and hold an entry in the Call history list to open the options menu where you can select to view the contact information (if number is stored in People), edit the number before you call, send a text message, or delete the entry from the Call history list and more.

Call From People

Call your contacts from the People application.

1. Tap  > .
2. Swipe left to display the **People** tab.
3. Tap the contact you want to call to open the contact details screen.
4. Tap a phone number to place a call.

For additional information, see [Contacts](#).

Call History

Call history lists all recent incoming, outgoing, and missed calls. Call history makes redialing a number fast and easy. It is continually updated as your phone automatically adds new numbers to the beginning of the list.

Note: Call history records only calls that occur while the phone is turned on. If a call is received while your phone is turned off, it will not be included in History.

Open Call History

Access your Call history to quickly call someone back or see who you have talked to recently.

1. Tap  > .
2. Swipe right to display the **Call history** tab.
 - ❖ Each entry contains the phone number (if it is available) and the contact name (if the number is in People).
3. Do any of the following:
 - Tap a name or number in the list to call. See [Call From Call History](#).
 - Touch and hold a name or number in the list to display the options menu.
 - Tap a contact photo to find more ways of getting in touch with the contact.
 - Tap  to display only a particular type of call such as missed calls or outgoing calls.

Save a Number From Call History

If the phone number of a person who called is not in People, you can choose to save the number after you hang up.

1. Tap  > .
2. Swipe right to display the **Call history** tab.
3. Tap  next to the new number and choose whether to create a new contact or save the number to an existing contact.

Note: You cannot save phone numbers already in People or from calls identified as **No ID** or **Restricted**.

Prepend a Number From Call History

If you need to make a call from the Call history and you are outside your local area code, you can add the appropriate prefix by prepending the number.

1. Tap  > .
2. Swipe right to display the **Call history** tab.
3. Touch and hold the entry you want to call and tap **Edit number before calling**.
4. Enter the prefix and tap  to call the number.

Block a Caller

When you block a phone number or a contact, all calls from the phone number or contact will be declined automatically.

1. Tap  > .
2. Swipe right to display the **Call history** tab.
3. Touch and hold the contact or phone number you want to block, and then tap **Block contact** > **OK**.

Note: To remove a caller from your blocked list, on the **Call history** tab, tap  > **Blocked contacts**. Touch and hold a contact, and then tap **Unblock contacts**.

Erase Call History

If the Call history becomes long, you can delete an entry or the entire Call history list.

1. Tap  > .
2. Swipe right to display the **Call history** tab.
3. Do either of the following:
 - To delete a Call history entry, touch and hold the entry, and then tap **Delete from call history**.
 - To erase the entire Call history list, tap  > **Remove call history**. Tap  > **Select all**, and then tap **Delete**.

Voicemail

The following topics describe how to set up and use your phone's voicemail and visual voicemail features.

Voicemail Setup

Follow the instructions below to set up voicemail on your phone. You should set up your voicemail and personal greeting as soon as your phone is activated. Always use a passcode to protect against unauthorized access. Your phone automatically transfers all unanswered calls to your voicemail, even if your phone is in use or turned off.

1. Tap  > .
2. Touch and hold  to dial your voicemail number.
 - ❖ Your phone dials the voicemail access number.
3. Follow the system prompts to:
 - Create your passcode.

- Record your name announcement.
- Record your greeting.

Important: Voicemail Passcode – Sprint strongly recommends that you create a passcode when setting up your voicemail to help protect against unauthorized access. Without a passcode, anyone who has access to your phone is able to access your voicemail messages.

Visual Voicemail Setup

This topic describes the Visual Voicemail feature of your phone's service, as well as the steps required to set up Visual Voicemail on your phone.

About Visual Voicemail

Visual Voicemail gives you a quick and easy way to access your voicemail. Now you can find exactly the message you are looking for without having to listen to every voicemail message first. This feature periodically goes out to your voicemail, and gathers the caller information from all of the current voicemails. It then populates a list with the caller name and number, along with the length of time and priority level of the voicemail message.

Set Up Visual Voicemail

Setting up Visual Voicemail follows many of the same procedures as setting up traditional voicemail. You should set up your voicemail and personal greeting as soon as your phone is activated. Your phone automatically transfers all unanswered calls to your voicemail, even if your phone is in use or turned off.

Note: To set up your traditional voicemail box, see [Voicemail Setup](#).


1. Tap  >  >  **Voicemail**.
 - ❖ You'll see a Welcome to Visual Voicemail screen.
2. Scroll through the introduction screens to view a brief explanation of visual voicemail services.
3. At the end of the welcome screens, you'll come to a Personalize your voicemail prompt.
4. Tap **Personalize now** and follow the system prompts to:
 - Create a passcode (part of standard voicemail).
 - Record your name announcement.
 - Record your greeting.

Important: Voicemail Passcode – Sprint strongly recommends that you create a passcode when setting up your voicemail to help protect against unauthorized access. Without a passcode, anyone who has access to your phone is able to access your voicemail messages.

Review Visual Voicemail

Visual Voicemail lets you easily access and select which messages you want to review.

1. Tap  >  >  **Voicemail**.
2. Tap a message.

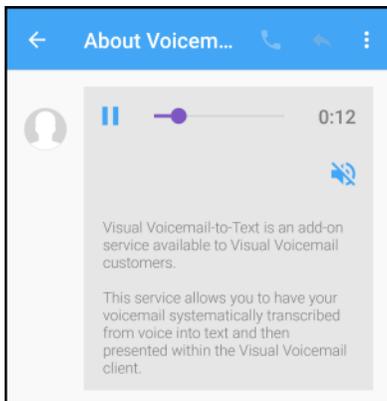

3. While reviewing a voicemail message, you can:
 - Tap  to play or  to pause the voicemail.
 - Tap  to turn the speakerphone on or off during playback.
 - Touch and drag the timeline to scrub through the message to different points.
 - Tap  to call the person who left the voicemail message.
 - Tap  to reply with a text, audio, or avatar message.
 - Tap  to delete, share, or archive the current voicemail message or to access settings and help.
 - Tap  to return to your inbox.

Note: Not all options are available for all messages.

Listen to Multiple Voicemail Messages

When you are done listening to a voicemail message you can easily access other voicemail messages without returning to the main voicemail screen.


1. Listen to the current voicemail message.
2. Swipe your finger left or right to display the next or previous message.
 - ❖ The next or previous message will begin playing automatically.

You can navigate through voicemail messages as frequently as you'd like. You can even move to the next or previous message before you're finished listening to the current one.

Visual Voicemail Options

Your visual voicemail options appear as icons at the bottom of the voicemail review screen.

1. Tap  >  >  **Voicemail**.
2. Your Visual Voicemail inbox appears.

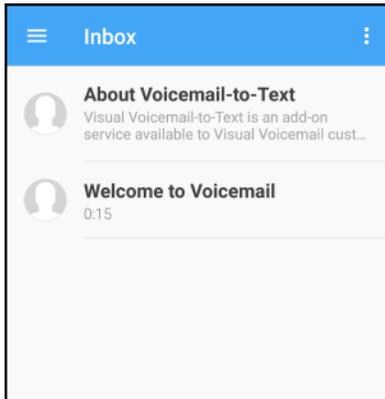

3. Do any of the following:
 - Tap to access your voicemail folders such as all your received, sent and archived voicemail messages.
 - Tap  to create a new voice SMS, a new avatar message, search your voicemail messages, or shop for avatars and backgrounds. You can also access the settings and help from this menu.

Configure Visual Voicemail Settings

The Visual Voicemail settings menu lets you access settings for notifications, pictures, greetings, and more.

1. Tap  >  >  **Voicemail**.
2. Tap  > **Settings**.
 - ❖ You will see the voicemail settings menu.
3. Select an option to change its settings.

Change Your Main Greeting via the Voicemail Menu

Your main greeting can be changed directly via the Visual Voicemail system. This direct access saves you from having to navigate within the voicemail menu.

1. Tap  >  >  **Voicemail**.
2. Tap  > **Settings** > **Preferences** > **Personalize voicemail**.

3. Tap **OK** to connect to the voicemail system. Follow the prompts to change your current greeting.

Edit the Display Name via the Voicemail Menu

From your Visual Voicemail menu, you can quickly change the name or number attached to your voice messages.

1. Tap  >  >  **Voicemail**.
2. Tap  > **Settings** > **Display** > **Display name**.
3. Tap the existing identification field and enter a new identifying name or number (used to identify you to recipients of your voice messages).
4. Tap **OK** to save your information.

Optional Calling Services

The following topics outline additional voice-related services available with your phone, including Wi-Fi calling, call services and more.

Wi-Fi Calling

Wi-Fi Calling uses Wi-Fi networks to help improve voice and data coverage. It sends and receives calls and text messages over a connected Wi-Fi network and may offer better coverage in buildings and areas of poor cellular reception.

Set Up Wi-Fi Calling

1. Tap  >  >  **Settings**.
 2. Tap **Wi-Fi Calling**, and then tap the switch to turn Wi-Fi Calling on.
 3. Follow the screen prompts to set up Wi-Fi Calling.
- ❖ Wi-Fi Calling is set up. You will see  in the status bar when Wi-Fi Calling is active, or  if Wi-Fi Calling is set up but you are not currently connected to a Wi-Fi network.

Tip: For more information about Wi-Fi Calling, visit support.sprint.com.

Enable or Disable Wi-Fi Calling

1. Tap  >  >  **Settings**.
2. Tap the **Wi-Fi Calling** On/Off switch.

Tip: You can also turn Wi-Fi Calling on or off through the Quick Settings panel. Swipe down the screen from the status bar to display the minimized Quick Settings panel and tap  to enable or disable the feature.

Conference Calling

With conference calling, also known as 3-way calling, you can talk to two people at the same time. When using this feature, the normal airtime rates will be charged for each of the two calls.

1. Tap  > .
2. Dial a number and tap **Call**.
3. Once you have established the connection, tap **Add**, and dial the second number. (This puts the first caller on hold and dials the second number.)

Tip: You can add a call even if the first call was an incoming call.

4. When you're connected to the second party, tap .

If one of the people you called hangs up during your call, you and the remaining caller stay connected. If you initiated the call and are the first to hang up, all callers are disconnected.

- To end the three-way call, tap **End call**.

Caller ID Blocking

Caller ID identifies a caller before you answer the phone by displaying the number of the incoming call. If you do not want your number displayed when you make a call, follow these steps.

1. Tap  > .
2. Tap   .
3. Enter a phone number.
4. Tap **Call**.

To permanently block your number, call Sprint Customer Service.

Call Waiting

When you're on a call, Call Waiting alerts you to incoming calls by sounding two beeps. Your phone's screen informs you that another call is coming in and displays the caller's phone number (if it is available and you are in digital mode).

To respond to an incoming call while you're on a call:

1. Tap **Answer**.
 - ❖ This puts the first caller on hold and answers the second call.
2. To switch back to the first caller, tap the contact on the screen.

Note: For those calls where you don't want to be interrupted, you can temporarily disable Call Waiting by tapping    before placing your call. Call Waiting is automatically reactivated once you end the call.

Call Forwarding

Call Forwarding lets you forward all your incoming calls to another phone number – even when your phone is turned off. You can continue to make calls from your phone when you have activated Call Forwarding.

Note: Depending on your plan, you may be charged a higher rate for calls you have forwarded.

To activate Call Forwarding:

1. Tap  > .
2. Tap   .
3. Enter the area code and phone number to which you want your calls forwarded.
4. Tap **Call**. (You will hear a tone to confirm the activation of Call Forwarding.)
 - ❖ You will hear a tone to confirm the activation of Call Forwarding. All calls to your wireless number will be forwarded to the designated phone number.

To deactivate Call Forwarding:

1. Tap  > .
2. Tap    .
3. Tap **Call**. (You will see a message and hear a tone to confirm the deactivation.)
 - ❖ You will hear a tone to confirm the deactivation.

Internet Calls

When you're connected to a Wi-Fi network, you can make and receive calls through an Internet calling account.

Note: Before you add an Internet calling account, make sure that you've registered with an Internet calling service that supports voice calls over Session Initiation Protocol (SIP). Internet calls to phone numbers may incur additional fees.

Add an Internet Calling Account

You must add an Internet calling account before you can make Internet calls.

1. Tap  >  >  **Settings** > **Call**.
2. Under Other call settings, tap **Calling accounts**.

3. Tap **Internet calling (SIP) accounts** and tap .
4. Enter your account details.
5. Tap  > **Save**.
6. To set your phone to receive Internet calls on your added account, select the **Receive incoming calls** option.

Make an Internet Call

Make an Internet call to either your contact's Internet calling account or phone number.

- **Internet calling account**
 - In People, tap a contact who has an Internet calling account, and then tap **Internet call**.
 - In Call History, tap an Internet call log.
- **Phone number**. First, enable Internet calling for your outgoing calls. Tap  >  >  **Settings > Call > Calling accounts**. Tap **Use Internet calling**, and then select either **For all calls** or **Only for Internet calls**.

Ringtone Settings

You can change how your phone alerts you when you receive calls.

Switch Between Silent, Vibrate, and Normal Modes

- To change from silent to normal mode, press the **Volume** up button.
- To change from vibrate to normal mode, press the **Volume** up button twice.
- Swipe down from the status bar, and then tap  > **Sound & notification > Sound profile**.

Lower the Ring Volume Automatically

Your phone has a quiet ring feature that automatically lowers the ring volume when you move it.

1. Swipe down from the status bar, and then tap  > **Sound & notification**.
2. Select the **Quiet ring on pickup** option.

Make Your Phone Ring Louder in Your Pocket or Bag

To help avoid missing incoming calls when your phone is in your pocket or bag, the pocket mode feature gradually increases the ring volume and vibrates when you receive a call.

1. Swipe down from the status bar, and then tap  > **Sound & notification**.
2. Select the **Pocket mode** option.

Call Settings

Your phone's Call settings menu lets you configure your voicemail options and a number of accessibility options such as hearing-aid amplification and teletypewriter.

Call Features

Use these options to set various call features.

1. Tap  >  >  **Settings**.
2. Tap **Call**.
3. Set the following:
 - **Auto answer calls:** Select this option to automatically answer incoming calls just by lifting the phone to your ear.
 - **Show declined call options:** Select to enable text message and reminder options for declined calls.
 - **Save to People:** Select to add unknown numbers to the People list after the call.

Voicemail Settings

Use this menu to check your voicemail settings such as the voicemail service provider and voicemail number.

1. Tap  >  >  **Settings**.
2. Tap **Call**.
3. Tap **Voicemail service** or **Voicemail settings**.

Hearing Aids

Select the **Hearing aids** option to enable hearing aid compatibility that amplifies your phone's in-call volume.

1. Tap  >  >  **Settings**.
2. Tap **Call**.
3. Select the **Hearing aids** option.
4. Select **Sidetone** to get voice feedback in a hearing aid.

CDMA Call Settings

Use these options to enable hearing aid compatibility, and adjust several call settings, such as teletypewriter (TTY) mode.

1. Tap  >  >  **Settings**.

2. Tap **Call**.
3. Tap **CDMA call settings**.

TTY (Teletypewriter) Mode

TTY mode allows people who have hearing or speech impediments to communicate by telephone. HTC Bolt is compatible with select TTY phones. Contact your TTY phone manufacturer to see if the phone supports digital wireless transmission. HTC Bolt and the TTY phone connect using a special cable that may come with the TTY phone. If this cable was not provided with your TTY phone, contact your TTY phone manufacturer to purchase the connector cable. Most TTY phones connect via a 2.5 mm headset jack adapter. HTC provides a 2.5 mm headset jack adapter that connects to the USB Type-C port on HTC Bolt. To request this adapter, contact HTC at htc.com/us/contact/phone.

When establishing your Sprint service, please call Sprint Customer Service using the state

Telecommunications Relay Service (TRS) by first dialing    . Then provide the state TRS with this number: **866-727-4889**.

To turn TTY Mode on or off:

1. Tap  >  >  **Settings**.
2. Tap **Call**.
3. Tap **CDMA call settings > TTY mode**.
4. Tap **TTY Full**, **TTY HCO**, or **TTY VCO**. Tap **TTY Off** to turn TTY mode off.

Note: When enabled, TTY mode may impair the audio quality of non-TTY phones connected to the headset jack.

Warning: 9-1-1 Emergency Calling

Sprint recommends that TTY users make emergency calls by other means, including Telecommunications Relay Services (TRS), analog cellular, and landline communications. Wireless TTY calls to 9-1-1 may be corrupted when received by public safety answering points (PSAPs), rendering some communications unintelligible. The problem encountered appears related to TTY equipment or software used by PSAPs. This matter has been brought to the attention of the FCC, and the wireless industry and the PSAP community are currently working to resolve this.

Other CDMA Call Settings

Select these options to enhance voice privacy, prepend numbers automatically, or use plus code dialing.

1. Tap  >  >  **Settings**.
2. Tap **Call**.
3. Tap **CDMA call settings** and select or customize these options.
 - **Automatic prepend:** Select to automatically add "1" for long distance calls.

- **Plus code dialing:** Tap to set plus code dialing. See [Place and Answer Calls](#) for details.

Contacts

The Contacts application lets you store and manage contacts from a variety of sources, including contacts you enter and save directly in your phone as well as contacts synchronized with your Google Account, your PC, compatible email programs (including Exchange Server), and your Facebook friends.

! Contacts Cautions

Information saved in Contacts may be lost or changed if the battery is removed for a long period or left uncharged. Accident or malfunction may also cause loss or change to information. It is recommended that you keep a separate copy of contacts and other important information. Sprint is not responsible for any damages from lost or changed contacts.


Your Contacts List

The People app lists all contacts stored on your phone and from the online accounts you're logged in to.

Contacts Screen Layout

- Tap  >  >  **People**.

- ❖ The following illustration shows your Contacts app layout and describes the various features.

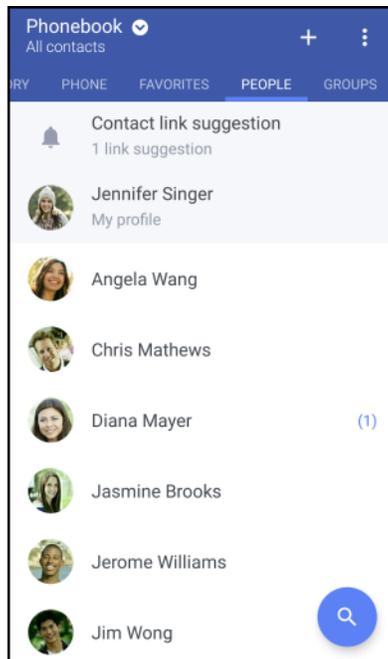

Item	Description
Groups tab	Show contact groups.

Favorites tab	Show all contacts.
People tab	Show favorite contacts.
Contact name	Tap to show contact's details. This also shows when a contact has sent you new messages.
Contact image	Tap to find ways to quickly connect with the contact.
Contact link suggestion	Tap to manage contacts from your social network and Web-based email accounts.
My profile	View your profile and edit your contact information.
Menu 	Tap to manage your contacts list.
Search 	Search contacts.
Add new 	Add a new contact.

Tips:

- You can also access People through the Phone app. Tap  >  and then swipe left until you reach the **People** tab.
- To sort your contacts by their first or last name, tap  > **Settings** > **Sort contacts by**.

Filter Your Contacts List

When your contacts list gets long, you can choose which contact accounts to show.

- Tap  >  >  **People**.
- On the **People** tab, tap  on the top bar.
- Select the online accounts that contain the contacts you want to display.
- Tap .

Find People

Search for contacts stored on your phone, your company directory if you have an Exchange ActiveSync account, or social networks you've signed into.

- Tap  >  >  **People**.
- On the **People** tab, you can:

- Find people in your contacts list. Tap , and then enter the first few letters of the contact name in the **Search people** box.
- Find people on your company directory. Tap , enter the first few letters of the contact name in the **Search people** box, and then tap **Search contacts in your Company Directory**.

Tip: Aside from searching for a contact by name, you can search using a contact's email address or company name. On the **People** tab, tap  > **Settings** > **Search contacts by**, and then choose a search criteria.

Set Up Your Profile

Your profile stores your personal contact information in an easy-to-access location.

1. Tap  >  >  **People** > **My profile**.
2. Tap **Edit my contact card**.
3. Enter or edit your name and contact details.
4. Tap your current profile photo or icon to change it.
5. Tap .

Aside from your contact details, your profile also shows updates you've posted on your social networks.

Emergency Information

To make it easier for emergency personnel to identify important contacts and personal information, you can select your emergency contacts and enter your emergency information right in your profile. These information will show on the emergency calling screen.

1. Tap  >  >  **People** > **My profile**.
2. Tap **Emergency Information** under the Information section.
3. Tap **Select emergency contacts**.
 - ❖ You will be redirected to your Emergency contacts group.
4. Add contacts to your Emergency contacts group, and then tap .
5. Tap **Emergency medical information**, and then enter your emergency information.
6. Tap .

Add Entries to the People App

You can add new contacts to the People app or add existing ones from your social network or Exchange ActiveSync accounts.

Add a New People Entry

Start adding your contacts on your phone. If you've set up an email account on your phone, you can sync your new contacts with that account.

1. Tap  >  >  **People**.
2. Tap .
3. Tap the "Name" field, and then enter the contact name.

Note: Tap  to separately enter the contact's given, middle, and family, and name suffix (such as Jr.).

4. Select the Contact type. This determines which account the contact will sync with.
5. Enter the contact information in the fields provided.
6. Tap .

When you tap the added contact on your contacts list, you'll see the contact information and your exchange of messages and calls. Depending on the information that you've added to the contact (such as an email address), you'll also be able to see the contact's social network updates, events, and photos.

Add an Extension Number to a Contact Number


While creating a new contact in People, you can add an extension number to their number so you can skip the voice prompts when calling.

1. After entering the number of the main line, do one of the following:
 - Tap **P** to insert a pause (,) before the extension number is dialed automatically. To make the pause longer, tap **P** again.
 - Tap **W** to insert a wait (;) and be prompted to confirm the extension number.
2. Enter the extension number.
3. Tap .

Get in Touch with a Contact

Choose the best way to connect with your contacts.

1. Tap  >  >  **People**.
2. Tap a contact's photo (not the name), and then choose how you want to get in touch with that contact.

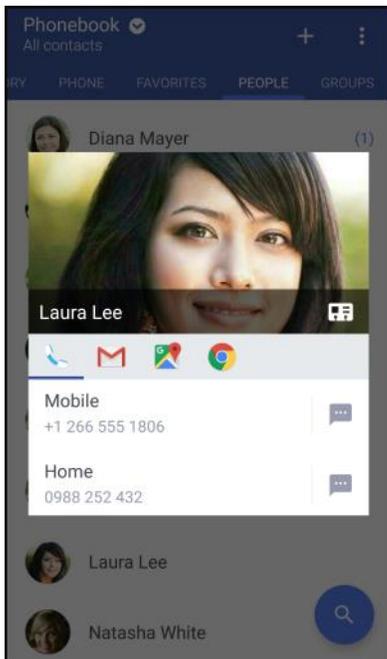

Tip: For more ways of getting in touch with your contact, tap an icon below the contact photo.

Manage People Entries

Make sure your contacts' information are up to date. You can edit or delete an entry in People.

Edit a People Entry

You can add another phone number, email address, or assign a photo to a contact in People.

Note: Facebook and Twitter contacts cannot be edited.

1. Tap  >  >  **People**.
2. On the **People** tab, touch and hold the contact, and then tap **Edit contact**.
3. Enter the new information.
4. Tap .

Delete an Entry

Follow these steps to delete an entry in your contacts list.

1. Tap  >  >  **People**.
2. On the **People** tab, touch and hold the contact, and then tap **Delete contact**.
3. Tap **OK** to confirm.

Delete Multiple Entries

Clean up your contacts list by deleting entries that you no longer need.

1. Tap  >  >  **People**.
2. On the **People** tab, tap  > **Delete contacts**.
3. Select the entries you want to delete, and then tap **Delete**.

Import or Copy Contacts

It's easy to import or copy contacts from your online accounts and save them directly to your phone.

Import a Contact from an Exchange ActiveSync Account

1. Tap  >  >  **People**.
2. On the **People** tab, tap  and enter the contact's name or email address in the search box.
3. Tap **Search contacts in your Company Directory**.
4. Tap the name of the contact you want copied to your phone.
5. Tap  to save the contact to your phone.

Copy Contacts from One Account to Another

1. Tap  >  >  **People**.
2. On the **People** tab, tap  > **Manage contacts**.
3. Tap **Copy contacts**, and then choose a contact type or online account to copy from.
4. Select a contact type or account you want to save to.

Note: Contacts from your social network accounts may not be copied.

Merge Entries in People

If you have the same contacts on your phone, Google Account, and social network accounts such as Facebook and Twitter, your phone will try to combine them automatically or let you decide which contacts to combine. Combining the same contacts avoids duplicated entries in your contacts list.

Accept Contact Link Suggestions

When your phone finds contacts that can be merged, you'll see a link notification when you open the People app.

1. Tap  >  >  **People**.

2. On the **People** tab, tap the **Contact link suggestion** notification when available. You'll see a list of suggested contacts to merge.
3. Navigate to the contact you want to merge.
4. Tap  to merge. Otherwise, tap  to ignore the contact link suggestion.

Note: If you don't want to receive contact link suggestions, on the **People** tab, tap  > **Settings**. Clear the **Suggest contact link** option.

Manually Merge Entries

You can merge your entries manually and choose the accounts to link the contact.

1. Tap  >  >  **People**.
2. On the **People** tab, tap the name of the contact (not the icon or photo) you want to link.
3. Tap  > **Link**.
4. You can:
 - Under Suggest links, tap  to link the contact to an account.
 - Under Add contact, tap one of the options to link to another contact.
5. Tap **Done** to save the change.

Break the Link

When contact information has changed, you can choose to break the contact's link from another account.

1. Tap  >  >  **People**.
2. On the **People** tab, tap the name of the contact (not the icon or photo) whose link you want to break.
3. Tap  > **Link**.
4. Under the Linked contacts section, tap  beside an account to break the link.
5. Tap **Done** to save the change.

Send Contact Information

Quickly share your contact card or People entries on your phone.

1. Tap  >  >  **People**.
2. Do any of the following:

- To send someone's contact information, touch and hold the name of the contact (not the icon or photo), and then tap **Send contact as vCard**.
 - To send your contact information, touch and hold **My profile**, and then tap **Send my profile**.
3. Tap **Send contact via** and choose how you want to send the vCard.
 4. Select the type of information you want to send.
 5. Tap **Send**.

Send Multiple People Entries

1. Tap  >  >  **People**.
2. Tap  > **Send contacts**.
3. Select the contacts whose contact information you want to share.
4. Choose how you want to send the contact cards.
5. Follow screen instructions to proceed.

Share All Visible Contacts

You can share all entries that appear in your contacts list, regardless of the online account that your contacts sync with.

1. Tap  >  >  **People**.
2. Tap  > **Manage contacts** > **Import/Export contacts** > **Share visible contacts**.
3. Choose how you want to send your contacts.

Contact Groups

Organize your friends, family, and colleagues into groups so you can quickly send a message or email to everyone in the group. We've also set up the Frequent group to automatically add the contacts you dial or get calls from the most.

Your phone also syncs with groups you've created in your Google Account.

Create a Group

Create a group for your sporting buddies or family members so you can easily send them a message or email.

1. Tap  >  >  **People**.
2. On the **Groups** tab, tap .

3. Enter a name for the group.
4. Tap  > **Add contact to group**.
5. Select the contacts you want to add, and then tap **Save**.

Send a Message or Email to a Group

Easily send a message or email to all members of the group.

1. Tap  >  >  **People**.
2. On the **Groups** tab, tap the group you want to send a message or email to.
3. Go to the **Group action** tab.
4. Choose if you want to send a text message or email.
5. Follow the prompts to complete and send the group message or group mail. See [Send a Text Message \(SMS\)](#) or [Create and Send a Gmail Message](#).

Edit a Contact Group

You have full control of your groups. Change the group name or add and remove group members from the People app.

1. Tap  >  >  **People**.
2. On the **Groups** tab, touch and hold the group, and then tap **Edit group**.
3. You can:
 - Tap the group name to change the name. You can only change the name for groups that you have created.
 - Tap  > **Add contact to group** to add more members.
 - To rearrange the group members, drag  at the end of the contact's name to its new position.
 - Select the check box next to any contacts you want to remove from the group.
4. Tap **Save**.

Manage Your Contact Groups

Put your favorite group at the top of the groups' list or delete groups that you don't need.

1. Tap  >  >  **People**.
2. On the **Groups** tab, tap  > **Edit groups**.

3. You can:
 - Rearrange the contact groups. Drag  at the end of the group name to its new position.
 - Select the contact groups you want to remove.
4. Tap **Save**.

Back Up and Restore Your Contacts

Make sure you don't lose your contacts by backing them up to your phone's storage or microSD card (if you inserted one).

Back Up Contacts

1. Tap  >  >  **People**.
2. Tap  > **Manage contacts**.
3. Tap **Import/Export contacts** > **Export to phone storage** or **Export to SD card**.
4. Select an account or type of contacts to export.
5. To help protect your data, tap **Yes**, and then set a password for this backup. Be sure to remember this password. You'll need to enter it again when importing contacts. If you don't need a password, tap **No**.
6. Tap **OK**.

Restore Contacts

Note: You can only restore contacts that were backed up using the **Export to phone storage** feature.

1. Tap  >  >  **People**.
2. Tap  > **Manage contacts**.
3. Tap **Import/Export contacts** > **Import from phone storage** or **Import from SD card**.
4. If you have more than one account set up, tap the type for the imported contacts.
5. If you have multiple backups available, select the backup you want to import, and then tap **OK**.
6. Enter the password you've set for this backup, and then tap **OK**.

Private Contacts

If you don't want to show a contact's name and photo on the lock screen when you have an incoming call, add the contact to your private contacts list.

Add a Contact to the Private Contacts List

1. Tap  >  >  **People**.
2. Touch and hold the contact, and then tap **Add to private contacts**.
3. To view your private contacts list, on the **People** tab, tap  > **Manage contacts** > **Private contacts**.

Organize Your Private Contacts

1. Tap  >  >  **People**.
2. On the **People** tab, tap  > **Manage contacts** > **Private contacts**.
3. To add contacts to the private contacts list, tap , select the contacts you want to add, and then tap **Save**.

To remove private contacts from the list, tap  > **Remove private contact**, select the contacts you want to remove, and then tap **Remove**.

Messaging

With wireless service and your phone's messaging and data capabilities, you have the opportunity to share information through many different channels and accounts, including Gmail (Google), personal and corporate email, and text and multimedia messaging.

Text and Multimedia Messaging

With Google Messenger, you can send and receive instant text (SMS) and multimedia (MMS) messages between your wireless phone and another messaging-ready phone.


MMS can contain text and pictures, recorded voice, audio or video files, or contact cards (vCard).

See your service plan for applicable charges for messaging.

Send a Text Message (SMS)

Quickly compose and send text messages on your phone.

1. Tap  >  >  **Messenger**.
2. Tap .
3. Enter a contact name or mobile number in the "To" field. Or select a contact from the **Frequents** or **All contacts** tab.
4. Tap the "Send message" box and then start composing your message.

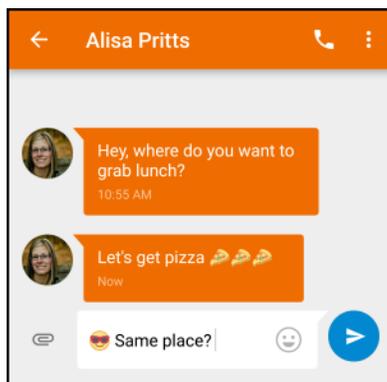

Note: A counter appears below the message bubble to tell you how many characters you have entered and how many characters are left for a single message. Once you go over the character limit, a new message is created but automatically joined into one when received.

5. Tap  to send, or tap  to save the message as a draft.

Note: Your text message automatically becomes a multimedia message if you enter an email address as the recipient, add a message subject, attach an item, or compose a very long message.

Send a Multimedia Message (MMS)

When you need to add a little more to a text message, you can send a multimedia message (MMS) with pictures, voice recordings, audio or video files.

1. Tap  >  >  **Messenger**.
2. Tap .
3. Enter a contact name or mobile number in the "To" field. Or select a contact from the **Frequents** or **All contacts** tab.
4. Tap  and then select an attachment type.
5. Tap the "Send message" box then start composing your message.
6. Tap  to send, or tap  to save the message as a draft.

Note: Depending on the resolution of your photo or video attachments, they may be displayed as cropped thumbnails in your multimedia message.

Send a Group Message

Group messaging makes it easy to send a message to multiple contacts all at once. You can choose to send a group SMS or group MMS.

Notes:

- You will be charged for each text message sent. For example, if you send a message to a group of five people, you will be charged for five messages.
- Group MMS may incur extra data fees.

1. Tap  >  >  **Messenger**.
2. Tap .
3. Enter a contact name or mobile number in the "To" field. Or select a contact from the **Frequents** or **All contacts** tab.
4. Tap , select another recipient, and then tap .
5. Tap the "Send message" box then start composing your message.
6. Tap  to send, or tap  to save the message as a draft.

Group MMS FAQs

Question: Why can't my recipients see or join the group MMS I sent them?

Answer: Check whether your recipients have enabled Group messaging on their mobile devices. Some devices or mobile operators may not support this feature.

Save and Resume Composing a Draft Message

While composing a text or multimedia message, tap  to automatically save your message as a draft. You can resume composing a draft message.

1. Tap  >  >  **Messenger**.
2. Tap the draft message, edit the message, and then tap .

Read and Reply to a Message

Depending on your notification settings, the phone plays a ringtone, vibrates, or displays the message briefly in the status bar when you receive a new text or multimedia message. To change the notification for new text and multimedia messages, see [Messenger Options](#). A new message icon () also appears in the status bar.

1. To open and read the message, you can:
 - Open the notification panel, and then tap the new message.
 - Tap  >  >  **Messenger**, and then tap the message.
2. While reading the message, you can:
 - **Reply with a text message.** Tap the "Send message" box, enter your reply message, and then tap .
 - **Reply with a multimedia message.** Tap the "Send message" box, enter your reply message, tap  to choose an attachment for your message, and then tap .
 - **Call or save a phone number contained in the message.** Tap the phone number, and then choose whether to call the number or add it to your contacts.
 - **Open a link in the message.** Tap the link to open it in the Web browser.
 - **Send to an email address contained in the message.** Tap the email address to send an email.
 - **Check message details.** Touch and hold the message (do not tap a link or a phone number) and then tap .

Forward a Message

1. Tap  >  >  **Messenger**.
2. Tap a contact (or phone number) to display the exchange of messages with that contact.

3. Touch and hold the message, and then tap .
4. Tap the recipient from the window, or tap  to select another contact.
5. Tap  to send, or tap  to save the message as a draft.

View and Save an Attachment from a Multimedia Message

When you receive a multimedia message, you can view and save files that are attached to it.

- If there's a media attachment such as a photo or video in a received message, tap it to view the content and tap .
- If the attachment is a contact (vCard), tap it to view the contact information, and then tap  to add to your contacts.

Note: If you are concerned about the size of your data downloads, you can choose to check the size and subject first before you download a multimedia message. On the Messenger main screen, tap  > **Settings** > **Advanced**. Turn off the **Auto-retrieve** option.

Block Unwanted Messages

Declutter your Messenger screen by moving spam messages from contacts to the block box. If you have blocked a contact, that contact's messages will also be in the block box.

1. Tap  >  >  **Messenger**.
2. Touch and hold a contact (or phone number) and tap .
 - ❖ When the contact sends you messages, you will not see them in the messages screen or receive notifications and calls.
3. To read messages from a blocked contact or number, on the messages screen, tap  > **Archived**.
4. To see all contacts and numbers you blocked, tap  > **Blocked contacts**.

Unblock a Contact or Number

1. Tap  >  >  **Messenger**.
2. Tap  > **Archived** and tap the blocked contact (or phone number).
3. Tap  > **People & options**, and tap **Unblock**.
 - ❖ The contact or phone number is unblocked and the conversation is moved back to the messages screen.

Delete Messages and Conversations

Tidy up your messages list by deleting old messages and conversations.

1. Tap  >  >  **Messenger**.
2. To delete a single conversation, touch and hold the contact (or phone number), and then tap .
To delete multiple conversations, touch and hold the conversations to select, and then tap .
3. To delete a message within a conversation, touch the contact (or phone number) to open the conversation thread, touch and hold the message you want to delete, and then tap .

Messenger Options

You can set how your phone receives a multimedia message, or set other messaging options.

1. Tap  >  >  **Messenger**.
2. On the messages screen, tap  > **Settings**. You can set the following options:
 - **Default SMS app:** Select which app to use to send and receive text and multimedia messages.
 - **Outgoing message sounds:** Enable this option to hear a sound when your text or multimedia message is sent.
 - **Notifications:** Enable this option to display a notification in the notification panel when you receive a text or multimedia message.
 - **Sound:** Select the outgoing message and notification sound.
 - **Vibrate:** Enable this option if you want the phone to vibrate when you receive a text or multimedia message.
 - **Your current country:** Auto-detects your current location.
 - **Advanced: MMS**
 - **Group messaging:** Select whether to send individual SMS messages or a single MMS to all recipients in a group message.
 - **Your phone number:** Enable or change the callback number for MMS.
 - **Auto-retrieve:** Select this option to automatically retrieve all your multimedia messages completely. When selected, the multimedia message header plus the message body and attachments will automatically download to your phone. If you turn this off, only the multimedia message header will be retrieved and shown in the messages screen.
 - **Roaming auto retrieve:** Select this option to automatically retrieve all your multimedia messages completely while roaming. Data roaming charges will apply.
 - **Advanced: Advanced Settings**

- **Simple characters only:** Enable this option to convert special characters in SMS messages you send.
- **Wireless alerts:** Tap to see emergency alerts and cell broadcasts.
- **SIM card messages:** Displays the messages stored on your nano SIM card.

Gmail

Use Google's Gmail service and your Google Account to send, receive, and manage your Gmail messages. Before using Gmail, you must register a Google (Gmail) Account on your phone. See [Google Account](#) for details.

Gmail Cautions

Gmail is handled as email from a PC. Restricting email from PCs on your phone prevents your phone from receiving Gmail.

Create and Send a Gmail Message

Create and send an email message from your Gmail account.

1. Tap  >  >  **Gmail**.
2. In the inbox of the Gmail account you want to use, tap .
3. Fill in one or more recipients.

Note: If you want to send a carbon copy (Cc) or a blind carbon copy (Bcc) of the email to other recipients, tap  next to the "To" field.

4. Enter the email subject, and then compose your email.
5. If you want to attach a photo, video, or file, tap  > **Attach file**, select the source of the attachment, and then select the file to attach.
6. Tap  to send.


Note: While composing the message, tap  > **Save draft** to save it as a draft. To discard the message, tap  > **Discard**.

Check Received Gmail Messages

Your phone allows you to access, read, and reply to all your Gmail messages. All your received emails are delivered to your Inbox.


1. Tap  >  >  **Gmail**.

- ❖ The inbox opens.

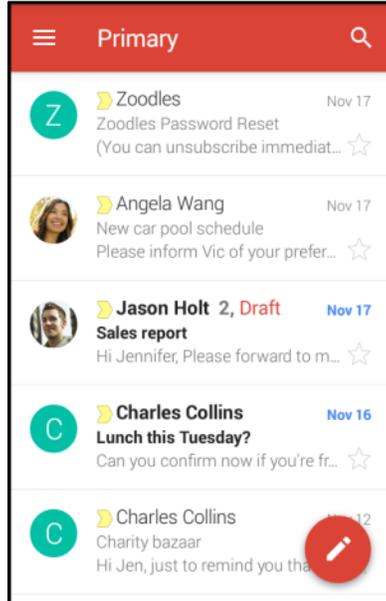

2. Do any of the following from your Inbox.

- Tap an email message (not the sender image or letter tile) to read, forward, or reply to the message.
- Tap  to change the inbox category (for example, **Social**), switch to your other Gmail account, or to display drafts, sent messages, or other email labels and categories.
- Tap the sender image or letter tile to select one or more messages or conversations. You can then tap the onscreen buttons at the top bar to archive, delete, or mark the selected messages or conversations.

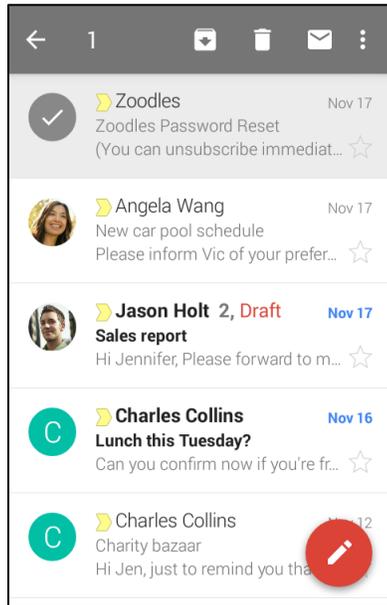

Manage Gmail Messages

Your phone gives you control over how you manage your Gmail messages with labels, thread management, search capabilities, adding multiple Google Accounts, and more.

Reply To or Forward an Email Message

Use your Gmail Account to reply to or forward email messages.

1. Tap  >  > .
- ❖ The inbox opens.
2. Tap the email message or conversation.
3. To reply to the sender, tap . Or, tap  and choose whether to **Reply all** or **Forward**.
4. Do one of the following:
 - If you are replying to the sender or you selected **Reply all**, enter your reply message.
 - If you selected **Forward**, specify the message recipients.

Note: Tap **respond inline** if you want to interleave your new message with the received email. However, this removes any attachments or formatting in the original email message.

5. Tap  to send.

Use Gmail Labels

Gmail saves all mail in one box, but you can add labels that allow you to sort your Gmail conversation threads. For example, when a new thread starts with a received mail, the label "Inbox" is automatically added to the thread. By then adding the label "travel," all threads with "travel" are shown in a list.

1. Tap  >  >  **Gmail**.
 - ❖ The inbox opens.
2. Touch and hold a conversation thread to add a checkmark to it, and then tap  > **Move to**.
3. Tap a label for the thread, and then tap **OK**.
 - ❖ The thread is added to the selected label.

Mute Gmail Threads

If registered on a mailing list, there will be threads with always-continuing conversations. For long threads that are not important, mute the threads and they will no longer appear in the inbox. When mail arrives that includes user's address as a recipient or in Cc, mail will again appear in the inbox.

1. Tap  >  >  **Gmail**.
 - ❖ The inbox opens.
2. Touch and hold a conversation thread to add a checkmark to it, and then tap  > **Mute**.
 - ❖ The thread is now hidden.

Archive Gmail Threads

Remove sent and received Gmail threads so they do not appear in the inbox. When replies arrive for archived threads, they appear in the inbox again.

1. Tap  >  >  **Gmail**.
 - ❖ The inbox opens.
2. Swipe the conversation you want to archive left or right.
 - ❖ The thread is now archived.

Delete Gmail Threads

If you no longer wish to keep a Gmail conversation thread, you can simply delete it from the inbox.

1. Tap  >  >  **Gmail**.
 - ❖ The inbox opens.

2. Touch and hold a conversation thread to add a checkmark to it, and then tap .

- ❖ The thread is deleted.

Search Gmail Messages

If you need to find a specific message or message thread, you can search Gmail from the inbox.

1. Tap  >  >  **Gmail**.

- ❖ The inbox opens.

2. Tap , enter what you want to search for and tap **Search** on the keyboard.

- ❖ The search results appear. Tap a message or thread from the list to display it.

Report Spam or Phishing Gmail

You can report spam or phishing Gmail messages from your phone's Gmail inbox.

1. Tap  >  >  **Gmail**.

- ❖ The inbox opens.

2. Touch and hold a conversation thread to add a checkmark to it, and then tap  > **Report spam** or **Report phishing**.

- ❖ The selected message is reported as spam or phishing Gmail.

Switch between Gmail Accounts

If you have more than one Gmail account or another email account set up, you can switch between them in the Gmail app.

1. Tap  >  >  **Gmail**.

- ❖ The inbox opens.

2. Tap  and select the account you want to access.

- ❖ The selected account inbox is displayed.

Gmail Settings

You can access settings for the Gmail app and for your individual Gmail accounts from the Gmail Settings menu.

1. Tap  >  >  **Gmail**.

- ❖ The Primary inbox opens.

2. Tap  > **Settings**.
3. Tap **General settings** to access settings for all accounts, or tap an **account name** to configure settings for a specific Gmail account.
 - **General settings:** Gmail default action, Conversation view, Swipe actions, Sender image, Reply all, Auto-fit messages, Auto-advance, Confirm before deleting, Confirm before archiving, and Confirm before sending.
 - **Account settings:** Inbox type, Inbox categories, Notifications, Inbox sound & vibrate, Signature, Vacation responder, Sync Gmail, Days of mail to sync, Manage labels, Download attachments, and Images.

Note: Available settings are subject to change.

Add a Gmail Account

If you have two or more Gmail accounts, you can add them on your phone and easily switch between accounts in Gmail.

- To add another Gmail account, see [Create a Google Account](#).


Add an Exchange ActiveSync Account in Gmail

If you synchronize your phone with your Exchange ActiveSync account, you can read, manage, and send email in the same easy way as with a Gmail account.

Important: Ask your network administrator or email service provider for additional email settings that you may need such as the server address and client certificate.

1. Tap  >  >  **Settings > Accounts & sync**.

2. Tap **+** > **Exchange**.

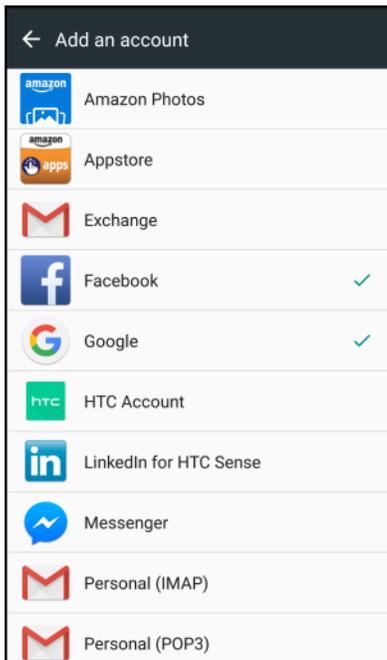

3. Enter the email address and password for your email account, and then tap **Next**.
4. In the Incoming server settings screen, you can set the following options:
 - **Client certificate:** Tap **Select** and choose the client certification, if required.
 - **Server:** Enter the server address.
 - **Port:** Enter the port number.
 - **Security type:** Tap to select the security type if your system requires SSL encryption.
5. Tap **Finish**.
 - ❖ Your corporate email account is set up and you will begin receiving email for the account in Gmail.

Get Help with Gmail

Find out more about how to use Gmail.

- In the Gmail inbox, tap **☰** > **Help & feedback**.

Internet and Social Networking

Understand your phone's data connection and start your social networking with handy apps that are readily available on your phone.

Data Services General Information (4G LTE and 3G Networks)

The following topics will help you learn the basics of using your data services, including managing your user name, launching a data connection, and navigating the Web with your phone.

Important: Certain data services requests may require additional time to process. While your phone is loading the requested service, the touchscreen may appear unresponsive when in fact they are functioning properly. Allow the phone some time to process your data usage request.

4G LTE

The Sprint 4G LTE network provides your phone with wireless Internet access over greater distances than Wi-Fi and delivers data transfer rates of up to 60 Mbps. To connect your phone to the 4G LTE network, you must be in an area covered by the 4G LTE network.

For more information about the availability of Sprint 4G LTE service in your location, visit sprint.com/coverage.

Note: The availability and range of the network depends on a number of factors including your distance to the base station, and infrastructure and other objects through which the signal passes.

Set Your Network Options

1. Tap  >  >  **Settings**.
 2. Under Wireless & networks, tap **Mobile data** > **Network mode**.
 3. Select **LTE/CDMA** or **Automatic**.
- ❖ The phone will scan for the best available Sprint network and will automatically connect to it.

When your phone is connected via 4G LTE, **LTE** appears above the signal strength indicator  in the status bar.

Note: The network is self-discoverable, which means no additional steps are required for your phone to connect to it.

Your User Name

When you buy your phone and sign up for service, you're automatically assigned a user name, which is typically based on your name and a number, followed by "@sprintpcs.com." (For example, the third John Smith to sign up for Sprint data services might have jsmith003@sprintpcs.com as his user name.)

When you use data services, your user name is submitted to identify you to the network. Your user name is automatically programmed into your phone. You don't have to enter it.

Find Your User Name

You can find your user name through your phone's device menu.

1. Tap  >  >  **Settings**.
2. Tap **About** > **Phone identity**.
 - ❖ You'll find your user name in the **Current username** field.

Update Your User Name

If you choose to change your user name and select a new one online, or make any changes to your services, you must then update the profile on your phone.

1. Tap  >  >  **Settings**.
2. Tap **System updates** > **Update profile**.
 - ❖ Your phone will download and install the profile update.

Data Connection Status and Indicators

Your phone displays the current status of your data connection through indicators at the top of the screen. The following symbols are used:

Icon	Status
	Network (full signal): The icon indicates the strength of the signal.
	4G LTE data service : Your phone is connected to a 4G LTE network.
	3G data service : Your phone is connected to the 3G data network.

Turn the Data Connection On or Off

Turn your data connection off to optimize the phone's battery life and your data usage.

1. Swipe down from the status bar with two fingers to open Quick Settings.
2. Tap **Mobile data** to turn data connection on or off.

Note: If you don't have the data connection turned on and you're also not connected to a Wi-Fi network, you won't receive automatic updates to your email, social network accounts, and other synced information.

Manage Your Data Usage

If you're on a limited data allowance, it's important to keep track of the activities and apps that usually send and receive data, such as browsing the Web, syncing online accounts, and sending email or sharing status updates.

Here are some other examples:

- Streaming Web videos and music
- Tuning in to Internet radio
- Playing online games
- Downloading apps, maps, and files
- Refreshing apps to update info and feeds
- Uploading and backing up your files to your online storage account
- Using your phone as a Mobile Hotspot
- Sharing your mobile data connection by USB tethering

To help you save on data usage, connect to a Wi-Fi network whenever possible and set your online accounts and emails to sync less frequently.

Data Saver

Use Data Saver to reduce mobile data by restricting background data usage of selected apps. You can also set Data Saver to ignore those apps you want to always have access to data—such as your email app.

1. Tap  >  >  **Settings**.
2. Under Wireless & networks, tap **More** > **Data usage**.
3. Tap **Data Saver** and then tap the switch to turn it on.
4. Tap **Unrestricted data access**, and then select those apps that you want ignored by Data Saver.
 - ❖ The apps you select will not have their data usage restricted.

Keep Track of Your Data Usage

Note: Data usage measured by your phone may differ from, and be less than, your actual data usage.

1. Tap  >  >  **Settings**.
2. Under Wireless & networks, tap **More** > **Data usage**.
 - ❖ At the top you'll see a bar that displays the data usage to date, and the data usage cycle, alert, and limit.

3. Tap **Mobile data usage** and then tap .
4. Tap **Reset data usage**, set the day of the month when your usage cycle resets, and then tap **Set**. This date is usually the start of your monthly billing cycle.
5. Tap **Set data warning** to enable, and then tap **Data warning**.
6. Enter the amount of data usage at which you'll be alerted before you reach your monthly data limit and tap **Set**. Tap  to select between gigabytes and megabytes of data.
7. Enable **Set data limit** to automatically disable your data connection when you reach the set limit.
8. Tap **Data limit** and enter the set data usage at which your data connection will automatically be disabled.

View the Data Usage of Apps

1. Tap  >  >  **Settings**.
2. Under Wireless & networks, tap **More > Data usage**.
3. Tap **Mobile data usage**.
4. Drag the lines left and right to display the usage at a specific duration within your usage cycle.
5. Scroll down the screen to see a list of apps and their data usage info.
6. Tap an app to see more details.

Chrome Browser

Your phone comes with the Chrome mobile Web browser. If you are signed in with a Google Account, the Chrome browser will import all your bookmarks and other Web preferences for use on your phone.

Go to a Website

1. Tap  >  **Chrome**.
2. Tap the address bar at the top and enter search words (for a Google search) or a Web address (URL). If the address bar does not show, scroll down the screen.
3. On the webpage, you can:
 - Tap a link to open it, or touch and hold a link to see more options.
 - Tap an email address to send a message to the email address, save it to People, and more.
 - Touch and hold an image to save, copy, or set it as your wallpaper.
 - While browsing a webpage, tap  and select the **Request desktop site** to display the full desktop version of the webpage.

4. To return to the previous webpage you've viewed, tap  >  . To go forward, tap  >  .

Find Text In a Web Page

1. Tap  >  **Chrome**.
2. Navigate to a webpage and tap  > **Find in page**.
3. Enter the search item. As you enter characters, matching characters will be highlighted.
4. Tap the up or down arrow to go to the previous or next matching item.

Use Browser Tabs

Open multiple browser tabs to make it easier for you to switch from one website to another.

1. Tap  >  **Chrome**.
2. While viewing a Web page, tap  > **New tab**. Repeat the same to open new browser tabs.
3. To switch among browser tabs, tap  and then tap the webpage you want to view.
4. To close a browser tab, tap  and then swipe left or right the tab you want to close.

Tip: Opened browser tabs reside in the Recent apps screen. If you want to see the browser tabs inside Chrome, you can disable this feature. On the browser screen, tap  > **Settings** > **Merge tabs and apps**, tap the switch, and then tap **OK**.

Add Bookmarks

Add your favorite webpages as bookmarks so you can access them quickly.

1. Tap  >  **Chrome**.
2. While viewing a Web page, tap  and then tap  .
3. Edit the bookmark name or save the bookmark in a folder.
4. Tap **Save**.
5. To view and open a bookmark, tap  > **Bookmarks**. Navigate to the bookmark you want to open, and then tap it.

Note: You can also add a bookmark directly to the Home screen. While viewing a webpage, tap  > **Add to Home screen**.

Browsing History

Your phone keeps a record of webpages you've visited.

Note: If you don't want your phone to keep your browsing history, browse using an incognito tab. See [Private Browsing](#) for details.

Check your Browsing History

1. Tap  >  **Chrome**.
2. Tap  > **History**.
3. Navigate to the webpage that you want to view, and then tap it.

Clear Your Browsing History

1. Tap  >  **Chrome**.
2. Tap  > **History**.
3. Tap **Clear browsing data**.
4. Select the browsing data you want to delete, and then tap **Clear**.

Tip: If you want to select which webpage entry to delete, while on the History screen, tap  next to the entry you want to delete.

Private Browsing

You can use incognito tabs to browse the Web with more privacy. Browser cookies are not shared and are deleted when you close all incognito tabs. Pages you view in incognito also won't appear in your browser history except for files you download.

1. Tap  >  **Chrome**.
2. Tap  > **New incognito tab**.
3. Tap the address bar at the top and enter search words (for a Google search) or a Web address (URL) as you would normally do on a new browser tab.

Tip: To quickly close all incognito tabs, swipe down the notification panel and then tap the Chrome notification.

Set Browser Options

Customize the Web browser to suit your browsing style. Set display, privacy, and security options when using the browser.

1. Tap  >  **Chrome**.
2. Tap  > **Settings**.
3. Change the settings.

Chrome Support

Find on-phone help with Chrome.

1. Tap  >  **Chrome**.
2. Tap  > **Help & feedback**.
 - ❖ A Web page will open displaying Google help for Chrome.

Tip: For more information, from your computer, visit google.com.

Hangouts

Hangouts is Google's instant messaging service. Use to communicate with other Hangout users, and also use video calling. Log in to your Google Account beforehand (see [Google Account](#)).

Using Hangouts

1. Tap  >  >  **Hangouts**.
 - ❖ The Hangouts app will open.
2. Type a name, email, number, or circle, or select a contact from the list.
3. Type a message or tap  to start a video chat.
 - ❖ A chat window or a video chat window opens.
 - Each time text is entered, the corresponding friend appears.
 - If a friend is not in a Hangout, you will see a message. Tap **Invite** to invite them to join the Hangout.

Hangouts Operations

- **Ending a Chat:** In the Hangouts window, flick the chat from left to right.
- **Ending a Video Chat:** In the video chat window, tap .
- **Disabling Chat History:** If you don't want to keep chat history, in the chat window, tap  > **Turn history off**.
- **Delete Chat History:** To delete all your chat history, in the chat window, tap  > **Delete** > **Delete**.

Note: You can use Hangouts as your phone's default messaging app, or as a standalone IM app. If you set Hangouts as the default messaging app, the Messages app will be disabled. For more information, see [More Wireless & Network Settings](#).

Twitter

Tweet (post messages) and view other people's tweets on Twitter. Login may be required to use Twitter. For details on Twitter, visit twitter.com.

Install the Twitter App on Your Phone

Before you can use Twitter on your phone, you have to download and install the app from Google Play.

1. Tap  >  >  **Play Store**.
2. Tap  and search for "twitter."
3. Tap **Twitter** from the results list.
4. Tap **Install**, and then tap **Accept**.
5. When the download has completed, tap **Open**. To open the app from the Home screen, tap  >  **Twitter**.

Tweet on Twitter

Read Twitter feeds, follow your friends, and tweet your own updates right from your phone.

1. Tap  >  >  **Twitter**.
 - ❖ The Twitter app launches.
 - If this is the first time you've used Twitter on your phone, tap **Log in** to sign in to an existing account, or tap **Sign up** to set up a new Twitter account.
2. Tap the "What's happening?" text box, type a tweet, and tap **Tweet**.
 - ❖ The tweet is sent and appears on your Twitter feed.

Facebook

Post updates, read what your friends are up to, upload pictures and check-ins, and more with on-the-go Facebook access.

Use Facebook

1. Tap  >  >  **Facebook**.
 - ❖ The Facebook app launches.
 - If this is the first time you've used Facebook on your phone, enter your Facebook ID and password and tap **Log in** to sign in to an existing account, or tap **Sign Up for Facebook** to set up a new Facebook account.

2. Tap **Status** and type an update, tap **Photo** and upload a picture, tap **Check in** to share your location, "Like" and comment on friends' posts, and more.

Global Services

With your phone and global roaming service from Sprint WorldwideSM Wireless Service, you can make phone calls and use wireless data services around the globe on compatible CDMA and GSM/UMTS networks. For a country-specific travel guide, select your phone and destination from sprint.com/traveltips.

Activate Sprint Worldwide Service on Your Account

Before using your phone in global roaming mode, you must activate Sprint Worldwide service.

To activate Sprint Worldwide service:

- Chat with or email an international support rep by visiting sprint.com/swwsupport.
- or –
- Call Sprint Worldwide Customer support at **1-888-226-7212**.

Your Phone's SIM Card for International GSM Roaming

Your phone comes with a preinstalled SIM (Subscriber Identity Module) card to support roaming on compatible GSM networks.

Notes:

- Your SIM card should be preinstalled. If you need to reinstall your SIM card, follow the instructions in [SIM Card](#).
- The SIM included contains information specific to your phone and should be retained with the phone for use on GSM networks.

Enable Global Roaming Mode

Your phone is designed to enter global roaming mode automatically when you activate your Sprint Worldwide service, meaning that it should automatically connect to an appropriate CDMA/LTE network or GSM/UMTS network when you travel. You may set global roaming options through the settings menu.

You may also need to set your network mode options through the settings menu. See [Set the Communications Method for Global Use](#).

To enable your phone for international roaming:

1. Swipe down from the status bar, and then tap  > **Mobile data** > **Roaming**.
2. If Roaming is disabled, turn it on.

3. Tap the checkbox for **International voice & text roaming**.
4. Tap **OK**.

To set your network mode options manually:

- Swipe down from the status bar, and then tap  > **Mobile data** > **Network mode**.
 - To allow connections to CDMA or LTE networks only, tap **CDMA Only** or **LTE/CDMA**.
 - To allow connections to GSM or UMTS networks only, tap **GSM/UMTS Only**.
 - To allow connections to available CDMA/LTE or GSM/UMTS networks, tap **Automatic**. This is the recommended setting for international use.

Set the Communications Method for Global Use

Select a communications method for an overseas carrier as needed.

1. Tap  >  >  **Settings** > **Mobile data**.
2. Tap **Network mode**.
3. Select **CDMA Only**, **LTE/CDMA**, **GSM/UMTS Only**, or **Automatic**.
 - ❖ The communications method is set.

Note: At the time of purchase, your phone's default mode of **Automatic** is set. This allows global usage and normally will not need to be changed.

Select a Carrier

You can select a specific local carrier to use when traveling internationally. At the time of purchase, your phone is preset to connect automatically to an appropriate carrier in your current area.

1. Tap  >  >  **Settings** > **Mobile data**.
2. Tap **Network mode** > **GSM/UMTS Only**.
3. Tap **Available GSM networks**.
4. Tap an available network.
 - ❖ The selected carrier is set.

Make and Receive Worldwide Calls

When traveling on international networks, you can place and answer calls as you would on the Sprint network (see [Place and Answer Calls](#)), although some additional instructions may be required to place a call. Some features and services are not available in all countries. For more information on services that are available while roaming, visit sprint.com/sww.

Make Calls Using Plus (+) Code Dialing

Placing calls from one country to another country is simple with the Plus (+) Code Dialing feature. When placing international calls, you can use Plus Code Dialing to enter the appropriate international access code for your location (for example, 011 for international calls placed from the United States).

Notes:

- Plus Code Dialing is only available when roaming internationally on GSM networks and on certain CDMA networks in the United States, Canada, and the Caribbean.
- International access codes and dialing information are available online at sprint.com/sww.

To use Plus Code Dialing to place an international call:

1. Tap  >  to display the phone screen.
2. If you are on the GSM network, touch and hold  to insert a "+" on the phone dial screen. (The "+" symbol automatically inserts the international access code for the country from which you are calling.)
3. If you are on the CDMA network outside Canada or the Caribbean, enter the international access code for the country from which you are calling.
4. Tap  to enter the US country code, and then enter the area code and number.
5. Tap **Call** to place the call.

Sprint International Voicemail Service

Your Sprint voicemail will follow you as you travel. All of your unanswered calls will be forwarded to your Sprint voicemail. You will need to be sure your voicemail box is already set up and that you know your voicemail passcode.

Note: Sprint voicemail may not be available on all networks; check sprint.com/sww for service information.

International Voicemail Troubleshooting

There are a few tips to keep in mind when using Sprint voicemail while traveling.

- Some carriers may not support voicemail indicators. It may be necessary to call your voicemail to see if you have any new messages.
- If you hear the message "Please enter the number of the subscriber you wish to call," enter your 10-digit wireless phone number.

Set Up Your Voicemail Access Number for International Use

To simplify accessing your Sprint Voicemail while traveling, you can set up your voicemail access number as a Contacts entry. This will make it faster and easier to access your messages while roaming internationally.

1. Tap  >  >  **People**.
 2. Tap .
 3. In the "Name" field, enter the name of your voicemail number (for example, "My Voicemail").
 4. In the phone number field, enter   (+1), your area code, and your wireless phone number.
 5. Tap .
- ❖ Your voicemail access number is saved as a contact.

Access Your Voicemail Internationally

You will need to call your voicemail number to access your voicemail while roaming internationally.

New Message Indicators

Your voicemail message indicators may be displayed differently when roaming internationally.

- A "Message Waiting" indicator icon or a text message is displayed when a voicemail message is received.
- You may see "Missed Call" on your screen prior to receiving a message notification.
- You must call voicemail in order to retrieve messages. Follow the instructions on the previous page to store your voicemail number for easy access.

Retrieve Voicemail Messages

The voicemail retrieval process while traveling is the same as on the Sprint Network; however, you will be required to enter your voicemail passcode.

To retrieve your voicemail messages:

1. Tap  >  >  **People**.
2. Tap the voicemail entry and then tap the number to call it.
 - ❖ Your phone dials your voicemail number.
3. When your voicemail answers, enter the password, and tap  to access your voicemail.
 - ❖ Your voicemail box is accessed.

International Data Roaming

Sprint Worldwide Wireless Service can also keep you connected via email and Web browsing when traveling in countries in which Sprint offers data service.

Data services are available on both CDMA and GSM/UMTS networks. Check sprint.com/traveltips and sprint.com/sww to determine the services available where you are traveling.

Note: Prior to using your Sprint Worldwide GSM/UMTS Data Services, you must establish and utilize your CDMA data services domestically on the Sprint Network.

Get Started With Sprint Worldwide Data Services

To use Sprint Worldwide Data Services, you will need to have these services activated on your account.

- To activate, call Sprint Worldwide Customer Support at **1-888-226-7212**. Representatives are available 24 hours a day, 7 days a week to assist you.

Access Email and Data Services Internationally

To access your email and browse the Web when traveling, you may need to manually select the carrier that provides Sprint service in your location. You can find a list of carriers for each country where GSM data service is offered at sprint.com/sww. Then, follow the instructions below to select the appropriate carrier network on your phone.

Access International Data Services on GSM/UMTS Networks

To select a GSM data service carrier for a specific country:

1. Swipe down from the status bar, and then tap  > **Mobile data**.
2. Tap **Network mode** and select **GSM/UMTS Only**.
3. Tap **Roaming**, and turn it on if disabled.
4. Tap the checkbox for **International data roaming**, and then tap .
5. Tap **Available GSM networks** > **Search for networks**.
6. Select a specific operator.

- ❖ Data roaming on GSM/UMTS networks is set.

Access Email and Data Services Internationally on CDMA Networks

If data service is available on an international CDMA network, then you only need to set the phone to CDMA; you will not need to select the specific carrier. Selecting a specific carrier is only necessary for providers on the GSM network. If your phone has automatically selected a GSM network while traveling, then you will need to set the phone to CDMA to access CDMA data services. (See [Enable Global Roaming Mode](#).) Visit sprint.com/sww for a list of services available in each country.

Contact Sprint for Assistance with International Service

If you experience any issues with voice or data services while outside of the United States, Sprint offers customer support 24 hours a day. In the event that you do experience an issue, try the following actions:

- First try powering your phone off and then back on; this will force your phone to reregister with the network.
- Try manually selecting another network. Information for selecting networks can be found in the phone guide.

If neither of these actions resolves your issue, you will need to contact customer service (see below). When calling to report an issue, the following information will be beneficial in trying to resolve your issue as quickly as possible:

- Your wireless phone number.
- The city and country you are traveling in.
- Any error message that displays on your phone or that you heard when trying to place a call.
- If the issue is with data, were you able to place voice calls?
- If the issue is with voice service, were you able to access data?

Please call the numbers below if you need assistance:

While in the United States: Call **1-888-226-7212**.

While traveling outside the United States:

- In GSM mode: tap and then dial **1-817-698-4199**.
- In CDMA mode: enter the country code and then dial **1-817-698-4199**.

There is no charge for this call from your wireless phone.

From a landline phone when outside the United States:

Sprint Worldwide Customer Support can be reached from a landline phone at **1-817-698-4199**. Access or connection fees may apply. The toll free numbers below can also be used to contact Sprint Worldwide Customer Support in the following countries:

Country	From Landline Phone
Caribbean (Anguilla, Barbados, Cayman Islands, and Dominica)	1-888-226-7212
France	0800-903200
Germany	0800-180-0951
Italy	800-787-986
Mexico	001-877-294-9003

Trinidad and Tobago	1-800-201-7545
United Kingdom	0808-234-6616

Note: This toll free service is available on ordinary landline phones and some public pay phones. This service does not cover any hotel access charges.

Connectivity

The following topics address your phone's connectivity options, including USB file transfer and tethering, Wi-Fi, Bluetooth, and more.

Transfer Files Between Your Phone and a Computer

You can use the supplied USB/charging cable to connect your phone directly to your computer and transfer music, pictures, and other content files.

For example, if you have a music album stored on your computer that you want to listen to on your phone with any of the music apps, just attach your phone to the computer and copy the files to the music folder.

For details, see [Copy Files To or From Your Phone](#).

USB Type-C

Check out some frequently asked questions about the USB Type-C Accessory/charging port on the HTC Bolt.

Am I required to use the provided USB Type-C cable or can I use a third-party cable?

HTC recommends that you use the USB cable that was provided with your phone for optimal performance and compatibility. While third-party cables should work, there may be variances in power output and this may cause performance degradation or other power-related issues. If you want to purchase another USB cable for your phone, please visit htc.com/accessories. If you decide to buy a USB cable elsewhere, look for the USB-IF certified logo. Please visit usb.org/kcompliance/view to see if your USB cable received a USB-IF certification.

How does the USB Type-C connector differ from the micro USB connector on my old phone?

The main difference is that USB Type-C is reversible and you can insert the connector to the USB/charger port of the phone in any horizontal orientation and it will still work.

Wi-Fi

Wi-Fi provides wireless Internet access over distances of up to 300 feet. To use your phone's Wi-Fi, you need access to a wireless access point or "hotspot."

Note: The availability and range of the Wi-Fi signal depends on a number of factors, including infrastructure and other objects through which the signal passes.

Turn Wi-Fi On and Connect to a Wireless Network

It's quick and easy to turn Wi-Fi on and connect to a wireless network.

1. Swipe down from the status bar with two fingers to open Quick Settings.
2. Tap **Wi-Fi** to turn Wi-Fi on. You'll also see a list of detected Wi-Fi networks.

3. Tap the Wi-Fi network you want to connect to.

Note: To manually scan for Wi-Fi networks, tap **More settings** >  > **Scan**.

4. If you selected a secured network, you'll be asked to enter the network key or password.
5. Tap **Connect**. You'll see the Wi-Fi icon () in the status bar when connected.

Connect to a Wi-Fi Network via WPS

If you're using a Wi-Fi router with Wi-Fi Protected Setup (WPS), you can connect your phone easily.

1. Swipe down from the status bar with two fingers to open Quick Settings.
2. Tap **Wi-Fi** to turn Wi-Fi on. You'll also see a list of detected Wi-Fi networks.
3. Tap **More settings**, and then tap  > **WPS Push**.
4. Press the WPS button on your Wi-Fi router.

Note: To use the Wi-Fi Protected Setup (WPS) PIN method, tap  > **WPS Pin Entry**.

Disconnect from a Wireless Network

Quickly disconnect from a wireless network your phone is connected to.

1. Tap  >  >  **Settings**.
2. Tap **Wi-Fi**
3. Tap the wireless network that the phone is connected to, and then tap **Disconnect**.
4. If you want to remove the settings for this network, touch and hold the network name, and then tap **Forget network**.

Wi-Fi Direct

Use Wi-Fi Direct to connect directly to other Wi-Fi Direct devices simply via Wi-Fi, without an access point or via the Internet.

1. Swipe down from the status bar with two fingers to open Quick Settings.
2. Tap **Wi-Fi** to turn Wi-Fi on. You'll also see a list of detected Wi-Fi networks.
3. Tap **More settings**, and then tap  > **Wi-Fi Direct**.
4. The Wi-Fi Direct settings menu appears.
 - Wi-Fi Direct and Wi-Fi are unavailable at the same time.
5. Tap a device with which to connect. If connected via Wi-Fi, you will see a confirmation. Follow the onscreen instructions.

6. Accept the connection on the other device.
 - ❖ The phone is connected via Wi-Fi Direct.
 - If a connection is not accepted after a certain period, the connection request is cancelled.
7. To stop a connection, tap **End connection** > **OK**.

Virtual Private Networks (VPN)

Add virtual private networks (VPNs) so you can connect and access resources inside a local network, such as your corporate network.

Before you can connect to your organization's local network, you may be asked to:

- Install security certificates
- Enter your login credentials
- Download and install a required VPN app if you're connecting to a secured enterprise network. Contact your network administrator for details.

Also, your phone must first establish a Wi-Fi or data connection before you can start a VPN connection. For information about setting up and using these connections on your phone, see [Data Services General Information \(4G LTE and 3G Networks\)](#).

Add a VPN Connection

You must first set a lock screen PIN or password before you can use credential storage and set up the VPN.

1. Tap  >  >  **Settings**.
2. Under Wireless & networks, tap **More** > **VPN**.
3. Tap .
4. Enter the VPN settings and set them up according to the security details your network administrator gave you.
5. Tap **Save**.

Connect to a VPN

After you've added a VPN connection, you are now ready to connect and access that network.

1. Tap  >  >  **Settings**.
2. Under Wireless & networks, tap **More** > **VPN**.
3. Tap the VPN that you want to connect to.

4. Enter your login credentials, and then tap **Connect**. When you are connected, the VPN connected icon  appears in the notification area of the status bar.

You can then open the Web browser to access resources such as your corporate network intranet. For more information, see [Chrome Browser](#).

Disconnect From a VPN

Disconnect from the VPN when you're done accessing your intranet sites.

1. Slide the notification panel open.
2. Tap the VPN connection, and then tap **Disconnect**.

Mobile Hotspot

Mobile Hotspot allows you to turn your phone into a Wi-Fi hotspot. When this feature is turned on, you can share your phone's mobile data services via Wi-Fi with other Wi-Fi enabled devices. The feature works best when used in conjunction with 4G data services (although 3G service can also be used).

Important: Use of the Hotspot feature requires an additional subscription. Sign on to your account at sprint.com/mysprint or access your account via Sprint Zone (tap  >  >  **Sprint Zone**) to learn more.

Note: Turning on Hotspot on will disable your phone's connection to other Wi-Fi networks.

1. Swipe down from the status bar, and then tap .
2. Under Wireless & networks, tap **More**.
3. Tap **Mobile network sharing** > **Mobile Hotspot** > **OK**.
4. Enter a router name or use the default router name.
5. Set the password (key) for your wireless router or use the default password.

Important: To help minimize security risks, use the default settings and set a secure and unique password.

Note: The password is the key other people need to enter on their device so they can connect and use your phone as a wireless router.

6. Tap the **Mobile Hotspot** switch to turn on the wireless router.

Your phone is ready to be used as a wireless router when you see  on the status bar.

Share Internet Connection via USB Tethering

Use the data connection of your phone to connect another device to the Internet through tethering a USB cable.

- To make sure that the USB drivers for your phone are up-to-date, install the latest version of HTC Sync Manager on your computer.
 - You may need to have USB tethering added to your data plan. Contact Sprint for details.
 - Make sure that mobile data is turned on.
1. Swipe down from the status bar, and then tap .
 2. Under Wireless & networks, tap **More**.
 3. Tap **Mobile network sharing > USB tethering**.
 4. Select the USB speed when available.

Bluetooth

Bluetooth is a short-range communications technology that allows you to connect wirelessly to a number of Bluetooth devices, such as headsets and hands-free car kits, and Bluetooth-enabled handhelds, computers, printers, and wireless phones. The Bluetooth communication range is usually approximately 30 feet.

Bluetooth Hints

Question: Can't use Bluetooth?

Answer: Is your phone in airplane mode? Bluetooth is unavailable in airplane mode.

Bluetooth Function Cautions

Information may not appear correctly on connected devices depending on the transferred data.

Bluetooth Information

Bluetooth is a technology that enables wireless connection with PCs, Bluetooth devices with hands-free features, etc.

Function	Description
Audio output	Listen to music, etc., wirelessly.
Hands-free calls	Call hands-free, using Bluetooth-capable hands-free devices and headsets.
Data exchange	Exchange data with Bluetooth devices.

Connect a Bluetooth Headset or Car Kit

You can listen to music over a Bluetooth stereo headset, or have hands-free conversations using a compatible Bluetooth headset or car kit.

Important: For you to listen to music with your headset, the headset must support the A2DP Bluetooth profile.

Note: Before you connect your headset, make it discoverable so your phone can find it. Refer to your headset manual for details.

1. Swipe down from the status bar with two fingers to open Quick Settings.
2. Tap **Bluetooth** to turn Bluetooth on. You'll also see a list of paired devices.
3. Tap **More settings**.
4. When you see the name of your headset in the Available devices section, tap the name.
 - ❖ Your phone pairs with the headset and the headset connection status is displayed in the Paired Devices section.

Note: If automatic pairing fails, enter the passcode supplied with your headset.

The pairing and connection status is displayed below the hands-free headset or car kit name in the Bluetooth phones section. When the Bluetooth headset or car kit is connected to your phone, the Bluetooth connected icon  is displayed in the status bar.

Reconnect a Headset or Car Kit

Normally, you can easily reconnect your headset by switching on Bluetooth on your phone, and then turning on the headset. However, you might have to connect manually if your headset has been used with another Bluetooth device.

Important: Make sure that the headset is discoverable. Refer to the headset manual for details.

1. Swipe down from the status bar with two fingers to open Quick Settings.
2. Tap **Bluetooth** to turn Bluetooth on. You'll also see a list of paired devices.
3. Tap the headset's name.
4. If prompted to enter a passcode, try **0000** or **1234**, or consult the headset/car kit documentation to find the passcode.

If you still cannot reconnect to the headset or car kit, follow the instructions in [Disconnect From a Bluetooth Device](#), and then follow the steps in [Connect a Bluetooth Headset or Car Kit](#).

Disconnect From a Bluetooth Device

If you do not need to use Bluetooth at any given point, you can disconnect and unpair your phone from a Bluetooth device.

1. Swipe down from the status bar with two fingers to open Quick Settings.
2. Tap **Bluetooth** to turn Bluetooth on. You'll also see a list of paired devices.
3. Tap **More settings**.

- In the Paired devices section, tap  next to the device to unpair.
- Tap **Unpair**.

Note: Tap the name of the device to reconnect it.

Send Information Using Bluetooth

You can use Bluetooth to transfer information between your phone and another Bluetooth-enabled device such as a phone or computer. The first time you transfer information between your phone and another phone, you need to enter or confirm a security passcode. After that, your phone and the other phone are paired, and you will not need to exchange passcodes to transfer information in the future.

Important: Before you begin, set the receiving phone to discoverable mode. You may also need to set it to "Receive Beams" or "Receive Files." Refer to the phone's documentation for instructions on receiving information over Bluetooth.

You can send the following types of information, depending on the phone you are sending to:

- On your phone, open the application that contains the information or file you want to send.
- Follow the steps for the type of item you want to send:

What to send	How to send
Contact	In the People app, tap a contact to view the contact's details, and then tap  > Send contact . Select Send contact via > Bluetooth and then tap Send .
Photos or videos	Select a photo and view it in full screen. Tap the photo and tap  > Bluetooth .
Voice recording	On the main Voice Recorder screen, tap  > Share > Bluetooth .

- Turn Bluetooth on and pair with the receiving phone, if you're asked to do so.
- On the receiving device, accept the file.

Where Sent Information is Saved

When you send information from your phone using Bluetooth, the location where it's saved depends on the type of information and the receiving device.

If you send a calendar event or contact, it is normally added directly to the corresponding application on the receiving phone. For example, if you send a calendar event to a compatible phone, the event is shown in that phone's calendar application.

If you send another file type to a Windows computer, it is normally saved in the Bluetooth Exchange folder within your personal document folders.

- On Windows XP, the path may be:
C:\Documents and Settings\[your username]\My Documents\Bluetooth Exchange
- On Windows Vista®, the path may be:
C:\Users\[your username]\Documents
- On Windows 7, the path may be:
C:\Users\[your username]\My Documents\Bluetooth Exchange Folder
- On Windows 8, the path may be:
C:\Users\[your username]\Documents

If you send a file to another device, the saved location may depend on the file type. For example, if you send an image file to another wireless phone, it may be saved in a folder named "Images."

Receive Files Using Bluetooth

Your phone lets you receive various files with Bluetooth, including photos, music tracks, contact info, calendar events, and documents such as PDFs.

Important: Refer to the other device's documentation for instructions on sending information over Bluetooth.

1. Swipe down from the status bar with two fingers to open Quick Settings.
2. Tap **Bluetooth** to turn Bluetooth on. You'll also see a list of paired devices.
3. Tap **More settings**.
4. Tap your phone's Bluetooth name near the top of the screen to make your phone visible to nearby Bluetooth devices.
5. On the sending device, send one or more files to your phone.
6. If asked, accept the pairing request on your phone and on the sending device. You may also be prompted to enter the same passcode or confirm the auto-generated passcode on both devices. You'll then get a Bluetooth authorization request.
7. Tap **Pair**.
8. When your phone receives a file transfer request notification, slide the notification panel down, tap the incoming file notification, and then tap **Accept**.
9. When a file is transferred, a download notification is displayed. Slide the notification panel down, and then tap the relevant notification to view the file.

Tip: You can also tap  > **Show received files** to view files received via Bluetooth.


When you open a received file, what happens next depends on the file type:

- Media files and documents are usually opened directly in a compatible application. For example, if you open a music track, it starts playing in the Music app.

- For a vCalendar file, select the calendar where you want to save the event, and then tap **Import**. The vCalendar is added to your Calendar events. (For more information, see [Calendar](#).)
- For a vCard contact file, you can choose to import one, several, or all of those contacts to your contacts list.

Share Content with NFC

With built-in NFC (near field communication) on your phone, you can share content to someone's mobile phone in an instant. Beam a webpage you're viewing, contact information, and more by just holding your phone and the other phone back to back.

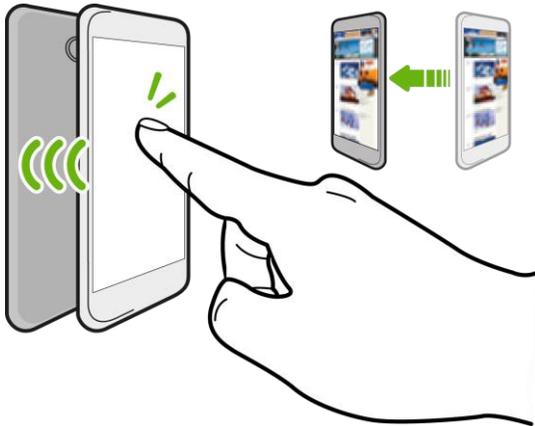

Turn NFC On

Before you can beam content to another NFC-capable device, you need to enable NFC on your phone.

1. Swipe down from the status bar, and then tap .
2. Under Wireless & Networks, tap **More**.
3. Tap the **NFC** On/Off switch to turn it on and off.

Beam Content

Make sure that both devices are unlocked and have NFC turned on. If the other device has an Android Beam™ option, make sure it is also turned on.

1. While viewing the content that you want to share, hold your phone and the other phone back to back.

Tip: Make sure that the NFC area (shaded part) of your phone and the other phone's NFC area are close to one another. Experiment by slightly moving the phones until a connection is made.



2. Tap the screen.

The shared content appears on the other screen. For some items that you've shared (such as contact information), additional instructions on how to save the item will appear on the receiving device.

HTC Connect

With HTC Connect[®], wirelessly stream music or video from HTC Bolt to your speakers or TV by just swiping up the screen with 3 fingers.

You can stream media to any of the following types of devices:

- Airplay[®] speakers or Apple TV[®]
- Multi-room speakers that support Qualcomm[®] AllPlay[™] smart media platform
- Blackfire[®] compliant multi-room speakers
- DLNA[®] compatible speakers and TV
- Miracast[™] compatible display devices
- Chromecast[™] compatible display devices
- Bluetooth speakers

- HTC certified consumer electronic devices or accessories that have the HTC Connect logo.




Note: Some devices may need to be paired before you can share to them.

To see a list of supported devices or accessories, go to htc-connect.com/certified-devices. For more information about HTC Connect, visit htc-connect.com.


Share Media Using HTC Connect

Before you start, make sure you have set up your speakers, TV, or appliance to connect to your Wi-Fi network. Refer to its documentation on how to set it up.

1. Open and play any music or other media content that you want to share from your phone.
2. Swipe up with three fingers on the screen.

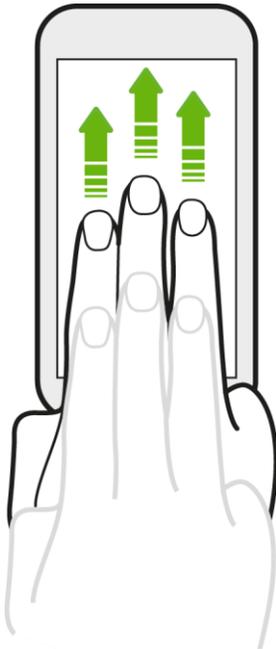

3. Choose the device you want to connect to.

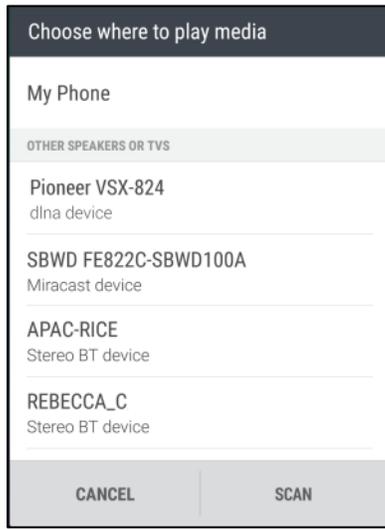


4. Once connected, use your phone to control the volume, pause or resume playback, and more.
5. To stop wireless media sharing and disconnect from the device, swipe down with three fingers on the screen.

Stream Music to Speakers Powered by Qualcomm AllPlay Media Platform

Before you start, make sure your AllPlay speakers are connected to your Wi-Fi network. Refer to the documentation that comes with your speakers to set up and connect them to your Wi-Fi network.

1. After connecting your AllPlay speakers to your Wi-Fi network, open a music app on your phone.
2. Swipe up with three fingers on the screen.
 - ❖ Your phone then turns Wi-Fi on automatically and scans for media devices on your Wi-Fi network. You'll then see the available AllPlay speakers listed.
3. Tap the speaker you want to connect to.
4. In the music app that you're using, start playing music. You'll then hear the music play from the speaker you've selected.
5. To switch between AllPlay speakers or to group speakers, swipe up the screen again with three fingers.
 - Just tap another speaker to stream music to it.
 - To group speakers so that music plays through them at the same time, tap the **Group** button next to a speaker name, select the other speakers you want to group it with, and then tap **OK**.

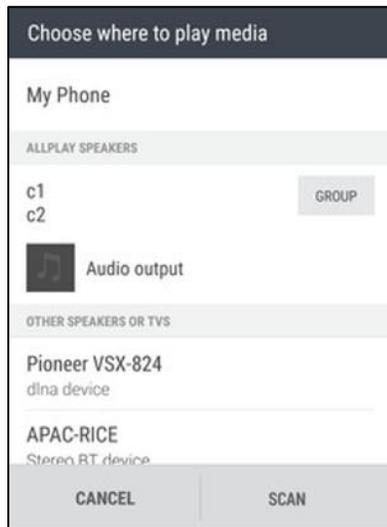

Stream Music to Blackfire Compliant Speakers


Play music simultaneously to multiple Blackfire compliant speakers from your phone.




Before you start, make sure your speakers are connected to your Wi-Fi network. Refer to the documentation that comes with your speakers to set up and connect them to your Wi-Fi network.

1. After connecting your speakers to your Wi-Fi network, open a music app on your phone.

2. Swipe up with three fingers on the screen.

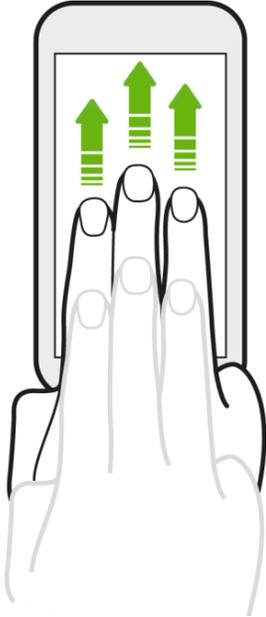

- ❖ Your phone then turns Wi-Fi on automatically and scans for media devices on your Wi-Fi network. You'll then see the available speakers listed.
3. Tap the speaker you want to connect to.
 4. In the music app that you're using, start playing music. You'll then hear the music play from the speaker you've selected.
 5. To switch between speakers or to group them, swipe up the screen again with three fingers.
 - Just tap another speaker to stream music to it.
 - To group speakers so that music plays through them at the same time, tap the Group button next to a speaker name, select the other speakers you want to group it with, and then tap **OK**.

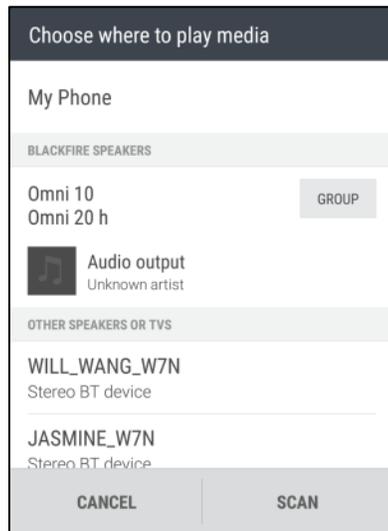

Rename the Speakers

You can rename your Blackfire compliant speakers in Settings.

1. Make sure the speakers are connected to your Wi-Fi network.
2. Tap  >  >  **Settings > HTC Connect.**
 - ❖ Your phone then turns Wi-Fi on automatically and scans for media devices on your Wi-Fi network. You'll then see the available Blackfire speakers listed.
3. Tap  next to a speaker name.
4. Enter the new speaker name, and then tap **Done**.

Apps and Entertainment

The following set of topics will explore the features that make your phone so much more than a phone, from the camera and productivity apps to music, entertainment, and more.

Camera and Video

Take great photos and videos and make them more memorable by applying a variety of effects and scenes.

You can use the front and main cameras to take and share pictures and videos.

Capturing Pictures/Videos

- **File Format for Pictures:** File format for pictures is JPEG or DNG for RAW photos.
- **File Format for Videos:** File format for videos is MPEG4.

! Camera Cautions

If Lens Becomes Dirty: Fingerprints/smudges on lens prevent capturing of clear still images/videos. Wipe lens with a soft cloth beforehand.

Avoid Exposure to Direct Sunlight: Be careful not to expose lens to direct sunlight for long periods. May discolor color filter and affect color of images.

Camera Overview

The camera's viewfinder screen lets you view your subject and access camera controls and options.



Icon	Function
	Switch between flash modes.
	Open the slideout menu to select a capture mode and choose camera settings.
	Toggle photo HDR between auto, on, and off.

	Switch between the front camera and main camera.
	Switch between Video and Photo modes.
	Capture a photo.
	View the last photo or video taken.

Open the Camera and Adjust the Settings

Capture photos quickly with your phone. Just directly launch the camera from the lock screen, even if your phone is password protected.

1. When your display is off, press the **Power/Lock** button.
2. Drag  up so you can start taking photos and videos.


Tip: From the Home screen, you can also tap  to launch the camera.

- ❖ You'll see **Photo** mode, which is the default capture mode.

Choose a Capture Mode

Switch to a capture mode to use for taking photos or videos. The camera on HTC Bolt separates capture modes into categories so that you can quickly find which mode you want.

1. On the Viewfinder screen, tap  to open the slideout menu.
 - You can also swipe right from the left edge in landscape orientation or swipe down from the top edge in portrait orientation.
2. Scroll through the menu to see the available capture modes.

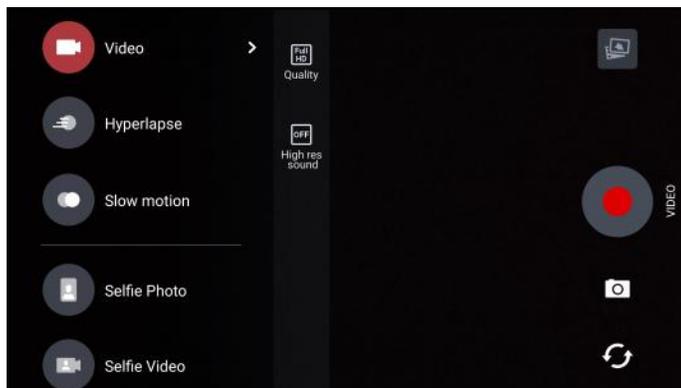


3. Tap the capture mode you want to use.
4. To quickly switch between the front and main camera, tap  on the Viewfinder screen.

- You can quickly switch back to either Photo or Video mode when you're in other capture modes without opening the slideout menu. Right below the main shutter button, just tap  to switch back to Photo mode or  to switch back to Video mode.

Capture Mode Settings

You can change the settings for some of the capture modes such as Photo or Video mode. To change settings, select a mode and then tap to view and choose the available settings for the mode.

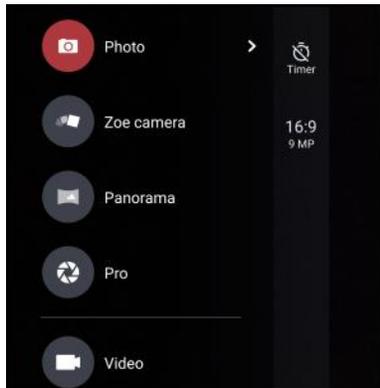

Mode	Setting	Description
Photo		Toggle between the time settings to set the self-timer or turn off the self-timer. See Selfies and People Shots .
Selfie Photo		
Pro	16:9	Set the photo quality and aspect ratio. See Set the Photo Quality and Size .
Pro	RAW	Choose RAW or JPG format for photos. See Manually Adjust Camera Settings .
Video		Set the video quality. See Set the Video Resolution .
Selfie Video		Turn high resolution audio recording on and off. See Turn on High Resolution Audio .
Selfie Photo		
Selfie Panorama		Turn Live Makeup on and off. See Selfies and People Shots .

Set the Photo Quality and Size

Before you capture, select the photo quality and size.

1. Tap  >  **Camera**.
2. Switch to **Photo** or **Selfie Photo** mode. Or, select **Pro** mode.
3. Tap  to open the slideout menu.
4. Tap the current setting—for example **16:9**—to change the photo quality and size, or aspect ratio.

Touch Autoexposure

Turn **Touch autoexposure** on in Camera settings if you want the main camera to automatically adjust the exposure levels when you tap a darker area on the Viewfinder screen.

1. Tap  >  **Camera**.
2. Tap  to open the slideout menu.
3. Tap **Settings**.
4. Select or clear the **Touch autoexposure** option.

Zooming

Before taking a photo or video, slide two fingers apart to zoom in or together to zoom out. You can also freely zoom in or out while recording.

Turn the Camera Flash On or Off

On the Viewfinder screen, tap the flash icon to choose a flash setting.

- When using Flash on  or Auto flash mode , the camera intelligently sets the best flash brightness for your photo.
- In Selfie Photo mode, you can also tap the flash icon to turn the screen flash on or off.

Use the Volume Button for Taking Photos and Videos

If you feel much comfortable with using push-buttons when taking photos and videos, you can set your phone to use the **Volume** button as the Camera app's shutter release or zoom control.

1. Tap  >  **Camera**.
2. On the Viewfinder screen, tap  to open the slideout menu.
3. Tap **Settings > Volume button options**.
4. Choose how you want to use the **Volume** button when you're in the Camera app.

Close the Camera App


Tap  or  to close the Camera app and return to the Home screen or the previous screen.

Take a Picture

Whether it's moving or not, clearly capture any moment with your phone's camera.

Note: If you have an SD card installed, you can choose to save pictures and videos to the SD card. If no card is installed, pictures and videos are saved to your phone's memory.

1. Tap  >  **Camera**.
2. Switch to **Photo** mode, if you're not in this mode. See [Choose a Capture Mode](#).
3. Point the camera at what you want to capture. The camera adjusts the focus automatically as you move it. You can also tap the screen to change the focus to a different subject.
4. To adjust the exposure, tap the screen, and then drag your finger up and down.

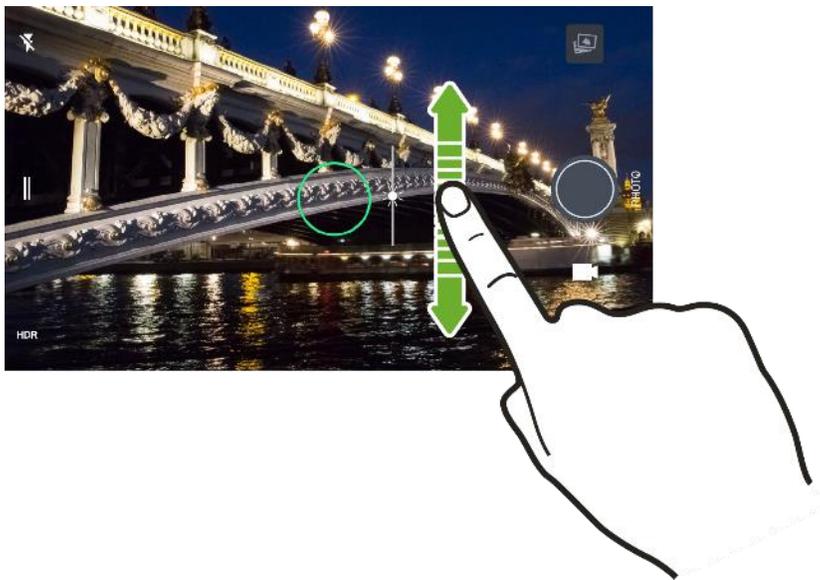

5. When you're ready to take the shot, tap .


Capture Better Photos

To get better captures with the Camera app, here are some tips on what to do while taking your shots.

Before Capturing

If you find that your shots are coming out a little blurry, try these tips.

- Hold the phone so that your fingers aren't blocking the camera lens or dual flash.

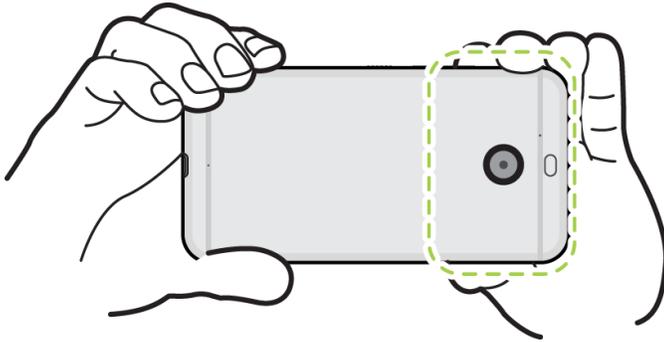

- Make sure that the camera lens and dual flash are clean and without fingerprints. Use a soft, clean, microfiber cloth to wipe them.
- Make sure you're not moving the camera when taking a photo, especially in low light conditions or when taking photos in Pro mode with RAW format selected.

Take Clear, Sharp Shots

- HTC Bolt has auto features that make taking photos easy. The Photo mode in the Camera app gives you a quick and reliable way to take photos.
- For more creative shots, HTC Bolt also features a quick way of adjusting the exposure level or brightness in real time. Just tap to focus, and then slide upwards repeatedly to make the subject brighter to bring out additional details or downwards to make it darker and richer.
- Tapping the screen to focus uses the image contrast to dynamically readjust, which is sometimes desirable if you wish to take a macro to get an off-center bokeh effect or take photos while you're moving.
- If the subject is moving, on the Viewfinder, touch and hold the subject to lock the focus.
- If there are parts of the image that are in shadows and others are in highlights, use HDR to capture multiple shots of different exposures and combine them into one shot. Keep HTC Bolt steady or place it on a level surface when using HDR.
- When taking a panoramic photo, consider the whole scene and focus on an object that has a neutral tone to help keep the exposure balanced in the composite image.
- Make sure you're not moving the camera when taking a photo, especially in low light conditions. Hold the phone steady and don't move the camera while taking RAW photos in Pro mode.

Other Tips

- In Camera settings, tap **Grid** to help frame the subject better or improve the composition.
- After capturing the photo, you can enhance the photo in the Google Photos app.

Record a Video

Capture high-definition video clips that you can later share or create into movies.

1. Tap  >  **Camera**.
2. Switch to **Video** mode, if you're not in this mode. See [Choose a Capture Mode](#).
3. When you're ready to start recording, tap .
4. Change focus to a different subject or area by just tapping it on the Viewfinder screen. You can also change the exposure after tapping by dragging up and down on the screen.
5. Tap the flash icon to turn the flash on or off.
6. Tap  to pause the recording, and then tap  to resume.
7. Tap  to stop recording.

Set the Video Resolution

Select the resolution of the video you're about to record.

1. Tap  >  **Camera**.
2. Switch to **Video** mode, if you're not in this mode. See [Choose a Capture Mode](#).
3. Tap  to open the slideout menu.
4. Tap **Quality** to change the video resolution.

Turn on High Resolution Audio

Record videos, including selfie videos, with high resolution audio.

Notes:

- High resolution audio is only available when the video quality is set to HD (720p) or higher.
- You can't pause video recording when using high resolution audio.

1. Tap  >  **Camera**.
2. Switch to **Video** mode, if you're not in this mode. See [Choose a Capture Mode](#).
3. Tap  to open the slideout menu.
4. Tap **High-res audio** to turn on high resolution audio.
5. When you're ready to start recording, tap .

6. To stop recording, tap .

❖ Videos recorded with high resolution audio are saved in MKV (Matroska video) file format.

Take a Photo While Recording a Video - VideoPic[®]

Use the Normal video scene when you want to take a photo while recording a video.

1. Tap  >  **Camera**.
2. Switch to **Video** mode, if you're not in this mode. See [Choose a Capture Mode](#).
3. When you're ready to start recording, tap .
4. While recording, tap  whenever you want to capture a still shot.
5. To stop recording, tap .

Camera Features

The HTC Bolt camera is packed with several features that will make capturing photos and videos more enjoyable and memorable.

Take Continuous Camera Shots

Take photos of moving subjects. Whether it's your kid's football game or a car race, you can capture the action. Use the Auto scene when you want to take continuous camera shots.

1. Tap  >  **Camera**.
 2. Switch to **Photo** mode, if you're not in this mode. See [Choose a Capture Mode](#).
 3. Touch and hold the onscreen shutter button .
- ❖ The camera takes consecutive shots of your subject.

Use HDR

When shooting portraits against a bright background, use HDR, short for High Dynamic Range, to capture your subjects clearly. HDR brings out the details of both the highlights and shadows, even in high contrast lighting.

Note: HDR works best when your subject is steady. The camera takes multiple shots at different exposure levels and combines them into one enhanced photo.

1. Tap  >  **Camera**.
2. Switch to **Photo** mode, if you're not in this mode. See [Choose a Capture Mode](#).

3. Make sure that **HDR** or **HDR** AUTO is selected. If not, tap **HDR** to change it. HDR auto is also available in Selfie photo mode, and is enabled by default.
4. Tap .

Record Slow Motion Videos

Relive high speed action bit by bit and add a touch of suspense to your videos.

Note: Audio is recorded when you're in this mode, but will be turned on only when video is played in normal speed.

1. Tap  >  **Camera**.
2. Switch to **Slow motion** mode. See [Choose a Capture Mode](#).
3. Tap  to start recording.
4. To stop recording, tap .

Selfies and People Shots

Take high-quality selfies with front camera even in low-light conditions. Use your phone's cameras to take vivid group photos all the time.

Tips for Taking Selfies and People Shots

Look best in your shot. Here are some camera options you can adjust or select before taking selfies and people shots.

Live Makeup for Selfies

Touch up your skin with Live Makeup before taking your selfie.

- See [Apply Skin Touch-ups with Live Makeup](#).

Angle of Selfies

You can set the angle of your shots to look exactly the same as how you see yourself on the Viewfinder screen.

1. Tap  >  **Camera**.
2. Switch to **Selfie Photo** mode. See [Choose a Capture Mode](#).
3. Tap  to open the slideout menu.
4. Tap **Settings** > **Camera options**.
5. Make sure the **Save mirrored selfies** option is selected.

Apply Skin Touch-ups with Live Makeup

Touch up your skin before taking your selfie. Live Makeup smoothens your skin in real time.

1. Tap  >  **Camera**.
2. Switch to **Selfie Photo** mode. See [Choose a Capture Mode](#).
3. To change the skin smoothing level, drag the adjustment bar slider.

Tip: The adjustment bar is shown on the Viewfinder screen by default. To hide it, tap  to open the slideout menu, and then tap **Makeup**.

Using Auto Selfie

Keep still to take an auto selfie—or just smile! You just need to turn this feature on in the camera settings.

1. Tap  >  **Camera**.
2. Switch to **Selfie Photo** mode. See [Choose a Capture Mode](#).
3. Tap  to open the slideout menu.
4. Tap **Settings** > **Camera options**.
5. Select the **Auto Selfie** option, and then tap outside the slideout menu to close it.
6. Pose and frame yourself on the Viewfinder screen.
7. To take your selfie automatically, look at the front camera, and then:
 - Stay still until the white box turns green on the Viewfinder screen.
 - Or smile at the camera. Hold your smile for a few seconds until your shot is taken.

Take Selfies with Your Voice

You can easily take photo or video selfies using simple voice commands. You just need to turn this feature on in the camera settings.

Note: This feature may not be available in all languages.

1. Tap  >  **Camera**.
2. Switch to **Selfie Photo** or **Selfie Video** mode. See [Choose a Capture Mode](#).
3. Tap  to open the slideout menu.
4. Tap **Settings** > **Camera options**.
5. Select the **Voice Selfie** option, and then tap outside the slideout menu to close it.

6. Pose and frame yourself on the Viewfinder screen.
7. To take your selfie automatically, look at the front camera, and then:
 - Say **Cheese** or **Capture** to take a photo selfie.
 - Say **Action** or **Rolling** to record a video selfie.

Tip: You can also use voice capture with the main camera. Switch to **Photo** mode, and then select the **Voice Selfie** option in the camera settings.

Take Photos with the Self-timer

When you use the self-timer, the Camera app counts down before taking the shot. You can set the countdown time.

1. Tap  >  **Camera**.
2. Choose the capture mode you want to use. See [Choose a Capture Mode](#).
3. Tap  to open the slideout menu.
4. Tap **Timer** to set the countdown time.
5. To start the timer, tap . The camera takes the photo after the countdown.

Selfie Panorama

Include more people to your selfie with the Selfie Panorama mode.

Note: Some camera features are not available when you're in Selfie panorama mode, such as zooming.

1. Tap  >  **Camera**.
2. Switch to **Selfie Panorama** mode. See [Choose a Capture Mode](#).
3. Hold the phone at face level and in portrait orientation.
4. When you're ready to take the center shot, tap .
5. While holding your phone steadily, slowly swivel left or right on the phone's axis until you see the white capture box move to the side panel of the panorama overlay.

- ❖ The capture box turns green and you'll hear a shutter sound as the photo is taken.



6. Slowly swivel to the opposite side until you see the white capture box move to the other side of the panorama overlay.

- ❖ The capture box turns green and you'll hear a shutter sound as the photo is taken.



The camera stitches the frames into a single photo.

Tip: For best results, closely follow the straight and linear path of the capture box on the panorama overlay. Try to not tilt the phone up or down or move the capture box away from its path.

Zoe Camera

Get more than just a still photo. With Zoe camera, capture living moments as a photo and 3 seconds of HD video.

Some camera features are not available when you're using Zoe camera, such as zooming.

1. Tap  >  **Camera**.
2. Switch to **Zoe camera** mode. See [Choose a Capture Mode](#).
3. When you're ready to capture, tap .
4. When you see the shutter release icon slowly turn red, continue holding the phone steady as the camera captures the photo and 3-second video.

Tip: When taking your shot using the Zoe camera, it's good practice to keep HTC Bolt steady to capture moving subjects against a static background scene.

Panoramic Shots

Get a wider shot of landscapes in one sweep.

Note: Some camera features are not available when you're in this mode, such as zooming.

1. Tap  >  **Camera**.
2. Switch to **Panorama** mode. See [Choose a Capture Mode](#).
3. When you're ready to take the shot, tap .
4. Pan left or right in either landscape or portrait view. Hold your phone as smoothly as you can to automatically capture frames. You can also tap  to stop capturing anytime.
 - ❖ The camera stitches the frames into a single photo.

Hyperlapse

Apply a fast motion effect in your videos. Use Hyperlapse mode to speed videos up to 12 times.

1. Tap  >  **Camera**.
2. Switch to **Hyperlapse** mode. See [Choose a Capture Mode](#).
3. When you're ready to start recording, tap .
4. Change focus to a different subject or area by tapping it on the Viewfinder screen.
5. Tap the flash icon to turn the flash on or off.

6. To stop recording, tap .

Scenes

Instead of manually adjusting the camera settings, you can select a scene with predefined settings that best matches the environment you're capturing.


1. Tap  >  **Camera**.
2. Switch to **Hyperlapse** mode. See [Choose a Capture Mode](#).
3. Tap  and then choose a preset scene:
 -  Capture nightscapes such as a city skyline or street with city lights. Keep the camera steady when taking the shot for best results.
 -  Capture a moving subject such as your kid playing sports or a moving car.
 -  Capture a close-up shot of a subject such as a bird or a flower.
4. When you're ready to take the photo, tap .

If you need to manually adjust a scene and save it as a new preset, see [Manually Adjust Camera Settings](#).

Manually Adjust Camera Settings

If you want to have expert command of your camera settings for different environments or lighting conditions, manually adjust the values for settings like white balance, exposure, ISO, and more. You can save the adjustments for reuse.

1. Tap  >  **Camera**.
2. Switch to **Pro** mode. See [Choose a Capture Mode](#).
3. Tap a setting, and then drag its slider to make adjustments.

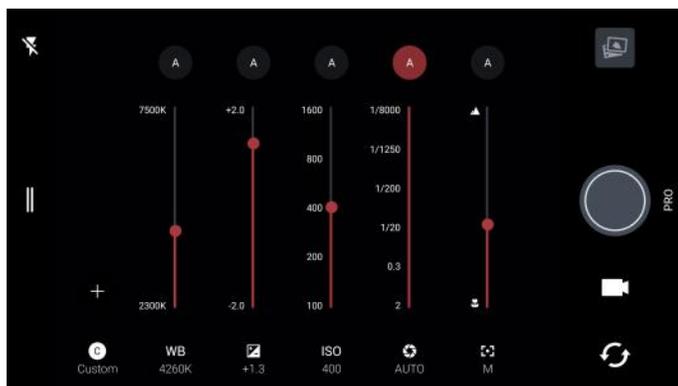

4. Tap a setting again to hide the slider.
5. To save the adjustment as a custom setting, tap , select Custom 1, 2, or 3, and then tap **Save**.
 - To use one of your custom settings, tap  or , and then select the custom setting (, , or )
6. To change a setting back to auto, tap .
7. When you're ready to take a photo, tap .

Take a RAW Photo

Keep more detail in your shots, or fix the lighting in post processing. With Pro mode, you can take photos that will be saved as RAW image files in DNG format, along with a JPG compressed version.

Note: RAW image files take up a lot of storage space. It's recommended to use a SD card as the default storage for photos and videos.

1. Tap  >  **Camera**.
2. Switch to **Pro** mode. See [Choose a Capture Mode](#).
3. Tap  to open the slideout menu.
4. Make sure  is selected. If not, tap  to change it.

– or –

 Tap  to switch to  if you only want to save a JPG compressed version.
5. Tap .

RAW Photos

The Camera app captures a photo in both the DNG RAW format and JPG format.

Digital Negative (DNG) is an open-standard lossless RAW image format. Since a RAW file is typically 2 to 6 times larger than a JPEG file and is not viewable in most photo viewer apps, a photo is captured in both DNG and JPG formats. When you use the Google Photos app, you'll see the JPG copy of the photo, with a  icon to indicate that there is a DNG RAW format of that photo.

RAW photos are not processed when captured to preserve most of the original image data—such as dynamic range—so you can adjust lighting or make professional adjustments using advanced editing tools. After making adjustments, save the RAW photo as a JPG file if you want to print or share it.

Google Photos

Here are some of the things you can do when using Google Photos on HTC Bolt.

- View, edit, and share the photos and videos you've taken on HTC Bolt. You can also access the media files previously backed up to your Google Account.

If you see  on a thumbnail, it means that the media file is only stored on the phone and not yet backed up to your Google Account. Without this icon means that the photo or video is already backed up to your account.

- To select photos and videos, touch and hold a thumbnail to select one. Tap a date to select all the media files under it. Or, touch and hold a thumbnail as your first selection, and then drag your finger to the last item you want to select.
- Enhance RAW photos taken using the HTC Camera app.
- Add Hyperlapse effect to your videos.
- Change the speed of your slow motion videos.

Tip: To learn more about Google Photos, tap  > **Help**. Or, you can visit support.google.com/photos.

View Photos and Videos

When you open Google Photos for the first time, sign in to your Google Account, if prompted, and choose whether to turn backup and sync on or off.

1. Tap  >  >  **Photos**.
 - ❖ You'll see your local and synced photos and videos organized by date. If you see  on a thumbnail, it means that the media file is only stored on the phone and not yet backed up to your Google Account.
2. To switch to another view, tap , and then choose how you want to view your media files.
3. Tap a thumbnail to view it in full screen.
4. To view an album, tap  to open the slideout menu, and then tap **Device folders**.
 - Or, if you see tabs at the bottom of the screen, you can tap the **Albums** tab, and then swipe across the collection thumbnails. Tap **Device folders** to view photos and videos that are saved on your phone.

Share Your Photos

Easily share your photos and videos through a variety of ways.

1. Tap  >  >  **Photos**.
2. Navigate to the photo or video you want to share and then tap it to view or play in full screen.

3. Tap , and then tap how you want to share the photo or video.

Edit Your Photos

Edit your photos, enhance RAW captures, trim videos and more.

Basic Photo Editing

1. Tap  >  >  **Photos**.
2. Tap a photo thumbnail to view it in full screen.
3. Tap , and then do any of the following:
 - Tap  to adjust the brightness, color, and more.
 - Tap  to apply a filter to the photo.
 - Tap  to rotate or crop the photo.
4. While you're editing, touch and hold the photo to compare your changes to the original.
5. After making your adjustment, tap .
6. Tap **Save**.

Enhance RAW Photos

After capturing RAW photos, you can improve its contrast and detail from the Photos app.

1. Tap  >  >  **Photos**.
2. Find and tap the RAW photo you want to enhance. RAW photos are marked with the  icon on the thumbnail.
3. Tap , and then tap **RAW Enhancement**.
4. Tap  to toggle between before and after photos.
5. Tap  when done.

Trim a Video

1. Tap  >  >  **Photos**.
2. Tap a video thumbnail to view it in full screen.
3. Tap , and then drag the trim sliders to the part where you want the video to begin and end.

4. Tap  to preview your trimmed video.
5. Tap **Save**.

❖ The trimmed video is saved as a copy. The original video remains unedited.

Change the Playback Speed of a Slow Motion Video

Adjust the playback speed of a selected section of a slow motion video.

Note: You can only change the video playback speed of videos captured using slow motion in the Camera app.

1. Tap  >  >  **Photos**.
2. Find and tap the thumbnail of slow motion video to view it in full screen. Slow motion videos are marked with the  icon on the thumbnail.
3. Tap the screen to see the onscreen controls.
4. Frame the sequence you want to slow down by moving the left and right sliders.
5. Tap  to watch the result.
6. You can still adjust the playback speed while previewing.

Editing a Hyperlapse video

If you captured a video in Hyperlapse mode, you can apply varying speeds to different sections of the video.

1. Tap  >  >  **Photos**.
2. Find and tap the Hyperlapse video to view it in full screen. Hyperlapse videos are marked with the  icon on the thumbnail.
3. Tap .
4. Move the left and right sliders to divide your video into sections.
5. Tap a section that you want to adjust, and then tap a dot that corresponds to particular playback speed to modify the selected section.
6. Repeat the previous step for the remaining sections.
7. Tap .

❖ The edited video is saved as a copy. The original video remains unedited.

To add a Hyperlapse effect on a regular video:

1. Tap  >  >  **Photos**.
2. Find and tap the thumbnail of a video to view it in full screen.
3. Tap  > **Edit in** > **Zoe Video Editor**.
4. Tap **Create a Hyperlapse video**.
5. Move the left and right sliders to divide your video into sections.
6. Tap a section that you want to adjust, and then tap a dot that corresponds to particular playback speed to modify the selected section.
7. Repeat the previous step for the remaining sections.
8. Tap  .
 - ❖ The edited video is saved as a copy. The original video remains unedited.

Productivity

The following topics detail many of your phone's productivity apps and features including how to search for information, use maps and navigation, and use essential apps such as the calculator, calendar, and clock.

Calendar

Use Google Calendar™ to create and manage events, meetings, and appointments. Google Calendar helps organize your time and reminds you of important events. Depending on your synchronization settings, your phone's calendar stays in sync with your Google Calendar on the Web.

In order to sync with your Google Calendar, you must sign in to your Google Account on your phone. See [Google Account](#).

Calendar Operations

- **View Today's Calendar:** Tap  >  >  **Calendar** tap .
- **Change Calendar View:** Tap  >  >  **Calendar**. Tap  and then tap **Schedule, Day, 3 Day, Week, Month** to change the current view.
- **View Next/Previous Month:** In Month view, flick the screen left or right.
- **View Next/Previous Week:** In Week view, flick the screen left or right.
- **View Next/Previous Day:** In Day view, flick the screen left or right.

Select a Calendar

- If you have more than one calendar, select a calendar in which to add events:
 - Select your Google Account to create a Google Calendar event. If you have several Google Calendars on the Web, select one in which to add your event.
 - You can create multiple Google Calendars only in Google Calendar on the Web. After creating them in Google Calendar on the Web, you'll be able to see them in the Calendar application on your phone. For more information about creating and managing multiple Google Calendars, visit the Google website: calendar.google.com.
 - If you have synchronized your phone with an Exchange ActiveSync account or Outlook on your computer, you can also select these calendars.
 - Select **PC Sync** to create an Outlook Calendar event to sync with your computer.
 - Select **Exchange** to create an Exchange ActiveSync calendar event.

Schedule or Edit an Event

You can create or edit events on your phone, and also sync events with your Google or Exchange ActiveSync calendars.

Note: Editing events is not supported for all accounts.

1. Tap  >  >  **Calendar**.
2. On any Calendar view, do one of the following:
 - **Create an event.** Tap . Tap , and then select the calendar you will add the event to.
 - **Edit an event.** View an event, and then tap .
3. Enter and set the event details.
4. To invite from your Google or Exchange ActiveSync account, tap **Invite people**.
5. Tap **Save**.

View Calendar Events

You can display the Calendar in daily, weekly, monthly, or agenda view. To change the Calendar view, tap  and then tap **Year**, **Month**, **Week**, **Day**, or **Agenda**.

1. Tap  >  >  **Calendar**.
 - ❖ The Calendar app opens.
2. Tap a date and then tap an event.
 - ❖ The event details appear.
 - To edit the event, tap .
 - To delete the event, tap  > **Delete** > **OK**.

Choose Which Calendar to Show

You have the option to show only the calendars that you frequently use. You can also show or hide tasks that you've created in your phone.

1. Tap  >  >  **Calendar**.
2. Tap .
3. Select or clear an account you wish to show or hide.

Note: Calendars are synced on your phone, even if they are hidden.

Dismiss or Snooze Reminders

If you have set at least one reminder for an event, the upcoming event icon  will appear in the notifications area of the status bar to remind you.

1. Open the notification panel and tap the calendar notification.
2. If the notification shows that there are multiple reminders, tap it to see all the reminders. You can then choose to snooze or dismiss them.
3. If you don't want to dismiss or snooze the calendar notifications, tap  from the notification panel to keep them pending in the notifications area of the status bar.

Google Drive

Store your photos, documents, and other files on Google Drive to access them on your phone, your computer, and your other mobile devices. On your phone, just use your Google Account to sign in to your Google Drive storage.

You can then:

- Share a link to your Google Drive files by email.
- Check your available storage space in Google Drive app's settings.
- Back up your phone to Google Drive, so you can easily restore your backup to another HTC phone next time.
- Use the Google Drive app to manage your online storage.

Activate Your Free Google Drive Storage

In addition to the default storage that you get from Google Drive, you may be eligible to receive additional storage for free. Sign in to your Google Account on HTC Bolt (and not from your computer or other non-HTC phones) to claim this offer.

1. Tap  >  >  **Drive**.
2. If this is your first time to open the Drive app, walk through the product tour until you see the additional storage offer.

If you've opened this app before and currently don't see the screen for redeeming the offer, tap  > **Settings** > **Product Tour** to walk through the product tour.

3. On the screen that shows the additional storage offer, tap **Redeem**. Or to claim the offer at a later time, tap **Offer Details** and check up to when you can redeem the offer.
 - ❖ The additional storage will then be added to your account.
4. Follow the onscreen prompts to learn the things you can do with Google Drive.

Notes:

- Additional terms and requirements may apply (including a subscription fee) after your two-year trial expires. For details, refer to the terms and conditions on the Google Drive support site support.google.com.
- The Drive app is owned by Google and is not provided by or associated with HTC Corporation.
- Uploading files requires you have the Drive app installed on your phone. If this app is not preloaded, you can download and install it from Google Play.

Check Your Google Drive Storage Space

Check your available storage space right in the Google Drive app.

1. Tap  >  >  **Drive**.
2. Tap . You'll see your storage space on the slideout menu.

From time to time, check back on how much online storage space you still have before you upload more content.

Google Maps

Use the Google Maps app to determine your location, find directions, browse local businesses and attractions, rate and review places, and more.

Notes:

- Before using any location-based services, you must enable your phone's location feature. For information about setting your phone's location options, see [Location Settings](#).
- The Google Maps application does not cover every country or city.

Get Around Maps

When you open Google Maps, you can easily find your location on the map or check out nearby places by panning and zooming in and out on the map.

1. Tap  >  >  **Maps**.
2. Tap  to show your current location. The blue marker  or  shows your location on the map.
3. Tap  to turn Compass mode on. In Compass mode, the map orients itself depending on the direction you're facing. To exit Compass mode, tap .
4. If you want to see more information overlaid on the map, tap , and then tap a map view such as **Traffic** or **Satellite** to toggle the view on and off.

Navigate the Map


Navigate the map using finger gestures.

- Slide your finger on any direction to pan.
- Double-tap the map or slide two fingers apart over an area to zoom in. To zoom in while holding the phone with one hand, double-tap with your thumb and hold the second tap, and then drag your thumb down.
- Double-tap the map with two fingers or slide two fingers together over an area to zoom out. To zoom out while holding the phone with one hand, double-tap with your thumb and hold the second tap, and then drag your thumb up.
- Touch and hold an area with two fingers and then drag your fingers in a circular motion to rotate the map.
- Touch and hold an area with two fingers and then swipe up to see an angled view of the map. Swipe down to return to overhead view.

Search for a Location

In Google Maps, you can search for a location, such as an address or a type of business or establishment (for example, museums).

1. Tap  >  >  **Maps**.
2. Tap the search box and then enter the place you want to search for.
3. Tap **Search** on the keyboard or tap a suggested search item.

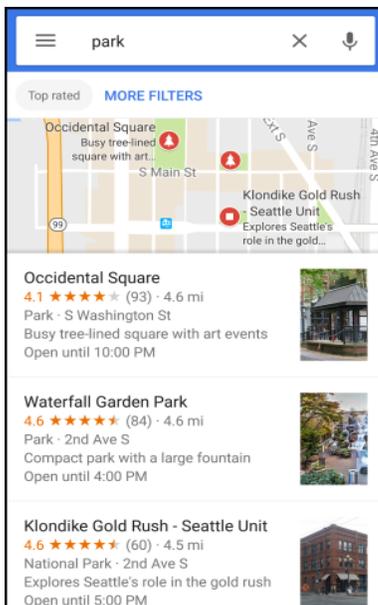

4. If there are multiple search results, they will be indicated by red dots or smart map icons. Scroll down the screen to see all of the search results. If the list collapses and shows only the map, tap **Show list** to display the search results again.


5. Tap an item from the search results to check the address, get directions, see the location in Street View (if available), and more.

To clear the map and search another location, tap **X**.

Get Directions

Get detailed directions to your destination. Google Maps provides travel directions by car, public transit, bike, or foot.

1. Tap  >  >  **Maps**.
2. Tap .
3. Choose how you want to get to your destination.
4. Use your current location as starting point, or tap **Your location** to enter your starting point or select a location from your search history.
5. Tap **Choose destination**, and then enter or select your destination.

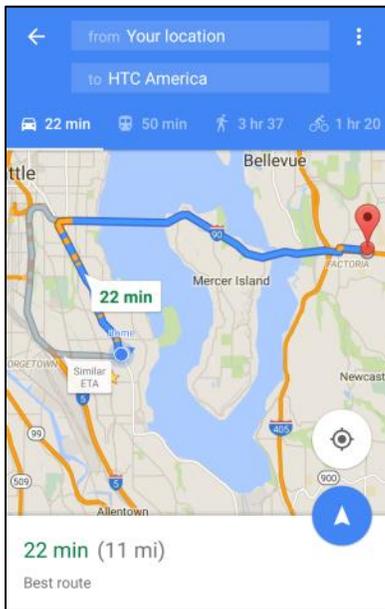

Note: If you're taking public transit, tap  to set the date and time of travel, or tap **Options** to set your route preferences.

6. Tap a route or transit option to view the directions on the map. You'll also see the travel duration for each travel option.
7. Tap the info sheet to view the directions in a list.

When you're finished viewing or following the directions, tap  to reset the map. Your destination is automatically saved in the Google Maps history.

Get Help with Google Maps

Get help and more information about Maps.

- In Google Maps, tap  > **Help**. The Web browser opens and takes you to the Google Maps help site.

Search for Information

Start your search by entering a keyword or by using Google Voice Search™.

Note: Some apps, such as People or Mail, have their own search function, which you can use to search only within those apps.

Perform Searches on the Web and Your Phone

You can search for information on your phone and on the Web.

1. Tap  >  >  **Google**. Or tap the Google Search bar widget if available.

Tip: If you've already set up a Google Account on your phone, you will be given the option to sign in to Google Now™. To sign in to Google Now at a later time, tap **Skip**.

2. In the search box, enter what you want to search for. As you type, matching items on your phone and suggestions from Google search are shown.
 - To search for the information exclusively on your phone, swipe your finger up the screen, and then tap **Search phone**.
3. If what you're searching for is in the list of suggestions, tap the item to open it in its compatible app.

Search the Web with Your Voice

Use Google Voice Search to find information on the Web just by speaking to your phone.

Note: Searching with your voice is not supported on all languages.

1. Tap  >  >  **Google**. Or tap the Google Search bar widget if available.
2. Tap  and then say what you want to search for. After speaking, matching items from Google web search are shown.
3. If what you're searching for is in the list, tap the item to open it in its compatible app. Otherwise, tap  to search again.

Set Search Options

You can select or customize your search preferences.

1. Tap  >  >  **Settings**.

2. Tap **Google**.
3. Tap **Search & Now** and tap the options you want to change.

Tip: To get help or provide feedback, tap  > **Help & feedback** on the Google Settings screen.

Get Instant Information with Google Now

Google Now delivers quick and up-to-date information that matters to you — all without the search.

Depending on your location, time of day, and previous Google searches, Google Now displays information cards that include:

- The day's weather and the weather forecast for upcoming days.
- The traffic conditions on your way to work or your commute back home.
- The directions and travel time to your next appointment.
- The next train or bus arriving at your platform or bus stop.
- Your favorite team's score and stats while you enjoy the game.
- Time or location based reminders that you can set.

Set Up Google Now

Before setting up Google Now, make sure that you're signed in to your Google Account, you've turned on location services, and have an Internet connection. For more information on Location services, see [Location Settings](#).

1. Tap  >  >  **Google**.
2. Tap **Get started**. Or if you've previously set up Google Now on HTC Bolt and turned it off, tap **Get Now cards** > **Set up**.
3. Read the information screen and then tap **Yes, I'm in**. Google Now information cards will start to appear on the Google search screen.
4. Swipe up the screen to see all available information cards.
5. To dismiss a card, swipe it left or right.

Depending on the information that you've allowed to share, more information cards will appear on the Google search screen as you use your phone to search the Web, create appointments, set reminders, and more.

Change Card Settings

You can easily customize the settings of Google Now cards to suit your information needs. For example, you can change the weather units in the Weather card or your transportation mode in the Traffic card.

1. Tap  >  >  **Google**.


2. Do any of the following:

- To change the settings of a specific card, tap  and then tap an action.
- To change specific information such as your work address, sports teams, or stocks you follow, tap , and then tap **Customize Google Now**. Choose the information you want to change.

Set Reminders in Google Now

Setting reminders in Google Now is an easy way to keep tab of things to do. You can set time or location-based reminders. When the reminder time is up or when you've arrived at the specified location, Google Now displays the Reminder card in the Google Search screen and sounds a notification to alert you.

1. Tap  >  >  **Google**.
2. Tap  > **Reminders** > .
3. Enter the reminder title, such as the task you want to be reminded of.
4. Select **Time** to set a time-based reminder or **Place** to set a location-based reminder.
5. Set the reminder time or location details.

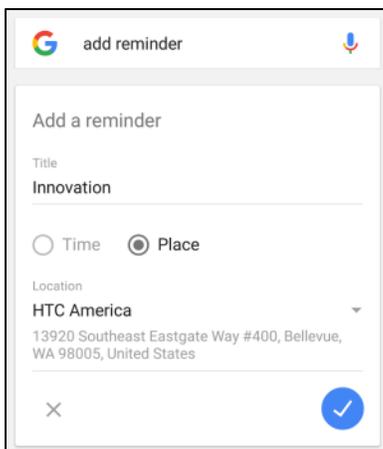

6. Tap .

When the reminder time is due or when you've arrived at the location, the Reminder card will appear in the Google search screen. You can then dismiss or snooze the reminder.

Tip: To see a list of all your reminders, tap  > **Reminders**.

Refresh Google Now

Refresh Google Now to update the information cards or show relevant cards for information that you've just added on your phone, like an upcoming event or reminder.

1. Tap  >  >  **Google**.
2. Pull down the screen with your finger, and then release to refresh.

Turn Off Google Now

3. Tap  >  >  **Settings**.
4. Tap **Google** > **Search & Now**.
5. Tap **Now cards**.
6. Tap the **Show cards** switch and then tap **Turn off**.

Now on Tap

Use Now on Tap to search information while viewing emails and websites, listening to music, or even while exchanging text messages. Now on Tap lets you look for information about the screen you're on so you don't have to leave the app. Just touch and hold  and Now on Tap shows you related information, apps, and actions.

Note: This feature may not be available in all languages.

Turning On Now on Tap

Before turning on Now on Tap, make sure that you're signed in to your Google Account and have set up Google Now, you've turned on location services, and have an Internet connection. For more information on Location services, see [Location Settings](#).

1. Tap  >  >  **Google**.
2. Tap  > **Settings** > **Now on Tap**.
3. Tap the switch to turn Now on Tap on.
 - If you want to disable Now on Tap, tap the switch again.

Search with Now on Tap


Instantly search what's on your phone screen.

1. On the current app you're in, touch and hold .
2. Now on Tap analyzes the screen and shows a card with information, apps, or actions related to the searched item or location.
3. Tap an item on the card to view more information or perform an action. You can also say, "OK, Google" and say what you want to know about the searched item or location.
4. For example, if Now on Tap searched for a restaurant, you can say "OK, Google. Take me to that restaurant" to get directions to that location.

5. To hide the information cards and return to the screen, tap .

Boost+

Optimize your phone's performance, maximize your phone storage capacity, and even lock some apps for an added level of privacy.

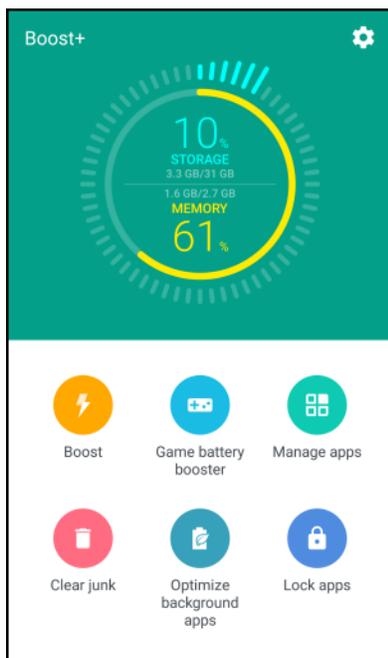

Here are some of the things you can do when using Boost+ app.

- Monitor your phone storage space and memory usage.
- Delete cache, app installers, temporary files, and ad files on your phone.
- Optimize system resources to extend battery life while you're playing your favorite games.
- Manage irregular app activities, stop unused apps from running in the background, lock apps with sensitive content, or uninstall apps you don't use.

Turn Smart Boost On or Off

The Smart Boost feature allows the Boost+ app to automatically free up memory space on your phone.

Note: Smart Boost is turned on by default.

1. Tap  >  >  **Boost+**.
2. Tap , and then select or clear the **Smart boost** option.

Add Apps to Smart Boost Exception List

You can set the Boost+ app to skip apps when it runs its Smart Boost checks.

1. Tap  >  >  **Boost+**.
2. Tap **Smart boost**.
3. Tap  > manage skipped apps.
4. Tap , and then select the apps to skip.
5. Tap **Add**.

Clear Junk Files

The Smart Boost feature allows the Boost+ app to automatically free up memory space on your phone.

Note: Smart Boost is turned on by default.

1. Tap  >  >  **Boost+**.
2. Tap **Clear junk**, and then select or clear the **Smart boost** option.
 - ❖ The Boost+ app will show you how much storage space is being used up by different junk files, such as cache files, ad files, temporary files, and app installers.
3. Select or clear the junk file types you want to delete.
4. You can tap  next to a category to view the files under it.
5. Tap  to clear junk files.

Tip: In the Boost+ app's settings, you can also choose to get notified when your junk files exceed a set limit or when an app is unused over a period of time.

Use Game Battery Boost

Add a gaming app to the Game battery booster list so your phone automatically optimizes system resources and extend your phone's battery life while you're playing it.

1. Tap  >  >  **Boost+**.
2. Tap **Game battery booster**.
3. To add a game to the list, tap , and then select one or more apps to include.
4. Tap **Add**.
5. On the Game battery booster screen, tap the On/Off switch next to an app to turn it on. When prompted, you can choose to open the app and check whether the optimized result fits your viewing preference.

Note: To remove an app from the list, tap  > **Remove**. Select one or more apps, and then tap **Remove**.

Check Activities of Downloaded Apps

The Boost+ app can check for irregular activities of a downloaded app that may affect your phone's performance. When an irregular activity is detected, you can choose to stop the activity. Or, you can also uninstall the downloaded app via the Boost+ app.

Note: You can only uninstall the apps you've downloaded.

1. Tap  >  >  **Boost+**.
2. Tap **Manage apps**.
3. Do any of the following:
 - To uninstall apps you don't need, select one or more apps under the **Apps** tab, and then tap .
 - Go to the **Irregular Activities** tab to see if there are irregular activities detected. If there's one, tap it and choose an action.

Create a Lock Pattern for Some Apps

Add a security pattern to some installed apps that you treat as private or personal. You'll be prompted to draw the lock pattern whenever you open a selected app after waking up your phone from Sleep mode.

1. Tap  >  >  **Boost+**.
2. Tap **Lock apps**.
3. Draw your desired lock pattern.
4. Add your security question by entering your birthday or signing in to your Google Account.

Note: This will only serve as your authentication password to reset the lock pattern.

5. Tap the On/Off switch next to an app to require a lock pattern to open it.
6. Tap .

Tips:

- To change the app lock pattern, tap **Lock apps** >  > **Change pattern**.
- To use your fingerprint to unlock apps, tap **Lock apps** > , and then select the **Use fingerprint to unlock** option.

Calculator

Your phone's convenient built-in calculator lets you perform basic mathematical equations.

1. Tap  >  >  **Calculator**.

2. Enter numbers or formulas using the onscreen keys.
3. Do any of the following:
 - Turn your phone sideways to switch to a scientific calculator, and then enter numbers or formulas using the onscreen keys. The scientific calculator lets you perform more complex calculations with square root, logarithmic, and trigonometric functions.
 - Tap **DEL** to remove one digit at a time. Touch and hold **DEL** to delete the entire number.
4. Tap **=** for the result.

Clock

Your phone has a clock app that lets you set alarms, view time in time zones around the world, use a stopwatch, set a timer, and use your phone as a desk clock.

Check the Time

You can check the phone any time on your phone. The current time displays in the upper right corner of the status bar. Many widgets and lock screens also display the time and provide options for how time is displayed.

Set the Date and Time Manually

You can change your date and time.

1. Tap the clock on your Home screen panel, if available. Or tap  >  >  **Clock**.
2. On the **World clock** tab, tap  > **Local time settings**.
3. Clear **Automatic date & time** and **Automatic time zone**, and then set the time zone, date, and time as required.

Tip: To display military time, choose the **Use 24-hour format** option.

Set an Alarm

You can set up one or more alarms.

1. Tap the clock on your Home screen panel, if available. Or tap  >  >  **Clock**.
2. On the **Alarms** tab, select the check button of an alarm and then tap that alarm.
3. Under Set alarm, use the scroll wheels to set the alarm time.
4. If you want the alarm for multiple days, tap **Repeat**.
5. Tap **Done**.
6. If you need to set more than three alarms, tap **+**.

Tip: To turn off an alarm, clear the check box of that alarm.

Phone at Alarm Time

- At the set alarm time, the phone sounds the alarm and/or vibrates.
- Stopping an alarm: When the alarm sounds, drag  up to dismiss it.

Additional Clock Features

Your phone's clock app provides additional useful features including world clock, stopwatch, and timer functions.

World Clock

The world clock lets you keep track of the current time in multiple cities around the globe.

1. Tap the clock on your Home screen panel, if available. Or tap  >  >  **Clock**.
2. Tap the **World clock** tab.
3. Tap  and select a city.
4. Repeat to add multiple cities.

Stopwatch

The stopwatch lets you time events down to the hundredth of a second.

1. Tap the clock on your Home screen panel, if available. Or tap  >  >  **Clock**.
2. Tap the **Stopwatch** tab.
3. Tap **Start** to begin timing.
4. Tap **Stop** to stop timing.
 - Additional options include **Lap** to keep track of laps and **Reset** to continue timing.

Timer

The timer provides a countdown timer for up to 99 hours, 59 minutes, and 59 seconds.

1. Tap the clock on your Home screen panel, if available. Or tap  >  >  **Clock**.
2. Tap the **Timer** tab.
3. Use the scroll wheels to set the length of the time.
4. Tap **Start** to begin the timer.

Weather

Use the Weather app and widget to check the current weather and weather forecasts for the next few days. In addition to your current location, you can view weather forecasts for other cities around the globe.

1. Tap  >  >  **Weather**.
 - ❖ You'll see the weather from different cities, including where you are.
2. Tap a city to view weather information.
3. Tap the **Hourly** and **Forecast** tabs to view the forecasts in your selected location.
4. To check the weather in other cities, tap , and then select the city you want.
5. To add more cities, tap  and then enter the location.

Your settings in the Weather app also control the weather information that is shown in the Clock and Calendar apps.

Voice Recorder

Use Voice Recorder to capture information during lectures, interviews, or even to create your own audio log.

Record Your Voice

Start creating voice memos on your phone.

1. Tap  >  >  **Voice Recorder**.
2. Hold the microphone near the sound source.
3. Tap  to start recording a voice clip.

Note: Voice Recorder can run in the background while you do other things on your phone, except when you open other applications that also use audio functions.

4. Tap  to stop recording.
5. To play back the voice clip, tap .

Tip: To see your recorded voice clips, tap . Touch and hold a voice clip to see options for sharing, setting it as a ringtone, and more.

HTC Sync Manager

With HTC Sync Manager, enjoy the same media whether you're at your computer or on the move. Use it also to store your same contacts, important documents, and other data on both your phone and your computer.

HTC Sync Manager supports a computer running Windows or Mac OS.

Here are the things you can do with HTC Sync Manager.

- **View and manage media on your computer**
 - Browse and manage music, photos, and videos that are on your computer and your phone.
 - Import iTunes and Windows Media® Player playlists from your computer to HTC Sync Manager.
 - Play music, videos, and playlists using the built-in player.
 - Create playlists from music on your computer or your phone and then sync these to your other device.
- **Transfer content**
 - Transfer iPhone photos, text messages, contacts, and more to your HTC phone. You can also find and install the same apps that you were using on your iPhone.
 - Import all music, photos, and videos from your HTC phone to your computer.
 - Copy selected music, photos, or videos from your computer to your phone.
 - Import documents from your computer to your phone.
- **Back up and restore.** Back up your HTC phone to your computer so you can easily restore your backup to the same phone or to another phone.
- **Sync data.** Sync data such as contacts, calendar, and web bookmarks between your phone and your computer.

Install HTC Sync Manager on a Windows Computer

Follow the steps below to install HTC Sync Manager on your computer.

Note: You can install HTC Sync Manager on Windows XP or later versions. To install it on a Mac computer, you need Mac OS 10.6 or later versions.

Important: If you have problem with installing HTC Sync Manager, close all your running programs and reinstall. If the problem persists, temporarily disable your anti-virus program and try installing again.

1. Download the HTC Sync Manager installer from htc.com/hsm.
2. Launch the installer and follow the onscreen instructions.
3. Connect your phone to your computer using the supplied USB cable. HTC Sync Manager opens.

Important: If you disabled your anti-virus program, make sure to turn it back on after installing HTC Sync Manager.

Transfer iPhone Content to Your HTC Phone

With HTC Sync Manager, easily transfer iPhone content such as contacts, messages, wallpaper, camera photos, and more to your HTC phone. If you're using an HTC phone that has HTC Sense 6, HTC Sync Manager also enables your phone to find and install the same apps that you were using on your iPhone.

Note: You need to use iTunes 9.0 or later to back up your iPhone content first to your computer.

1. Connect your iPhone and your HTC phone to your computer.
2. In HTC Sync Manager, click **Home > Transfer & Backup**.
3. Click the **Get Started** button.
4. If you haven't used iTunes to back up your iPhone content to your computer, please do so before proceeding.
5. Select your iPhone backup file, and then click **OK**.
6. Select the types of content you want to transfer to your HTC phone.

You can choose whether to replace the content on your HTC phone with the iPhone content.

7. Click **Start**. Wait for HTC Sync Manager to finish transferring content.
8. When done, slide open the notification panel on your HTC phone, and then tap .
9. Choose which apps you were using on iPhone you want to find in Google Play and download to your HTC phone.

Get Help

To find out more about using HTC Sync Manager, download the user guide PDF from the HTC support site (htc.com/hsm). Or open the Help that comes with the software.

Tip: On Windows, click  in HTC Sync Manager, and then click **Help**.

HTC Help

Before calling for support, you can first use the Help app to troubleshoot or perform diagnostics on your phone. This helps you in finding the problem cause, and in determining whether you can resolve the problem or you need to call for support.

- Tap  >  >  **Help**.

Note: If HTC Help is not preinstalled on your phone, you can download it from the Google Play Store app.

Entertainment and Activities

Your phone lets you discover, download, and listen to your favorite music through a variety of music apps. Your phone is also equipped with fun apps that will keep you entertained anytime, anywhere.

Google Play Music App

The Google Play Music app lets you browse, shop, and play back songs purchased from Google Play as well as songs you have loaded from your own music library. The music you choose is automatically stored in your Google Play Music library and instantly ready to play via streaming or download.

For more information about Google Play Music, visit play.google.com/about/music.

Note: For information about loading music onto your phone, see [Copy Files To or From Your Phone](#).

Play Music with Google Play

Use the Google Play Music app to listen to all your music on your phone. Check the Google Play Music help for compatible music file formats.

1. Tap  >  >  **Play Music**.
2. Tap  > **Music library**.
3. Flick the screen left or right to select a library category such as **Artists** or **Albums**.
4. Tap an item from the category window and then tap a song.
 - ❖ The song begins playing.

Google Play Music Screen Layout

The following diagram outlines the main features of the Play Music app player screen.



Create Playlists in Google Play Music

Organize music into playlists to fit every occasion.

1. Tap  >  >  **Play Music**.
2. Tap  > **Music library**.
3. Flick the screen left or right to select a library category such as **Artists** or **Albums**.
4. Tap an item from the category window and then tap a song.
 - ❖ The song begins playing.
5. Tap  > **Add to playlist**.
6. Select whether you want to add the song to a new playlist or to an existing playlist.
7. Follow screen instructions to proceed.

Adding Currently Playing Music to a Playlist

- While playing music, tap  > **Add to playlist**, and then select the playlist.
 - ❖ The music is added to the playlist.

Sprint Music Plus

With Sprint Music Plus and the Music Store, Ringtones Store, and Ringbacks, you can purchase, download, and play music, ringtones, and ringback tones for your phone.

Install the Sprint Music Plus App on Your Phone

Before you use Sprint Music Plus on your phone, you must download and install the app from the Google Play Store app.

1. Tap  >  >  **Sprint Music Plus**.
2. Tap **Install**, and then tap **Accept**.
3. When the download has completed, tap **Open**.
 - To open the app from the Home screen, tap  >  **Sprint Music Plus**.

Access Sprint Music Plus

1. Tap  >  >  **Sprint Music Plus**.
 - The first time you use the app, tap **Accept** to agree to the Premium Services Terms of Use.
2. Tap a store option from the main page (**Ringbacks Store**, **Music Store**, or **Ringtones Store**), or tap  > **Music** (under **Library**) to access your music.
3. Tap the onscreen navigation tools to skip ahead or rewind.
 - For more information, tap  > **Settings** > **About** or **Help**.

Purchase and Download Music from the Sprint Music Plus Store

From the Sprint Music Plus Store, you can shop for songs to purchase and download to your phone.

1. Tap  >  >  **Sprint Music Plus**.
2. Tap **Music Store**.
3. Tap  and then enter a song or artist in the search field or browse through options in the tabs in the center of the screen.
4. Tap a song to select it.
 - ❖ The song information screen is displayed.
5. Follow the onscreen instructions to preview or purchase the song. Tap  at any time to display the Sprint Music Plus menu.

Tip: For ringtones or ringback tones, tap **Ringtones Store** or **Ringbacks** from the Sprint Music Plus main menu.

YouTube

View videos uploaded to YouTube and upload your own videos to your YouTube account.

Watch YouTube Videos

Check out the latest YouTube sensations.

1. Tap  >  >  **YouTube**.
2. Browse or search for a video.
3. Tap the one you want to watch.
4. While watching a video, you can:
 - Turn the phone sideways to watch the video in full screen.
 - Tap the video screen to pause, resume playback, or drag the slider to jump to a different part of the video.
 - Tap  to see the video description or comments from other viewers, or scroll down to see related videos.
 - Browse other videos by minimizing the video screen. Tap  or drag the video screen down to minimize. To close the video thumbnail, swipe it left or right.

Tip: If you want to watch the video at a later time, tap  next to the video title, and then tap **Add to Watch Later**. You can access the video again from your account profile's Watch Later list.

Search for Videos

1. Tap  >  >  **YouTube**.
2. Tap .
3. In the search box, enter the words you want to search for. As you type, matching items are shown as a list.

Tip: Tap  to enter it in the search box. New suggestions appear and you can enter more text or tap  beside a subsequent suggestion to quickly refine your search.

4. If what you're searching for is in the list of suggestions, tap the item.
5. To show results which were just recently posted, tap , tap **All time**, and then select a time period you want.
6. Scroll through the results and tap a video to watch it.

Share a Video Link

1. Tap  >  >  **YouTube**
2. Tap a video or search for a video and then tap it.
3. Tap .
4. Choose how you want to share the video link from the available options.

Post a Video to YouTube


You can post videos to your YouTube account from your phone. Before posting, you must set up a YouTube account and sign in to it on your phone.

1. Tap  >  >  **YouTube**
 - ❖ The YouTube app launches.
2. Tap the Account () tab, and then tap .
3. Record a video or select a recorded video to upload.
4. Enter a title, description, and tags, and select a privacy setting.
5. Tap .
- ❖ The video is uploaded to your YouTube channel.

Sprint Zone

Access your Sprint account, get phone information and help, find recommended apps, and more.

1. Tap  >  >  **Sprint Zone**.
2. Tap **My Account** to sign in to and manage your Sprint account, **Support** to get help with your device or service, **Sprint News** to learn the latest Sprint information, or **Network** to see or test your current data connectivity.

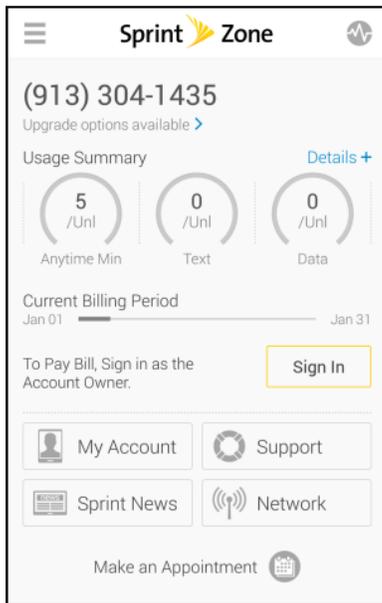

Note: Sprint Zone categories and options are subject to change. Check back frequently for new content and updates.

HTC BoomSound and Adaptive Audio

Hear what you've been missing. HTC BoomSound and Adaptive Audio gives you a rich, authentic sound experience, whether you're listening to music, watching a video, or playing a game.

Set Up the HTC BoomSound Adaptive Audio Earphones

Experience music tuned to your ears when you use the HTC BoomSound Adaptive Audio earphones that came with your HTC Bolt.

Personal Audio Profile

Personalize your music listening experience for your earphones. Create your own audio profile that conforms to your hearing. You can create several audio profiles for your earphones and switch between your profiles.

1. Plug the earphones into the USB Type-C charger/Accessory jack and then wear them.
2. If this is your first time to plug in the earphones and you're prompted to set up an audio profile, tap **Set up > Start**.
 - If you're not prompted, go to **Settings** and then tap **HTC BoomSound and adaptive audio > Start**.
 - ❖ The earphones will scan your ears and adjust the audio output to suit your hearing.
3. Tap **Play audio** to review the audio profile. You can also tap the switch to hear the difference.

4. Tap the name field and then enter a name for the audio profile. It is recommended that you name the audio profile based on the connected earphones.
5. Tap **Next** and then tap **Done**.
6. On the Personal Audio Profile screen, you can:
 - Tap an audio profile to edit by allowing the phone to detect ambient noise again.
 - Tap **+** to add another personal audio profile.
 - Tap **⋮** to rename or delete an audio profile.

Note: HTC BoomSound is not available over HDMI, Bluetooth, Miracast, or USB audio out.

Adjust the Earphones to Ambient Sound Levels

After creating a personal audio profile, HTC BoomSound Adaptive Audio earphones will be able to detect the noise level of the ambient environment and adjust the audio output to compensate.

To detect and balance ambient noise while playing music, slide the notification panel down, and tap the **HTC BoomSound and adaptive audio** notification.

Turn HTC BoomSound Adaptive Audio On or Off

You can enable or disable HTC BoomSound Adaptive Audio.

- In **Settings**, tap the **HTC BoomSound and adaptive audio** switch to turn it on or off.

– or –

While playing music, slide the notification panel down, expand the **HTC BoomSound and adaptive audio** notification, and then tap **Turn off**.

Settings

The following set of topics will cover your phone's settings menus and options. For an overview of the settings menu, see [Basic Settings](#).

Connections Settings

The following topics provide an overview of your phone's basic and connection settings.

Basic Settings

Open Settings from the Apps screen, Notification panel, or Quick Settings panel.

- Tap  >  **Settings**.
 - Swipe down from the top of the screen to open the Notification panel, and then tap .
 - Swipe down from the top of the screen with two fingers to open the Quick Settings panel, and then tap .
- ❖ You'll see the following top-level settings categories.

Category	Description
Airplane mode	Turn Airplane mode on or off.
Wi-Fi	Enable and set Wi-Fi options.
Wi-Fi Calling	Enable and set up Wi-Fi Calling.
Bluetooth	Enable Bluetooth connections.
Mobile data	Settings for your mobile network and data connection.
HTC Connect	Options where to play media.
More	Settings for data usage, NFC, Mobile network sharing, HTC Mini+, and VPN, and USB connection.
Personalize	Options for customizing your phone's wallpaper, navigation bar, themes, sound, and more.
Fingerprint scanner	Options to add and manage your fingerprints and the fingerprint sensor.
Accounts & sync	Set up your email and social network accounts.
Location	Select your phone's location access options.
Security	Set up a screen lock and other security features.

Accessibility	Set accessibility options such as screen magnification, TalkBack, and more.
Backup and reset	Options for selecting the backup account, restoring a backup, and resetting the phone.
Get content from another phone	Options for transferring content from an old phone to your new HTC phone.
Google	Options for all Google apps and features on your phone.
Display, gestures & buttons	Change the display, motion gestures, and G-Sensor settings.
HTC BoomSound and adaptive audio	Turn HTC BoomSound Adaptive Audio on or off or create an audio profile that is suited to your listening preferences.
Sound & notification	Set your sound profile, volumes, incoming call options, and system sounds.
Call	Options for received calls, voicemail settings, and others including hearing aids and CDMA call settings (TTY mode, DDTM mode, plus code dialing, etc).
Apps	View all downloaded or running apps, uninstall apps, search for an app and more.
Storage	View your phone and SD card storage, set the SD card mode, and more.
Power	Check your battery level, and battery usage, turn on power saver and extreme power saving mode, and more.
Memory	View your phone memory use and check which apps use the most memory.
Language & keyboard	Change the language and the onscreen keyboard settings.
Date & time	Change the date and time and date/time format.
Printing	Choose print services using Google Cloud Print.
System updates	Options for updating your profile, PRL, UICC, and phone software.
About	View your phone's hardware and software information.

Tip: You can also swipe right on the Settings screen to see the list of main settings and quickly jump from one setting to another. You can also tap  in Settings to easily find options and settings.

Airplane Mode Settings

Enable or disable Airplane mode.

- See [Airplane Mode](#) for details.

Wi-Fi Settings

Your phone lets you take advantage of Wi-Fi hotspots for high-speed data access using available computer networks.

- See [Wi-Fi](#) for details.

Wi-Fi Calling

Enable and set up Wi-Fi Calling on your phone.

- See [Wi-Fi Calling](#) for details.

Bluetooth Settings

Your phone's Bluetooth capabilities let you use wireless headsets, send and receive pictures and files, and more.

- See [Bluetooth](#) for details.

Mobile Data Settings

This menu lets you turn your data connection on or off, and more.

- See [Data Services General Information \(4G LTE and 3G Networks\)](#) for details.

HTC Connect Settings

Configure settings for HTC Connect.

- See [HTC Connect](#) for details.

More Wireless & Network Settings

Additional options that let you view your data usage and set up VPN.

1. Tap  >  >  **Settings**.
2. Under Wireless & networks, tap **More** and select an option.
 - **Data usage:** Check how much data usage have you been using or check the data usage of certain apps. See [Manage Your Data Usage](#).
 - **NFC:** Share information wirelessly with other NFC-enabled device or pay securely using your phone. See [Share Content with NFC](#) and [Google Wallet](#).

- **Mobile network sharing:** Use these settings to turn Mobile Hotspot on or off, or enable USB tethering. See [Mobile Hotspot](#) or [Share Internet Connection via USB Tethering](#).
- **VPN:** Configure your Virtual Private Network (VPN) settings so you can connect to your company's intranet sites. See [Virtual Private Networks \(VPN\)](#).
- **USB connection:** Select the USB connection type when you connect the phone to your computer.

Device Settings

Adjust your phone's sound, display, storage, apps and battery settings.

Display, Gestures & Buttons Settings

Adjusting your phone's display and gestures settings not only helps you see what you want, it can also help increase battery life.

Glove Mode

Turn Glove mode on to get better screen responses even when you're wearing gloves.

1. Tap  >  >  **Settings**.
2. Tap **Display, gestures & buttons**.
3. Select the **Glove mode** option.
 - ❖ When Glove mode is turned on, you'll be able to see where you've tapped the touch screen.

Auto-rotate Screen

By default, the screen orientation automatically changes when the phone is rotated.

To disable automatic screen orientation:

1. Tap  >  >  **Settings**.
2. Tap **Display, gestures & buttons**.
3. Clear the **Auto rotate screen** option and tap .

Notes:

- Not all application screens support automatic rotation. The screen orientation automatically changes to landscape mode when you turn the phone sideways.
- The TalkBack accessibility feature works best if you turn off auto-rotate. For details, see [Navigate Your Phone with TalkBack](#).

Display Size

You can adjust the size of texts and screen content for your viewing comfort.

1. Tap  >  >  **Settings**.
2. Tap **Display, gestures & buttons**.
3. Tap **Display size** and then select the size to use.

Brightness

By default, the screen brightness automatically adjusts depending on the surrounding lighting conditions.

1. Tap  >  >  **Settings**.
2. Tap **Display, gestures & buttons**.
3. Tap **Brightness level**.
4. Drag the slider to adjust the brightness.
5. Tap **OK**.

Set the Maximum Brightness Level

You can set the maximum brightness level for your phone screen.

1. Tap  >  >  **Settings**.
2. Tap **Display, gestures & buttons**.
3. Tap **Brightness level**.
4. Clear the **Automatic brightness** option.
5. Drag the slider to adjust the maximum brightness level.

Quickly Adjust the Brightness

1. Swipe down from the status bar with two fingers to open Quick Settings.
2. Drag the **Brightness** indicator left or right to adjust the brightness intensity.



Color Temperature

Adjust the display's color temperature.

1. Tap  >  >  **Settings**.
2. Tap **Display, gestures & buttons**.
3. Tap **Color temperature**, and then drag the slider to the desired color temperature.

Night Mode

Enable Night mode in the evening to filter out blue light that can strain your eyes.

1. Tap  >  >  **Settings**.

2. Tap **Display, gestures & buttons**.
3. Tap **Night mode**, and then tap the On/Off switch to turn it on.
4. Drag the slider to adjust the color temperature. Dragging the slider to Warmer filters out more blue light.
5. Tap **Enable Night mode automatically** to set a schedule when Night mode will be turned on.

Screen Saver

Select your phone's screensaver when it's idle or docked.

1. Tap  >  >  **Settings**.
2. Tap **Display, gestures & buttons**.
3. Tap **Screen saver**, and then select a screensaver.
4. Tap .

Screen Timeout (Sleep)

After a period of inactivity, the phone screen turns off to conserve battery power. You can set the idle time before the screen turns off.

Tip: To turn off and lock the screen quickly, press the **Power/Lock** button.

1. Tap  >  >  **Settings**.
2. Tap **Display, gestures & buttons**.
3. Tap **Screen timeout**, and then tap the time before the screen turns off.

Note: Extended screen timeout periods reduce the battery's talk and standby times.

Buttons Settings

Control the button settings on the phone.

1. Tap  >  >  **Settings**.
2. Tap **Display, gestures & buttons**.
3. Tap **Navigation button backlight**, and then select whether you want the navigation button backlight to automatically turn off or to always light up.
4. Select **Menu button** to use Recent Apps  as the menu button for certain apps.

Media Gesture

Select this option to allow other apps to recognize the 3-finger gesture.

Note: The 3-finger gesture may not be available when TalkBack gestures are enabled. For details, see [Navigate Your Phone with TalkBack](#).

1. Tap  >  >  **Settings**.
2. Tap **Display, gestures & buttons**.
3. Tap **Media gesture** to select or clear this option.

Motion Launch Gestures

Configure the Motion Launch gesture from this setting. See [Motion Launch](#) for details.

1. Tap  >  >  **Settings**.
2. Tap **Display, gestures & buttons**.
3. Tap **Motion Launch gestures** and enable this feature.

HTC BoomSound and Adaptive Audio

Turn the HTC BoomSound Adaptive Audio on and off and select a sound mode.

- See [HTC BoomSound and Adaptive Audio](#) for details.

Sound & Notification Settings

The Sound & notification settings menu lets you control your phone's audio, from ringtones and alerts to touch tones and notifications.

Sound Profile and Vibrate

Use the following settings for such features as silent mode, vibrate, and overall phone volume.

1. Tap  >  >  **Settings**.
2. Tap **Sound & notification** > **Sound profile**.
3. Select **Normal**, **Vibrate**, or **Silent**.

Note: If you selected **Vibrate** as your sound profile (step 2), your phone will vibrate for all notifications and incoming calls.

4. Tap .
5. To set your phone to always vibrate for calls in addition to any ringer settings, select the **Vibrate** option below **Volumes**.

Volumes

You can separately adjust your phone's multimedia, ringtone and notifications, and alarm volumes.

1. Tap  >  >  **Settings**.
2. Tap **Sound & notification** > **Volumes**.
3. Drag the volume sliders on the screen to adjust the ringtone and notifications, music and videos, and alarm volumes.
4. Tap **Done**.

Note: You can adjust the ringer volume in standby mode (or the earpiece volume during a call) by pressing the **Volume** button.

Notification and Alarm Sound

You can set the notification and alarm sound.

1. Tap  >  >  **Settings**.
2. Tap **Sound & notification**.
3. Tap **Notification sound** or **Alarm**.
4. Select the sound you want and tap **Apply**.

Do Not Disturb

Use Do not disturb mode to reject calls, and silence audible alerts and notifications, but still keep a data connection available.

1. With two fingers, swipe down from the top of the screen to open Quick Settings.
2. Tap **Do not disturb** . If necessary, swipe to the next screen.
3. Tap **Total silence**, **Alarms only**, or **Priority only** depending on if you want to allow exceptions. When **Priority only** is selected, you can receive messages or calls from contacts in your exceptions list.
4. Tap **Until you turn this off** if you want to turn off Do not disturb by yourself or tap **+** or **-** to set the number of hours before Do not disturb turns off automatically.
5. Tap **Done** to activate it.
 - ❖ The Do not disturb icon  will appear in the status bar.
6. You can also tap **More settings** and then select **Auto decline incoming calls** to decline incoming calls and have them sent to voicemail.

Tips:

- When the screen is on, press the **Volume** button and then tap **End now** to turn off Do not disturb mode quickly.

- When you press the **Volume down** button until you reach silence mode, Do not disturb **Alarms only** mode is activated.

Note: When Do not disturb is on, the notification LED will not flash.

Block Visual Disturbance

You can set Do not disturb mode to block visual disturbances such as pop up notifications.

1. Tap  >  >  **Settings**.
2. Tap **Sound & notification**.
3. Tap **Do not disturb** > **Block visual disturbances**.
4. Tap the On/Off switches to choose whether to block visual disturbances when the screen is on and off.

Allow Notifications and Contacts to Bypass Do Not Disturb Mode

Add important contacts to an exceptions list so you can still receive their calls and messages even when Do not disturb mode is on.

1. Tap  >  >  **Settings**.
2. Tap **Sound & notification** > **Do not disturb**.
3. Tap **Priority only allows**.
4. Tap the On/Off switch next to the items you wish to allow.
5. Tap **Messages from** or **Calls from** to select who can contact you.
6. Tap **Manage approved contacts**, and then tap  to add contacts to your exceptions list.
7. To remove contacts or numbers from the list, tap  > **Remove contacts**.

Set a Do Not Disturb Schedule

Schedule Do not disturb to turn on automatically and how long will it last. For example, you can set it to turn on during a weekly meeting.

1. Tap  >  >  **Settings**.
2. Tap **Sound & notification**.
3. Tap **Do not disturb** > **Automatic rules**.
4. Tap  **Add rule**.
5. Select whether to base the rule on a time or an event, enter a name for the rule, and then tap **OK**.

6. Set the rule's parameters.
 - For Time rule:
 - Set the days.
 - Set the start and end times.
 - Select a Do not disturb level.
 - Choose whether to allow the rule to stop at either the rule end time or by the next alarm you've set in the Clock app.
 - For Event rule:
 - Select a calendar you want to make the rule for.
 - Set a condition for the type of reply.
 - Select a Do not disturb level.

Note: You can turn an automatic rule on or off by tapping the On/Off switch when viewing the details of the rule.

Incoming Calls - Ringtone

You can select and assign ringtones for your incoming calls. Your phone provides a variety of ringtones that you can set as the default ringtone of your phone.

1. Tap  >  >  **Settings**.
 2. Tap **Sound & notification** > **Ringtone**.
 3. Tap the ringtone you want to use, and then tap **Apply**.
- ❖ The ringtone briefly plays when selected.

Note: To set a sound file as ringtone, see [Ringtone](#).

Incoming Calls - Other Options

Enable **Quiet ring on pickup** so your phone lowers the ringtone volume the moment you pick it up to answer a call. When your phone is in your bag or pocket, enable **Pocket mode** so the phone rings louder when you have an incoming call. Tap the **Flip to mute** option to mute the phone just by flipping it over.

You can choose to enable or disable the **Quiet ring on pickup** or **Pocket mode** incoming call features.

1. Tap  >  >  **Settings**.
2. Tap **Sound & notification**.
3. Select or clear the **Quiet ring on pickup** or **Pocket mode** options to enable or disable the features.

4. Tap **Flip to mute** and then select the mute setting.

For more information, see [Motion Launch](#).

System Sound Settings

The System sound settings menu lets you select whether you hear tones when tapping numbers on the dialpad, selecting onscreen options, and more.

1. Tap  >  >  **Settings**.
2. Tap **Sound & notification**.
3. Select or customize options under the System menu.
 - **Keypad touch tones:** Select the short tones to use.
 - **Tap sounds:** Play sounds when making an onscreen selection.
 - **Screen lock sounds:** Play sounds when locking or unlocking the screen.
 - **Pull to refresh sounds:** Play sounds when pulling the screen down to refresh content.
 - **Vibrate on touch:** Vibrate when tapping soft keys and during certain other instances.
 - **Emergency tone:** Set behavior when an emergency call is placed.

Notifications - Flash Notifications

Tap this option to select when you want the Front Indicator Light (LED) to light up.

1. Tap  >  >  **Settings**.
2. Tap **Sound & notification**.
3. Tap **Flash LED for notifications**, and then select **Always** or **When screen is off**.

Notifications - App Light Notifications

Tap this option to select which app events you want the Front Indicator Light (LED) to light up and notify you.

1. Tap  >  >  **Settings**.
2. Tap **Sound & notification**.
3. Tap **Manage LED notifications**.
4. Tap an app for which you want to see the Front Indicator Light (LED) to light up.

Notifications - Lock Screen Notifications

These additional options let you choose how to display app notifications on the lock screen.

1. Tap  >  >  **Settings**.
2. Tap **Sound & notification**.
3. Tap **Notifications**.
4. Select an app whose notifications you want to appear on the lock screen.
5. Select whether to block or to prioritize all notifications from the selected app.
6. Tap  twice.
7. Tap **On the lock screen**, and then choose whether to show or not to show notifications.
8. Tap **Notifications access** to control HTC Ice View notifications.

Notifications - Emergency Broadcasts

Control how you want to be notified of emergency alerts.

1. Tap  >  >  **Settings**.
2. Tap **Sound & notification**.
3. Tap **Emergency broadcasts**.
4. Select the emergency alert you want to receive and then change the settings.

Apps Settings

Use the Apps menu to control your application settings or remove apps.

Uninstall Third-party Apps

Uninstall apps that you no longer need to save storage space.

1. Tap  >  >  **Settings**.
2. Tap **Apps**.
3. Tap the application you want to uninstall.
4. On the App info screen, tap **Uninstall**.
5. Tap **OK** to confirm.

Note: You cannot uninstall programs that are preinstalled on the phone.

Clear Application Cache and Data

Free up storage space and phone memory by deleting application cache and data.

1. Tap  >  >  **Settings**.

2. Tap **Apps**.
3. Browse to the app you want to clear and then tap it.
4. Tap **Storage**.
5. Tap **Clear data** and **Clear cache**.

Disable Apps

Apps, even if not used often, may be running in the background and downloading data. If an app cannot be uninstalled, you can disable it.

1. Tap  >  >  **Settings**.
2. Tap **Apps**.
3. Tap the application you want to disable, and then tap **Disable**.

Storage Settings

The Storage settings let you view and manage the phone and SD card storages.

Types of Storage

Your phone has the following storage types for your apps, data, and files.

- **Phone storage.** This is the internal storage which contains the Android system, preinstalled apps, email, text messages, and cached data from the apps. You can also install apps that you've downloaded and capture photos, videos, and screenshots to this storage.
- **SD card (Storage card).** Use your SD card (purchased separately) as a removable storage to store and access your media and other files on HTC Bolt or any Android phone, or set it up as an extension of the internal storage. See [SD Card Storage Settings](#).
- **USB storage.** When you plug in an external USB storage device (such as a USB flash drive or an SD card reader). You need a special cable to connect your phone and a USB storage device.
- **Online storage.** If you're using an online storage account that's accessible from your phone, you can store your files to your online storage.

SD Card Storage Settings

Use your SD card as removable storage when there's already content such as your media and other files so that you don't lose that content. If you have a brand new SD card, choose whether to use it as removable storage or set it up as an extension of the internal storage.

Removable Storage

Use a new SD card as removable storage to be able to insert and use the card on HTC Bolt and other Android phones.

Internal Storage

Set up a new SD card as internal storage for more privacy and secure use. This encrypts and formats the SD card to work just like the internal storage.

This also expands the storage space since:

- Captured screenshots, camera shots, media, and other files will be stored on the SD card.
- Third-party apps that you installed and their data can be moved between the on-device storage and SD card.

Important: After setting up the SD card as internal storage, the SD card can only be used on HTC Bolt where it has been formatted.

Set Up Your SD Card as Internal Storage

When you insert a SD card that has not been used on HTC Bolt before, the card will be mounted as removable storage by default. If the SD card is new or doesn't have content you want to keep, you can format the SD card to use it as internal storage for HTC Bolt.

See [SD Card Storage Settings](#) to find out the differences between using the SD card as removable storage or internal storage.

Important: If there are still files on the SD card, back up the files first before you format the card.

1. Tap  >  >  **Settings**.
2. Tap **Storage**.
3. Under Removable storage, tap  next to the SD card name, and then tap **Format as internal**.
4. Tap **Erase & format** > **Format**.
5. Follow the onscreen instructions to move your installed apps and their data from the phone storage to the SD card.

Tip: If you no longer want to use your SD card as internal storage, you can reformat the card as removable storage. Before you do so, make sure to move all the apps and data from the card back to the phone storage.

Move Apps and Data Between the Phone Storage and SD Card

If you've set up your SD card as internal storage, you can move third-party apps that you installed and their data such as photos, media, and downloaded files to the SD card to free up phone storage space.

If you no longer want to use your SD card as internal storage, make sure to move all the apps and data from the card back to the phone storage.

1. Tap  >  >  **Settings**.
2. Tap **Storage**.

3. Tap the name of your SD card if you're moving app data from the phone storage to the SD card, or tap **Phone storage** if you're moving data from the SD card back to the phone
4. Tap  > **Migrate data**.
5. Tap **Move**.

Notes:

- Screenshots will also be migrated.
- When you take new photos or videos, capture new screenshots, or download new files after the migration, they will be saved to the new storage location.
- When you migrate data from the SD card back to the phone storage, only app data and your files will be moved. You'll need to move each app back to the phone storage on your own.

Move an App

When you're running out of phone storage space, you can move a downloaded app and its data to the SD card if the card has been set up as internal storage.

If you need to reformat your SD card, make sure to move each app and its data back to the phone storage before formatting the card.

Note: Preinstalled apps cannot be moved. Some third-party apps you've downloaded and installed to the phone storage may also not allow you to move them to the SD card.

1. Tap  >  >  **Settings**.
2. Tap **Storage**.
3. Tap **Phone storage** > **Apps** if you want to move an app from the phone storage to the SD card.
– or –
Tap the name of your SD card, and then tap **Apps** if you need to move an app from the SD card back to the phone storage.
4. Tap the app you want to move.
5. Tap **Change**, and then tap where you want to move it.
6. Tap **Move**.

Tip: You can also move an app from the SD card back to the phone storage.

Copy or Move Files Between the Phone Storage and SD Card

You can go to Settings to view and manage files on the phone storage and SD card. If you're using your SD card as removable storage, you can copy or move your files between the phone storage and SD card. You can also copy or move files to or from an external USB storage device when you have it connected to HTC Bolt.

1. Tap  >  >  **Settings**.
2. Tap **Storage**.
3. Tap **Phone storage** > **Explore** or tap the SD card name.

– or –

Tap the external USB storage device if you have one connected.
4. Open the folder that contains the files you want to copy or move.
5. To select or deselect files:
 - Touch and hold a file to select it. To select more files, tap each file.
 - Tap a file to deselect it.
 - To select all files, touch and hold a file first, and then tap  > **Select all**.
6. Tap , and then tap **Copy to** or **Move to**.
7. In the slideout menu that opens, choose the type of storage where to copy or move to, and then open the destination folder.
8. Tap **Copy** or **Move**.

Copy Files To or From Your Phone

You can copy your music, photos, and other files to your phone.

Important: Save and close your files before copying them from your computer to HTC Bolt, or vice versa.

Note: If you're using your SD card as internal storage, your computer will only show SD card content.

1. Connect your phone to the computer using the supplied USB cable.
2. On your phone, unlock the screen if it's locked.
3. On the pop-up message that asks whether to use USB for file transfers, tap **Yes**.
If you don't see this message, slide the notification panel open, tap the **Use USB for** notification, and then tap **Transfer files**.
 - ❖ You'll then see options for viewing or importing files on the computer screen.
4. Choose to view files.
5. Copy the files from your computer to your phone, or vice versa.
6. After copying the files, disconnect the phone from the computer.

Make More Storage Space

As you use your phone, you'll accumulate data and fill its storage capacity over time. Here are some tips on how to increase storage space.

Manage Photos and Videos

- After taking continuous camera shots, keep only the best shot and discard the rest.
- After editing a photo or trimming a video, the original file is kept. You can delete original files or move them to online storage or to your computer.
- If you are only sending videos through MMS, use a lower resolution. High-resolution video takes up more space.
- RAW image files take up a lot of storage space. It's recommended to use an SD card as the default storage for photos and videos. If your SD card is running low on space, consider moving RAW image files to your computer.

Remove Unused Themes

Themes can quickly consume storage space because themes can include images, sounds and icons. Remove themes you're not using. For details, see [Delete a Theme](#).

Back up Data and Files

Keep only the most recent data in your apps and files that you often need to use. You can back up your other data and files. For some tips, see [Backup](#).

Remove or Disable Apps

Uninstall apps that you've downloaded if no longer need them. See [Uninstall Third-party Apps](#). Preinstalled apps can be disabled when you're not using them. See [Disable Apps](#).

Move Apps to the SD card

Third-party apps that you've downloaded and installed can be moved to the SD card if you've set up the card as internal storage. See [SD Card Storage Settings](#).

Power Settings

Use the Power settings to check the phone's battery, enable Power saver mode, and more.

Battery Optimization for Apps

When you have connections such as Wi-Fi on while the phone is in sleep mode, some apps may still continue to use the battery. Starting from Android 6.0, battery optimization is enabled for all apps by default which helps prolong battery standby time when you're not using the phone.

The phone needs to be sitting idle for an extended period of time before battery optimization takes effect.

Turn Battery Optimization Off in Apps

If there are apps that you don't want battery optimization enabled, you can turn the feature off in those apps.

1. Tap  >  >  **Settings**.
2. Tap **Power**.
3. Tap **Battery optimization**.
4. Tap **Not optimized** > **All apps** to see the complete list of apps.
5. To turn off battery optimization in an app, tap the app name, and then tap **Don't optimize** > **Done**.
6. Repeat this process to turn off optimization in other apps.

Note: To filter the list and see which apps have battery optimization disabled, tap **Battery optimization** > **Not optimized**.

Use Power Saver Mode

Power saver mode helps to increase battery life. It reduces the usage of phone features that drain the battery such as the display and data connection.

1. Tap  >  >  **Settings**.
2. Tap **Power**.
3. Tap the **Power saver** On/Off switch to turn Power saver mode on or off.

To set when to automatically switch this mode on, tap **Power saver** > **Turn on automatically**, and then select a battery level.

Use Extreme Power Saving Mode

In times when you don't need to use much of your phone, turn Extreme power saving mode on to extend battery life longer. In this mode, standby time can last longer than usual, and you can only use the most basic functions such as phone calls, text messaging, and email.

1. Tap  >  >  **Settings**.
2. Tap **Power**.
3. Tap the **Extreme power saving mode** On/Off switch to turn Extreme power saver mode on or off.

If you want to set when to automatically switch this mode on, tap **Extreme power saving mode** and select a battery level.

Check Battery Usage

See a ranking list of apps that are using the battery. You can also see how much and how long the battery has been used for each app.

1. Tap  >  >  **Settings**.
2. Tap **Power** > **Battery usage**, and then tap an app to check how it's using the battery.
3. If you see the Adjust power use section while viewing battery use details, you can tap the option underneath it to adjust settings that affect battery usage.

Tip: Another way to check the battery usage per app is to go to **Settings** > **Apps**. Tap the app you want to check, and then tap **Battery**.

Note: If the **Battery** option on the App info screen is grayed out, it means the app is currently not using the battery.

Check Battery History

Check how long you've been using the phone since the last charge. You can also see a chart that shows how long the screen has been on, and how long you've been using connections like the mobile network or Wi-Fi.

1. Tap  >  >  **Settings**.
2. Tap **Power** > **History** to view battery usage time.

Display the Battery Percentage

You can check the percentage of remaining battery power right from the status bar.

1. Tap  >  >  **Settings**.
2. Tap **Power**.
3. Select **Show battery level**.

Battery Saving Tips

How long the battery can last before it needs recharging depends on how you use your phone. The power management features of your phone helps increase battery life.

Use the Power Management Features

- Turn Power saver mode and Extreme power saver mode on in Settings.
- Monitoring your battery usage helps identify what's using the most power so you can choose what to do about it. See [Check Battery Usage](#).

Manage Your Connections

- Turn off wireless connections such as mobile data, Wi-Fi, or Bluetooth when not in use.

- Turn GPS only when a precise location is needed, such as while using navigation or location-based apps. For details, see [Location Setting](#).
- Turn on Airplane mode when you don't need any wireless connections and you don't want to receive calls or messages. For details, see [Airplane Mode](#).

Manage Your Display

Lowering the brightness, letting the display sleep when not in use, and keeping it simple helps save battery power.

- Use automatic brightness (the default), or manually lower the brightness.
- Set the screen timeout to a shorter time. For more details, see [Security Settings](#).
- Don't use a live wallpaper for your Home screen. Animation effects are nice to show off to other people but they drain your battery.

Changing your wallpaper to a plain, black background can also help a little. The less color is displayed, the less battery is used. For more details, see [Display, Gestures & Buttons Settings](#).

Manage Your Apps

- Battery optimization helps extend battery standby time. For details, see [Battery Optimization for Apps](#).
- Install the latest software and application updates. Updates sometimes include battery performance improvements.
- Uninstall or disable apps that you never use.

Many apps run processes or sync data in the background even when you're not using them. If there are apps that you don't need anymore, uninstall them. See [Uninstall Third-party Apps](#).

If an app came preloaded and can't be uninstalled, disabling the app can still prevent it from continuously running or syncing data. For details, see [Disable Apps](#).

Limit Background Data and Sync

Background data and sync can use a lot of battery power if you have many apps syncing data in the background. It's recommended not to let apps sync data too often. Determine which apps can be set with longer sync times, or sync manually.

- In Settings, tap **Accounts & sync** and check what types of data are being synced in your online accounts. When the battery is starting to run low, temporarily disable syncing some data.
- When you're not traveling from one place to another, sync weather updates of only your current location, rather than in all of your named cities. Open the Weather app, and then tap  to edit and remove unneeded cities.
- Choose widgets wisely. Some widgets constantly sync data. Consider removing the ones that are not important from your Home screen.

- In Play Store, tap  > **Settings**, and then clear **Add icon to Home screen** to avoid automatically adding Home screen app shortcuts whenever you've installed new apps. Also tap **Auto-update apps** > **Do not auto-update apps** if you're fine with updating apps from Play Store manually.

More Battery Saving Tips

To squeeze in a little bit more battery power, try these tips.

- Tone down the ringtone and media volume.
- Minimize the use of vibration or sound feedback. In Settings, tap **Sound & notification** and choose which ones you don't need and can disable.
- Check your apps' settings as you may find more options to optimize the battery.

Memory Settings

Use the Memory settings to check the phone's average memory use or to find out how much memory is being used by individual apps.

1. Tap  >  >  **Settings**.
2. Tap **Memory**.
 - ❖ You'll see the average memory use of your phone.
3. To change the monitoring duration, tap the duration hours and select a duration time.
4. To find out how much memory is being used by apps, tap **Memory used by apps**.

Personal Settings

Use these options to personalize your phone, set security, or manage your online accounts and apps.

Personalize Settings

Use the Personalize menu to customize your phone's display, add items to the Home screen, or change the sound settings.

Customize the Home and Lock Screen Settings

Using the phone's Personalize home screen menus, you can set the following settings.

- Customize the wallpaper of your Home screen by choosing from a collection of wallpapers or from your own photos. See [Customize the Home Screen](#).
- Add apps and widgets to the widget panels. See [Work with Stickers, Widgets and App Shortcuts](#).
- Manage additional home screen panels. See [Organize Your Widget Panels](#).
- Change the lock screen wallpaper. See [Customize the Lock Screen](#).
- Change the phone's theme. See [Themes](#).

Ringtone

Use the Ringtone settings menu to select a phone ringtone or to make your own music as ringtone.

1. Tap  >  >  **Settings**.
2. Tap **Personalize > Ringtone**.
3. Do any of the following:
 - Select a ringtone from the list and tap **Apply**.
 - Add a ringtone from your music or Themes. Tap , tap **Themes** or **Music** and then follow screen instructions.

Notification Sound

The Notification sound menu lets you select your phone's notification sound.

1. Tap  >  >  **Settings**.
2. Tap **Personalize > Notification sound**.
3. Select a sound and tap **Apply**.

Alarm

Tap this option to select an alarm sound. For details on how to set an alarm, see [Set an Alarm](#).

1. Tap  >  >  **Settings**.
2. Tap **Personalize** > **Alarm**.
3. Select a sound and tap **Apply**.

Tip: Tap  to add an alarm sound from music on your phone or from Themes.

Font

Use these options to select a font and set the font size.

1. Tap  >  >  **Settings**.
2. Tap **Personalize** > **Font style**.
3. Select a font and tap .

Tip: To install more fonts to your phone, tap .

4. Tap **Font size**, and then select the size you want.

Keyboard and Dialer Color

Tap any of these options to change the keyboard and dialer color.

1. Tap  >  >  **Settings**.
2. Tap **Personalize** > **Keyboard color** or **Dialer color**.
3. Select a color and tap .

Fingerprint Scanner Settings

Tap this option to add and manage fingerprints or configure the fingerprint sensor.

- See [Fingerprint Scanner](#).

Accounts & Sync Settings

The Accounts & sync settings menu lets you add and manage all your email, social networking, online storage, and HTC account.

Add Your Social Networks, Email Accounts, and More

Add your favorite social networks, email accounts, and online storages on your phone so you are connected anywhere you go.

1. Tap  >  >  **Settings**.
2. Tap **Accounts & sync**.
3. Tap **+**.
4. Tap an account type. You can set up these accounts on your phone: Amazon Photos, Exchange, Facebook, Google, HTC Account, LinkedIn for HTC Sense, Messenger, IMAP/POP3 email, and more.
5. Enter your account information and follow screen instructions to proceed.

Note: Depending on the account type, you may need to enter an email address or user address, password, domain name, or other information. For Exchange ActiveSync accounts, contact your server administrator to determine what information you will need.

Add One or More Google Accounts

Sign in to your Google Account to see your Gmail, contacts, and calendars, and to use Google apps on your phone.

- See [Create a Google Account](#).

Forgot Your Google Account Password?

If you have forgotten your Google Account password, you can try to recover it by going to the Google website.

1. On your phone or computer, open your Web browser.
2. Go to google.com/accounts/recovery.
3. Select **I don't know my password**.
4. Enter the email address or username that you use to sign in to your Google Account and click **Continue**.
5. Follow the instructions on the screen to reset your password.

Manage Your Online Accounts

Manage the online accounts you have associated with your phone.

Remove an Account

You can remove an account from your phone. Removing an account does not remove accounts and information from the online service itself.

1. Tap  >  >  **Settings**.
2. Tap **Accounts & sync**.
3. Tap the account that you want to remove.

4. Tap  or  > **Remove**.
5. Tap **Remove account** to confirm.

Important: Some personal data may be retained by the third-party app after you have removed the account from your phone.

Sync All Your Accounts Automatically

1. Tap  >  >  **Settings**.
2. Tap **Accounts & sync**.
3. Tap the **Auto sync** On/Off switch to turn automatic sync on or off.

Change Synced Data or Settings for an Account

1. Tap  >  >  **Settings**.
2. Tap **Accounts & sync**.
3. Tap the account that you want to update.
4. Tap the item you want to sync or edit.

Location Settings

Your Location settings menu lets you select how your phone determines its location (using the wireless network, GPS satellites, both, or neither).

Location Setting

Your phone is equipped with a Location setting for use in connection with location-based services.

The Location feature allows the network to detect your position. Turning **Location** off will hide your location from everyone except 9-1-1.

Note: Turning on **Location** will allow the network to detect your position using GPS technology, making some Sprint applications and services easier to use.

To enable your phone's Location setting feature:

1. Tap  >  >  **Settings**.
2. Tap **Location**.
3. Tap the On/Off switch to turn location services on and off.
4. Under Location sources, tap **Mode** to select the location mode you want. For example, for a better estimate of your location, choose **High accuracy**. To save battery power, choose **Battery saving**.

When you turn the Location setting feature on, the phone displays the  icon on the status bar. When you turn Location setting off, the phone displays the  icon.

Important: Turning off a location service means no applications on your phone will collect your location data through that location service. However, third party applications may collect — and your phone may continue to provide — location data through other services, including through Wi-Fi and signal triangulation.

Google Location History

Select this option if you want to allow Google to collect anonymous location data or to allow certain apps to determine your location.

1. Tap  >  >  **Settings**.
2. Tap **Location**.
3. Tap **Google Location History**.
4. Tap the On/Off switch to turn this setting on or off.

Security Settings

Use the Security settings to help increase your phone security, privacy, and more.

Screen Lock Settings

You can increase the security of your phone by creating a screen lock. When enabled, you will be asked to draw the correct unlock pattern on the screen, enter the correct PIN, or enter the correct password to unlock the phone's control keys, buttons, and touchscreen. You can also use face recognition to unlock your screen.

Enable or Disable the Lock and Security Screens

1. Tap  >  >  **Settings**.
2. Tap **Security**.
3. Tap **Screen lock** to show the lock screen and not the security screen.
4. Tap **None** to disable both the lock and security screens.

Use Face Unlock - Smart Lock

1. Tap  >  >  **Settings**.
2. Tap **Screen lock**, and then select and set up a screen lock. This will be your backup screen lock method to use in case the phone doesn't recognize you or a trusted device.
3. On the Security screen, tap **Smart Lock**.

4. Confirm your screen lock and tap **Next**.
5. Tap **Trusted face**.
6. Tap **Set up > Next** and follow the screen instructions.
7. Tap **Lock phone after**, and then specify the idle time before the screen is locked.

To help make Smart Lock more reliable and more secure, you can train HTC Bolt to recognize your face in different situations, such as when you're wearing glasses or sporting a beard.

Tap **Smart Lock**, confirm your screen lock, then tap **Trusted face > Improve face matching**. Follow the onscreen instructions.

Use a Screen Unlock Pattern

1. Tap  >  >  **Settings**.
2. Tap **Security**.
3. Tap **Screen lock > Pattern**.
4. Draw the screen unlock pattern by connecting at least four dots in a vertical, horizontal, or diagonal direction. Lift your finger from the screen when finished.
5. The phone records the pattern. Tap **Continue**.
6. When prompted, draw the screen unlock pattern again, and then tap **Confirm**.

If you fail to draw the correct unlock pattern on the screen after five attempts, you will be prompted to wait for 30 seconds before you can try again.

Note: To change your unlock screen pattern, tap **Screen lock** on the **Security** Draw your current screen unlock pattern and then tap **Pattern**.

Use a Screen Unlock PIN

1. Tap  >  >  **Settings**.
2. Tap **Security**.
3. Tap **Screen lock > PIN**.
4. Enter a PIN and tap **Continue**.
5. Enter your PIN again to confirm and tap **OK**.

If you fail to enter the correct PIN after five attempts, you will be prompted to wait for 30 seconds before you can try again.

Use a Screen Unlock Password

1. Tap  >  >  **Settings**.
2. Tap **Security**.
3. Tap **Screen lock > Password**.
4. Enter a password and tap **Continue**.
5. Enter your password again to confirm and tap **OK**.

If you fail to enter the correct password after five attempts, you will be prompted to wait for 30 seconds before you can try again.

Lock Screen and Password Settings

Increase your privacy by selecting what type of information you want to display on the lock screen. You can also choose to make passwords invisible as you enter them on your phone.

1. Tap  >  >  **Settings**.
2. Tap **Security**.
3. Do any of the following:
 - Select the **Incoming phone calls** option to hide the private contact's name and photo on the lock screen. See [Private Contacts](#).
 - Clear the **Make passwords visible** option (recommended) to make passwords invisible as you enter them on your phone.

Allow Installation of Third-Party Programs

By default, you can only install programs and games downloaded from Google Play. The Security menu lets you allow installation of non-Play Store apps on your phone.

To allow installation of non-Play Store apps on the phone:

1. Tap  >  >  **Settings**.
2. Tap **Security**.
3. Select the **Unknown sources** option.

Important: After installing the app, go back to **Settings > Security** and make sure to clear the **Unknown sources** option. This can help protect your phone from installing other insecure apps from the Web.

Work with Certificates

Use client and Certificate Authority (CA) digital certificates to enable your phone to access VPN or secured Wi-Fi networks, and also to provide authentication to online servers. You can get a certificate from your system administrator or download it from sites that require authentication.

Notes:

- Some apps such as your browser or email client let you install certificates directly in the app. See the app's help for details.
- You must set a lock screen PIN or password before installing a digital certificate.

Install a Digital Certificate

1. Save the certificate file in the root folder of your SD card.
2. Tap  >  >  **Settings**.
3. Tap **Security**.
4. Tap **Install from SD card**.
5. If you have more than one certificate in the root folder, select the certificate you want to install.
6. Enter a name for the certificate and tap **OK**.

Backup and Reset

Find ways on how to back up your data or how to reset the phone.

Backup

Always keep important stuff on your phone. Back up your phone before you erase the storage, do a factory reset, or upgrade to a new phone.

Backup Options

- **HTC Sync Manager.** Use HTC Sync Manager to import music, photos, and videos to your computer. You can also sync locally stored contacts, calendar events, bookmarks, documents, and playlists to your computer. Likewise, HTC Sync Manager is a good alternative if you don't want to back up your accounts, settings, and other personal content to the cloud. You can use it to create backups of your phone on your computer. For details, see [HTC Sync Manager](#).
- **Other backup options.** Separately back up other data and file types if they're not supported in HTC Backup and HTC Sync Manager. In some apps, you can back up data to the storage on the phone so you can easily restore them after a factory reset.
 - **Contacts.** Save contacts and other personal data to your online accounts so you can just sync them when switching to another phone. If you have locally stored contacts in the People app, export them to the storage on the phone. See [Back Up and Restore Your Contacts](#).
 - **Files.** Manually copy and paste files by connecting your phone to your computer as a disk drive. You can also upload files to online storage and services.

Note: If you're backing up data to the storage, don't choose to erase the storage when you do a factory reset.

Backup Your Phone to Your Google Account

It's easy to back up your phone using your Google Account.

1. Tap  >  >  **Settings**.
2. Tap **Backup & reset** > **Backup account**.
3. Select your Google Account or tap **Add account** to add one.

Restore Backup to Your Phone From Your Google Account

If you have backed up your old phone's data to your Google Account, you can easily restore that backup on your new phone.

Notes:

- Depending on the amount of content, doing a manual backup through data connection may incur additional data costs and take a long time. Using a Wi-Fi connection is recommended.
 - To restore paid apps, you need to download and install them from Google Play.
1. When you turn on a new HTC phone for the first time or after a factory reset, wait until you're in the **Get your apps & data** screen.
 2. Select the backed up device name.
 3. Select which apps you want restored on your new phone, and then tap **Done**. Tap **Next**.

Your free apps that you've previously downloaded from Google Play will be restored in the background, and you can track the progress via a notification in the status bar.

Reset Your Phone

If your phone has a persistent problem that cannot be solved, you can perform a factory reset (also called a hard reset or master reset). A factory reset reverts the phone back to its initial state — the state before you turned on the phone for the first time.

The following will be removed from the phone when you do a factory reset:

- Your Google Account
- All accounts you've added in **Settings** > **Accounts & sync** and the data associated with these accounts
- Personal data that you've created or synced to the phone such as your profile, contacts, messages, email, calendar events, and more
- System and application data and settings
- Downloaded apps

Files such as your music, photos, videos, and documents will also be deleted if you select the **Erase all data** option.

Be sure to back up any data and files you want to keep before you do a factory reset.

Note: A factory reset may not permanently erase all data from your phone, including personal information.

Reset Your Phone via Settings

1. Tap  >  >  **Settings**.
2. Tap **Backup & reset > Factory data reset**.
3. To delete media and other data on your SD card (if you installed one), select **Erase SD card**.
4. Tap **Reset phone**.

Once the phone has reset, it will run through the Hands Free Activation and update processes again. When finished, you will see the Welcome screen and Setup application. See [Complete the Setup Screens](#) to start over.

Reset Phone Network Settings

Reset the network settings when you're having problems connecting HTC Bolt to your mobile data or Wi-Fi network and Bluetooth devices.

1. Tap  >  >  **Settings**.
2. Tap **Backup & reset > Network settings reset**.
3. Tap **Reset settings > Reset settings**.

Get Content From Another Phone

These options let you transfer content from a previous device to your new phone.

- See [Transfer Content to Your New Phone](#) for details.

System Settings

Use these options to change the phone's language, keyboard, date and time, accessibility, and more.

Accessibility Settings

Use these settings when you've downloaded and installed an accessibility tool, such as a screen reader that provides voice feedback. You can turn accessibility functions or services on or off.

1. Tap  >  >  **Settings**.
2. Tap **Accessibility** and choose the settings you want. Options include:
 - **Amazon Assistant:** Turn this option on if you want Amazon Assistant to observe how you interact with an app and to inspect the content you're interacting with.
 - **TalkBack:** Turn this option on if you want your phone to provide spoken feedback. TalkBack helps blind and low-vision users.
 - **Switch Access:** Turn this option on if you want to control your phone using configurable key combinations.
 - **Lookout** Turn this option to enable Lookout Safe Browsing on the phone's browser.
 - **Font size:** Tap this option to select a font size for better readability.
 - **Display size:** Tap this option to select the size of screen elements.
 - **Captions:** Turn this option on and then tap it to customize captions for your phone.
 - **Magnification gestures:** Tap this option to enable magnification gestures such as zooming in or out by triple-tapping the screen.
 - **Color inversion** Select this option to improve screen visibility.
 - **Color correction:** Turn on color correction to improve screen visibility.
 - **Unread notification reminder:** Enable this option to remind you of unread notifications.
 - **High contrast text:** Select this option to enable high-contrast text for better readability.
 - **Power button ends call:** When selected, you can press the **Power/Lock** button to end a call.
 - **Auto rotate screen:** Select this option to automatically change the screen orientation when the phone is rotated.
 - **Speak passwords:** When selected, your phone will speak the passwords you enter on your phone.

- **Large mouse pointer:** When selected, your phone will display a large mouse pointer on areas you tap.
- **Mono audio:** When selected, your phone will combine channels when playing audio.
- **Accessibility shortcut:** Tap this option to quickly turn on accessibility features on your phone.
- **Text-to-speech output:** Tap to select the text-to-speech engine, set the speech speed, or listen to a speech synthesis demo.
- **Touch & hold delay:** Set the delay when touching and holding items on the screen.
- **Sound balance:** Tap to control the left or right channel volume.
- **Mono audio:** Select this option to improve sound when listening with only one headphone.

Navigate Your Phone with TalkBack

Use TalkBack if you need to navigate your phone by spoken feedback. When you tap the screen, your phone vibrates and gives you an audible response so you know what you are tapping.

Note: Not all languages are supported.

Turn TalkBack On

1. Tap  >  >  **Settings**.
2. Tap **Accessibility** > **TalkBack**.
3. Tap the **TalkBack** On/Off switch.
4. Read the TalkBack disclaimer and then tap **OK**. Your phone will enable **Explore by touch**, which provides an audible description of what you're tapping on the screen.
 - ❖ A short tutorial explaining how to use TalkBack will begin playing after you turn on TalkBack.

Note: TalkBack works best if you turn off auto-rotate screen.

Use TalkBack Gestures

When TalkBack and Explore by touch are turned on, the regular touch gestures are replaced by the TalkBack gestures.

Note: Media gestures such as 3-finger swiping may not be available when TalkBack gestures are enabled.

To open an item:

1. Drag your finger on the screen to find and select the item.
2. Double-tap anywhere on the screen to open the item.

To move an item:

1. Drag your finger on the screen to find the item.
2. Double-tap anywhere on the screen, but don't lift your finger on the second tap.
3. Drag the item to a new spot and then lift your finger.

To scroll through a screen:

- Use two fingers to swipe up, down, left or right.

To unlock the lock screen:

- Use two fingers to swipe up from the bottom of the screen.

To open the notification panel:

- Use two fingers to swipe down from the top of the screen.

Assign TalkBack Shortcuts

TalkBack has customizable gestures that you can use to open the notification panel, view recent apps, access TalkBack controls, and more.

Important: The steps below are described using the regular gestures. Use the corresponding TalkBack gestures if you already have TalkBack turned on.

1. Tap  >  >  **Settings**.
2. Tap **Accessibility** > **TalkBack**.
3. Tap  > **Settings** > **Manage gestures**.
4. Tap any of the gestures under Shortcut gestures, and then select an action.

Use TalkBack Context Menus

TalkBack has a global context menu for controlling continuous reading and TalkBack controls and a local context menu for controlling the selected text or item on the screen. These menus can be accessed using TalkBack shortcut gestures.

1. Turn TalkBack on.
2. Do one of the following:
 - To open the global context menu, use one finger to swipe down and right in one continuous movement.
 - To open the local context menu, use one finger to swipe up and right in one continuous movement.

Note: If you already changed the TalkBack shortcut gestures, check your TalkBack settings for the appropriate gesture.

3. Double-tap an item on the menu to select.

Change the TalkBack Reading Speed and Pitch

Important: The steps below are described using the regular gestures. Use the corresponding TalkBack gestures if you already have TalkBack turned on.

1. Tap  >  >  **Settings**.
2. Tap **Accessibility** > **Text-to-speech output**.
3. Drag the **Speech rate** and **Pitch** sliders to the right to increase or left to decrease.
4. Tap **Listen to an example** to hear the speech rate and pitch you've set.

Tip: Tap **Reset speech rate** or **Reset speech pitch** to revert the settings to their default values.

Change the TalkBack Language Settings

1. Tap  >  >  **Settings**.
2. Tap **Accessibility** > **Text-to-speech output**.
3. Tap  next to **Google Text-to-speech Engine**, and then do any of the following:
 - Select a different language: Tap **Language**.
 - Install a language: Tap **Install voice data**, and then tap the language. Tap  next to the voice data you want to install. When installation is completed, press  twice and tap **Language**.

Note: Not all languages are supported.

Google Settings

The Google settings let you manage your Google Account and services on your phone.

1. Tap  >  >  **Settings**.
2. Tap **Google**.
3. Tap and change the settings to your preference.

Language & Keyboard Settings

Your phone's Language & keyboard settings let you select a language for the phones screens and menus, as well as manage a personal user dictionary.

Change the Phone Language

Changing the language adjusts the keyboard layout, date and time formatting, and more.

1. Tap  >  >  **Settings**.
2. Tap **Language & keyboard** > **Languages**.
 - The first language in the list is the display language.
3. Tap **Add a language** to add another language to the list, and then if necessary, select the regional variant of the selected language.
4. To change the display language, touch and hold  next to the language you want, and drag it to the beginning of the list.

Tip: To remove languages from the list, tap  > **Remove**, select the languages you want to remove, and then tap .

Keyboard and Input Methods - Virtual Keyboard

Change the settings for the TouchPal keyboard.

- See [Adjust the Keyboard Settings](#).

Keyboard and Input Methods - Google Voice Typing

This option lets you choose the input language for Google voice typing, block offensive words, or download offline speech recognition.

1. Tap  >  >  **Settings**.
2. Tap **Language & keyboard** > **Virtual keyboard**.
3. Tap **Google voice typing**.
4. Change the settings as desired.

Speech Settings

Use these settings to adjust or select your default text-to-speech output.

1. Tap  >  >  **Settings**.
2. Tap **Language & keyboard**.
3. Tap **Text-to-speech output** to select the text-to-speech engine, set the speech speed, or listen to speech synthesis demo.

Date & Time Settings

By default, your phone automatically uses the network-provided date, time zone, and time. However, you can set the date, time zone, and time manually if you need to.

1. Tap  >  >  **Settings**.

2. Tap **Date & time**.
3. Clear the **Automatic date & time** and **Automatic time zone** options.
4. Tap **Set date**, change the date and tap **OK**.
5. Tap **Set time**, adjust the time and tap **OK**.
6. Tap **Select time zone**, and then select the time zone in the list.
7. Select the **Use 24-hour format** option to toggle between using a 12-hour or 24-hour (military) time format.
8. Tap **Choose date format**, and then select how you want dates to display on your phone. The selected date format also applies to the date displayed in the Alarm Clock.

Enable Travel Mode

If you often travel across time zones, turn on Travel mode in Settings to see a dual clock on the Home screen and lock screen that shows both your home and current time zones.

Notes:

- Make sure you turn on location services in your phone settings. See [Location Setting](#).
- Set your home time zone first in the Clock app. See [Clock](#).

1. Tap  >  >  **Settings**.
2. Tap **Date & time**.
3. Tap the **Travel mode** On/Off switch to turn travel mode on or off.
 - ❖ You'll see a dual clock of your home and current locations once your phone detects a different time zone from the home time zone you've set.

Printing

Print from anywhere you are using Google Cloud Print™. For more information about Cloud Print, see google.com/cloudprint.

1. Tap  >  >  **Settings**.
2. Tap **Printing** > **Cloud Print**.

System Updates

From time to time, system software updates for your phone may be available. Your phone can automatically check and notify you if an update is available. You can download and install the update to your phone. Depending on the type of update, the update may erase all your personal data and customized settings, and it could also remove any programs you have installed. Make sure that you have backed up the information and files you want to keep.

Note: Checking and downloading system software updates require data access that will count towards your monthly data allowance.

1. Tap  >  >  **Settings**.
2. Tap **System updates**.
3. Tap any of these available settings:
 - **Update profile:** Update your online user profile information. See [Update Your Profile](#) for details.
 - **Update PRL:** Update the Preferred Roaming List (PRL). See [Update Your PRL](#) for details.
 - **UICC Unlock:** Unlock the UICC and use a UICC card from other service providers. For more information about UICC unlock, contact Sprint.
 - **HTC software update:** Update the phone's operating system. See [Update Your Phone Software](#) for details.

About Phone

The About menu lets you access important phone information and view legal and safety information.

1. Tap  >  >  **Settings**.
2. Tap **About**.
3. Scroll through the list and select options to view or customize information.
 - **Hardware and software version:** Displays the phone hardware and software version.
 - **Software updates:** Check if there are is a new software update available for your phone.
 - **Usage and error reporting:** Send error, preference, and usage reports to HTC.
 - **Help:** Enable quick tips to appear on the screen.
 - **Network:** Check the operator, signal strength, mobile network type, and more.
 - **Phone identity:** Check the phone's name, model number, IMEI, SIM ID, MEID current user name, and number.
 - **Software information:** View software related information such as the Android, HTC Sense, and software versions.
 - **Legal information:** View HTC legal information, privacy alert, Google legal information and open source licenses.

Getting Help

The following set of topics will cover troubleshooting tips, phone specifications, and how to contact Sprint and manage your wireless service.

For Assistance

The following topics address areas of support for your phone, including troubleshooting, specifications, account information, and customer service contact information.

Troubleshooting

Check the questions and answers below for troubleshooting solutions for common phone issues.

Check Here First

Question: Phone freezes/operation is unstable.

Answer: Turn the phone on again. See [Turn Your Phone On and Off](#). Data that was being edited is erased after your phone is powered on again.

Question: Operation is unstable after a new application was installed.

Answer: The newly installed application may be the cause. Uninstall the application following the steps in [Uninstall Third-party Apps](#). If you're unable to uninstall the app, restart the phone in Safe mode. To turn the phone on in Safe mode:

- Press and hold the **Power/Lock** button, touch and hold **Power off**, read the disclaimer for safe mode, and then tap **OK**.
 - After turning the phone on in Safe mode, "Safe Mode" appears at lower left.
 - After restarting in Safe mode, your phone can be powered on as usual.
 - Before turning the phone on in Safe mode, it is recommended that you back up important data.
 - By powering the phone on in Safe mode, added widgets may be deleted.

Question: Cannot use phone, email, or Internet.

Answer 1: Check whether you are where signal is weak or out of service area.

Answer 2: Power the phone on again.

Answer 3: Is the phone in Airplane mode? To check that Airplane mode is canceled:

- Swipe down from the status bar with two fingers to open Quick Settings. Check if **Airplane mode** is turned off.

Answer 4: Is data communication disabled? To check that data communication is enabled:

- Swipe down from the status bar with two fingers to open Quick Settings. Check if **Mobile data** is turned on.

Question: Battery level goes down quickly.

Answer: Are you where signal is weak or have been out of service area for a long period? Calling where signal is weak or being out of service area uses a lot of battery power.

Question: Cannot install applications.

Answer: Applications cannot be installed with only a little free space on the phone or SD card. To check free space, see [SD Card Storage Settings](#). Applications not supported by your phone cannot be installed.

Question: Cannot unlock screen.

Answer: Restart the phone. Data that was being edited is erased after the phone is powered on again.

Specifications

The following tables list your phone's and battery's specifications.

Phone Specifications

Item	Description
Weight	174g ± 2g
Continuous Talk Time*	3G: 1436 minutes (approx.) GSM: 1694 minutes (approx.)
Continuous Standby Time*	3G <ul style="list-style-type: none">• Lab: 30039 minutes (approx.)• Live network: 28741 minutes (approx.) GSM: <ul style="list-style-type: none">• Lab: 26231 minutes (approx.)• Live network: 27149 minutes (approx.)
Charging Time	115 minutes with Qualcomm Quick Charge 2.0 (from 1% to 100%)
Dimensions	153.59 x 77.3 x 8.09 mm

Maximum Output	CDMA2000: 0.25 W 3G: 0.22 W 4G: 0.2 W GSM: <ul style="list-style-type: none"> • 850/900: 1.78 W • 1800/1900: 0.89 W
Communication Speed	LTE CAT9 3xCA – DL: 450Mbps, UL: 50Mbps HSDPA: 42Mbps; HSUPA: 5.76 Mbps

*Battery times (talk time, standby time, and more) are subject to network and phone usage.

A Standby time specification ("specification") is an industry standard that is only intended to allow comparison of different mobile devices under the same circumstances. Power consumption in a standby state is strongly dependent on factors including but not limited to network, settings, location, movement, signal strength and cell traffic. Comparisons of different mobile devices using such a specification can therefore only be done in a controlled laboratory environment. When using any mobile device in real life circumstances for which the mobile device is intended, the standby time could be considerably lower and will be strongly dependent on the factors as mentioned above.

Battery Specifications

Item	Description
Voltage	3.85V
Type	Li-polymer
Capacity	3200mAh

Sprint Account Information and Help

Find out about account passwords and information about managing your account and finding help.

Sprint Account Passwords

You will need to create passwords to help protect access to your personal account information, your voicemail account, and your data services account. As a Sprint customer, you enjoy unlimited access to all your information.

Account User Name and Password

If you are the account owner, you will create an account user name and password when you sign on to sprint.com/mysprint. (Click **Sign in/Register** and then click **Sign up now!** to get started.) If you are not

the account owner (if someone else receives the bill for your Sprint service), you can get a sub-account password at sprint.com/mysprint.

Voicemail Passcode

You'll create your voicemail passcode when you set up your voicemail. See [Voicemail Setup](#) for more information on your voicemail passcode.

Data Services Password

With your Sprint phone, you may elect to set up an optional data services password to control access and authorize purchases.

For more information, or to change your passwords, sign on to sprint.com/mysprint.

Manage Your Account

Manage your Sprint account from your computer, your Sprint phone, or any other phone.

Online: sprint.com/mysprint

- Access your account information.
- Check your minutes used (depending on your Sprint service plan).
- View and pay your bill.
- Enroll in Sprint online billing and automatic payment.
- Purchase accessories.
- Shop for the latest Sprint phones.
- View available Sprint service plans and options.
- Learn more about data services and other products like games, ringtones, screen savers, and more.

From Your Sprint Phone

1. Tap  > . (If your screen is locked, press the **Power/Lock** button to turn on the display and then drag  up to unlock the screen.)
2. Do any of the following:
 - Tap    to check minute usage and account balance.
 - Tap    to make a payment.
 - Tap    to access a summary of your Sprint service plan or get answers to other questions.

Sprint Support Services

Sprint 411 and Sprint Operator Services let you easily access information and calling assistance from your Sprint phone.

Sprint 411

Sprint 411 gives you access to a variety of services and information, including residential, business, and government listings; movie listings or show times; driving directions, restaurant reservations, and major local event information. You can get up to three pieces of information per call, and the operator can automatically connect your call at no additional charge.

There is a per-call charge to use Sprint 411, and you will be billed for airtime.

- Tap  > , and then tap    .

Sprint Operator Services

Sprint Operator Services provides assistance when you place collect calls or when you place calls billed to a local telephone calling card or third party.

- Tap  > , and then tap  .

For more information or to see the latest in products and services, visit us online at sprint.com/mysprint.

Copyright Information

©2016 Sprint. Sprint and the logo are trademarks of Sprint. Other marks are trademarks of their respective owners.

Portions of this document ©2016 HTC Corporation. All rights reserved.

HTC, the HTC logo, HTC Bolt, HTC BlinkFeed, HTC BoomSound, HTC Connect, HTC Sense, Motion Launch, VideoPic, Zoe, and all other HTC product and feature names are trademarks or registered trademarks in the U.S. and/or other countries of HTC Corporation and its affiliates.

Google, Android, Chrome, Gmail, Google+, Google Cloud Print, Google Drive, Google Maps, Google Now, Google Play, Google Voice Search, Google Wallet, Hangouts, and YouTube are trademarks of Google Inc.

Microsoft, Windows, ActiveSync, Outlook.com, Windows Media, and Windows Vista are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

The Bluetooth® word mark and logos are registered trademarks by Bluetooth SIG, Inc.

Wi-Fi® and Miracast are registered trademarks of the Wireless Fidelity Alliance, Inc.

Facebook is a trademark of Facebook, Inc.

Twitter is a trademark of Twitter, Inc., and is used under license.

DLNA and the DLNA disc logo are trademarks or registered trademarks of Digital Living Network Alliance. All rights reserved. Unauthorized use is strictly prohibited.

iCloud, iMessage, iPhone, iTunes, and Mac OS are trademarks of Apple Inc. registered in the U.S. and other countries.

Qualcomm is a trademark of Qualcomm Incorporated, registered in the United States, and other countries and used with permission. AllPlay and the AllPlay icon are trademarks of Qualcomm Connected Experiences, Inc., and used with permission.

BLACKFIRE RESEARCH™ is a Registered Trademark (No. 3,898,359) of BLACKFIRE RESEARCH CORP.

LinkedIn is a registered trademark or trademark of LinkedIn Corporation and its affiliates in the United States and/or other countries.

Instagram is a trademark of Instagram, LLC.

microSD and microSDHC are registered trademarks of SD-3C, LLC.

LTE is a trademark of European Telecommunications Standards Institute (ETSI) registered for the benefit of its members.

All other trademarks and service marks mentioned herein, including company names, product names, service names and logos, are the property of their respective owners and their use herein does not indicate an affiliation with, association with, or endorsement of or by HTC Corporation. Not all marks listed necessarily appear in this User Guide.

The HTC Sync Manager software can be used with materials that you own or are lawfully authorized to use and/or duplicate. Unauthorized use and/or duplication of copyrighted material may be a violation of copyright law in the United States and/or other countries/regions. Violation of U.S. and international copyright laws may subject you to significant civil and/or criminal penalties. HTC Corporation shall not be held responsible for any damages or losses (direct or indirect) that you may incur as a result of using this software.

Screen images contained herein are simulated. HTC shall not be liable for technical or editorial errors or omissions contained herein, nor for incidental or consequential damages resulting from furnishing this material. The information is provided “as is” without warranty of any kind and is subject to change without notice. HTC also reserves the right to revise the content of this document at any time without prior notice.

The information is provided “as is” without warranty of any kind and is subject to change without notice. HTC also reserves the right to revise the content of this document at any time without prior notice. No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording or storing in a retrieval system, or translated into any language in any form without prior written permission of HTC.

Index

- 3-way Calling, 96
- 4G, 125
- Accessibility
 - TalkBack, 235
- Accessory Jack, 7
- Account Passwords, 244
- Activation, 21
- Airplane Mode, 39
- Alarm, 189
- Alarm Sound, 225
- Android Beam. See NFC
- Answer a Call, 87
- Applications
 - Clear App Cache, 214
 - Disable, 215
 - Install Third-Party Apps, 230
 - Uninstall, 214
- Apps
 - Find and install, 47
 - Open, 36
 - Open from Lock Screen, 36
 - Recent Apps, 36
 - Refresh Content, 37
 - Request refunds, 48
 - Uninstall, 49
 - Update, 49
- Apps Screen
 - Arrange Apps, 37
 - Group Apps, 37
 - Hide/Unhide Apps, 38
 - Move Apps and Folders, 37
 - Remove Apps from Folder, 38
- Back Key, 30
- Backup, 231
 - Options, 231
- Battery
 - Charge, 7
 - Check History, 221
 - Check Usage, 221
 - Extreme Power Saving Mode, 220
 - Power Saver Mode, 220
 - Save Power, 221
 - Settings, 219
- Battery Saving Tips, 221
- Block List, 91
- Bluetooth
 - Car Kit, 145
 - Disconnect Device, 146
 - Headset, 145
 - Receive Files, 148
 - Reconnect Phone, 146
 - Send Information, 147
 - Unpair Device, 146
- Bonus Storage, 178
- BoomSound Settings, 209
- Boost+, 186
- Brightness, 207
 - Maximum Level, 207
- Browser
 - Add Bookmarks, 129
 - Browsing History, 129
 - Find Text, 129
 - Getting Help, 131
 - Options, 130
 - Private Browsing, 130
 - Tabs, 129
- Burst Shots, 164
- Calculator, 188
- Calendar
 - Create Event, 177
 - Edit Event, 177
 - Make Call From, 85
 - Show or Hide, 177
 - Snooze Reminders, 178
 - View events, 177
- Call Forwarding, 97
- Call History, 89
 - Block Caller, 91
 - Make Call From, 89
 - Open, 90
 - Prepend a Number, 90
 - Save a Number, 90
- Call Log, 89
- Call Services
 - Call Forwarding, 97
 - Call Waiting, 96
 - Caller ID, 96
- Call Waiting, 96
- Caller ID, 96
- Camera, 157

- Capture Mode, 158
- Close the App, 161
- HDR Mode, 164
- Launch, 158
- RAW Photo, 171
- Record Video, 163
- Set Flash, 160
- Slow Motion Video, 165
- Take a picture, 161
- Tips, 161
- Use Volume Buttons, 160
- Viewfinder, 157
- Zooming, 160
- Camera Flash, 160
- Camera Mode
 - Burst, 164
 - Selfie, 165
 - Video, 163
 - Zoe, 169
- Camera Scenes
 - Hyperlapse, 169
 - Panorama, 169
- Capture Mode, 158
- Car Kit, 145
- Change the Language, 237
- Charge the Battery, 7
- Charger/Accessory Jack, 7
- Chrome, 128
- Classic Layout, 64
- Clear App Cache, 214
- Clock, 189
 - Check Time, 189
 - Set Date, 189
 - Stopwatch, 190
 - Timer, 190
 - World Clock, 190
- Color Profile, 207
- Conference Calling, 96
- Contacts, 102
- Contacts List, Contacts, 102
- Data Saver, 127
- Data Services, 125
 - Data Saver, 127
 - Password, 245
 - Status indicators, 126
 - Track Usage, 127
 - User name, 125
- Data Usage, 127
- Date & Time, 238
- Daydream, 208
- Disable Apps, 215
- Display, 206
 - Auto-rotate Screen, 206
 - Font Size, 206
- DLNA
 - HTC Connect, 150
- Do Not Disturb
 - Settings, 210
- Drag, 17
- Dust Resistance, 26
- Earpiece, 5
- Email
 - Add Exchange ActiveSync account, 123
 - Make Call From, 85
 - Send Gmail, 118
- Emergency Numbers, 84
- Enhanced 911 (E911), 84
- Event
 - Create, 177
 - Edit, 177
- Exchange ActiveSync
 - Add account, 123
- Extreme Power Saving Mode, 220
- Facebook, 132
- Factory Data Reset, 232
- Feeds Panel, 60
 - Off, 61
- Files
 - Transfer between phone and computer, 141
- Fingerprint
 - Add, 50
 - Manage, 51
- Fingerprint Scanner, 50
- Fingerprint Sensor, 50
- Flash, 7
- Flick, 18
- Font, 225
- Free Storage, 178
- Freestyle Layout, 65
- Front Indicator Light, 59
- Global Roaming Mode, 134
- Glove Mode, 206
- Gmail, 118
 - Add Account, 123
 - Archive threads, 121
 - Create account, 46
 - Delete threads, 121
 - Get Help, 124

- Inbox, 118
- Labels, 121
- Mute threads, 121
- Read and reply, 118
- Reply Email, 120
- Report phishing, 122
- Report spam, 122
- Search, 122
- Send message, 118
- Switch accounts, 122
- Google
 - Chrome, 128
 - Create account, 46
 - Hangouts, 131
 - Sign in, 47
- Google Account
 - Add Account, 226
 - Forgot Password, 226
- Google Calendar, 176
- Google Drive, 178
 - Bonus Space, 178
 - Check Space, 179
- Google Location Service, 228
- Google Maps, 179
 - Get Around Maps, 179
 - Get Directions, 181
 - Moving in Maps, 179
 - Search Location, 180
- Google Now, 183
- Google Photos, 172
 - Basic Editing, 173
 - Edit Photos, 173
 - RAW Enhancement, 173
 - Share Photos, 172
 - Slow Motion Video, 174
 - Trim Video, 173
 - View Photos, 172
 - View Videos, 172
- Google Play
 - Find and install apps, 47
 - Help, 49
 - Store, 47
- Google Play Music, 194
- Google Search, 182
- Google Settings, 237
- Google Voice Search, 182
- Google Voice Typing, 42
- Google Voice Typing, 238
- Google Wallet, 50
- Group Messaging, 114
- Group Text, 114
- Hangouts, 131
- HDR Mode, 164
- Hearing Aids, 99
- High Res Audio, 163
- History
 - Erase, 91
- Home Key, 30
- Home Screen, 29, 55
 - Add App Shortcuts, 69
 - Add or Remove Widget Panel, 67
 - Add Stickers, 69
 - Add Widgets, 69
 - Arrange Widget Panels, 68
 - Change Main Home Screen, 67
 - Change Widget Settings, 69
 - Customize, 64
 - Feeds Panel, 60
 - Launch Bar, 68
 - Move or Remove Items, 70
 - Organize Widget Panels, 67
 - Settings, 224
 - Wallpaper, 65
- Home Screen Layout, 64
- HTC BlinkFeed, 60
 - Customize, 62
 - Customize Highlights, 63
 - Off, 61
 - Post Status, 64
 - Remove Content, 64
 - Show and Add Topics, 63
 - Show Your Content, 62
 - Subscribe to Other Regions, 63
- HTC BoomSound Adaptive Audio, 199
 - Ambient Sound Levels, 200
 - Earphones, 199
 - Personal Audio Profile, 199
 - Turn On/Off, 200
- HTC Connect, 150
 - AllPlay, 152
 - Blackfire, 153
 - Share Media, 151
- HTC Sense Input Settings, 238
- HTC Sync Manager, 192
 - Get Help, 193
 - Install, 192
 - Transfer iPhone, 193
- iCloud, 25

- Incoming Call
 - Answer, 87
 - Mute Ringtone, 87
 - Reject, 87
- International Data Roaming, 137
- Internet, 113
- Internet Calls, 97
 - Add Account, 97
 - Make an Internet Call, 98
- iPhone, 193
- iPhone Transfer, 25
 - iCloud, 25
- Keyboard Settings, 238
- Language Settings, 237
- LED, 59
- Location Settings, 227
 - On or Off, 227
- Lock Screen
 - Customize, 70
 - Settings, 224
 - Unlock, 52
- Lock Screen Notifications, 72
- Long Distance Calls, 85
- Maps, 179
- Media Gesture, 208
- Messages
 - Block Messages, 116
 - Delete Messages, 117
- Messaging, 113
- microSD Card Tray, 6
- MMS
 - Reply, 115
 - Send, 114
 - Send messages, 114
- Mobile Hotspot, 144
- Motion Launch, 76
 - On or Off, 76
 - Troubleshooting, 79
 - Wake and Unlock, 77
 - Wake Phone, 77
 - Wake to Camera, 79
 - Wake to HTC BlinkFeed Screen, 78
 - Wake to Widget Panel, 78
- Motion Launch Settings, 209
- Multimedia Messaging, 114
- Music
 - Google Play Music, 194
 - Sprint Music Plus, 196
- Nano SIM Card Tray, 6
- Navigation
 - Google Maps, 179
- NFC, 149
- Notification Icons, 56
- Notification LED, 59
- Notification Panel, 58
- Notification Sound, 224
- Notifications, 56
- Now on Tap, 185
- Online Accounts
 - Manage, 226
- Online Storage
 - Google Drive, 178
- Onscreen Keyboard
 - Enter Text by Speaking, 42
 - Landscape, 43
 - Reposition, 44
 - Resize, 44
 - Show Numeric Keys, 45
 - Split, 43
 - Tips, 43
 - Type Faster, 43
 - Word Prediction, 41
- Onscreen Navigation, 30
- Optimize Phone Storage, 219
- People, 102
 - Add an Entry, 105
 - Backup Contacts, 111
 - Contact Groups, 109
 - Copy, 107
 - Copy Contacts, 107
 - Delete an Entry, 106
 - Edit an Entry, 106
 - Find, 103
 - Import, 107
 - Import Contacts, 107
 - Make Call From, 89
 - Merge, 107
 - My Profile, 104
 - Private Contacts, 111
 - Send Contacts, 108
- Personal Audio Profile, 199
- Phone
 - Change Dialer Layout, 83
 - Dialer, 82
 - Ringtone, 98
- Phone Calls, 82
 - Answer, 86
 - Emergency Numbers, 84

- Extension Number, 83
- From Calendar Event, 85
- From Call History, 89
- From Email Messages, 85
- From People, 89
- From Text Messages, 85
- International, 85
- Missed Call, 86
- Phone Dialpad, 82
- Smart Dial, 82
- Use Speed Dial, 84
- Using phone keypad, 82
- Phone Layout (illustration), 5
- Phone Update
 - Software, 53
- Photo Tips, 161
- Pictures
 - Take with camera, 161
- Pinch, 19
- Play Music, 194
- Play Store, 47
 - Find and install apps, 47
- Plus (+) Code Dialing, 136
- Plus Code Dialing, 86
- Power Key, 6
- Power Off, 15
- Power On, 15
- Power Options
 - Restart, 16
 - Turn Phone Off, 15
 - Turn Phone On, 15
- Power Saver, 220
- Predictive Text, 41
- Press and Flick, 18
- Quick Settings, 31
- RAW, 171
- RAW Photo
 - Editing, 173
 - Format and Information, 171
 - Take, 171
- Recent Apps Key, 30
- Reject a Call, 87
- Reset Phone, 232
- Restart Phone, 16
- Ringtone
 - Settings, 224
- Screen
 - Auto-rotate Screen, 206
 - Font Size, 206
 - Glove Mode, 206
 - Screen Timeout, 208
- Screen Unlock
 - Face Unlock, 228
 - Password, 230
 - Pattern, 229
 - PIN, 229
- Screenshots, 32
- SD Card, 11
 - Install, 12
 - Internal, 215
 - Removable, 215
 - Remove, 14
 - Set as Internal, 216
 - Storage Settings, 215
- Search, 182
 - By Voice, 182
 - Set Options, 182
 - Using Google, 182
 - Using Google Now, 183
 - Using Now on Tap, 185
- Search Info, 182
- Security Settings
 - Digital Certificates, 230
 - Lock Screen, 230
 - Screen Lock, 228
- Selfie Mode, 165
- Selfie Panorama, 167
- Settings
 - About Your Phone, 240
 - Accessibility, 234
 - Accounts, 225
 - Airplane Mode, 204
 - Applications, 214
 - Backup, 231
 - Bluetooth, 204
 - Connections, 202
 - Date & Time, 238
 - Display & gestures, 206
 - Get Content From Another Phone, 233
 - Getting To, 30
 - Google, 237
 - Hearing Aids, 99
 - HTC BoomSound Adaptive Audio, 209
 - HTC Connect, 204
 - Language & Keyboard, 237
 - List of Settings, 202
 - Location Settings, 227
 - Memory, 223

- Mobile Data, 204
- Personalize, 224
- Power, 219
- Printing, 239
- Quick Settings, 31
- Reset, 232
- Screen Capture, 32
- Security Settings, 225, 228, 230
- Sound & Notification, 209
- Storage, 215
- Sync Accounts, 225
- System Updates, 239
- TTY Mode, 100
- Wi-Fi, 204
- Setup Screens, 22
- Share Photos and Videos, 172
- Silent Mode, 38
- SIM Card, 8, 134
 - Handle, 8
 - Install, 10
- Sleep Mode, 208
- Slide, 17
- Slow Motion Video, 165
- Slow Motion Video Editing, 174
- Smart Dial, 82
- Smart Lock, 228
- SMS
 - Reply, 115
 - Send, 113
- Social Network Account
 - Add Account, 225
- Sound
 - Incoming Calls, 212
 - Notification, Alarm, 210
 - Other Options, 212
 - Ringtones, 212
 - Sound Profile, 209
 - System Sounds, 213
 - Vibrate, 209
 - Volumes, 209
- Speaker, 7
- Speech Setting, 238
- Speed Dial, 85
- Spread, 19
- Sprint 411, 246
- Sprint Account Management, 245
- Sprint Hotspot, 144
- Sprint Music Plus, 196
- Sprint Operator Services, 246
- Sprint Worldwide Wireless Service, 134
- Sprint Zone, 198
- Status Bar, 56
- Status Icons, 57
- Stickers, 69
- Stopwatch, 190
- Storage
 - Copy Files, 218
 - Optimize, 219
 - Phone Storage, 215
 - Photos and Videos, 219
 - Storage Types, 215
- Sweep Panorama, 169
- Swipe, 17
- TalkBack, 235
 - Assign Shortcuts, 236
 - Context Menus, 236
 - Gestures, 235
 - Language, 237
 - Reading Speed, 237
 - Turn On, 235
- Tap, 16
- Text
 - Cut and Paste, 40
 - Edit, 39
 - Share, 40
- Text Message
 - Make Call From, 85
- Text Messaging
 - Send messages, 113
- Themes, 73
 - Bookmark, 73
 - Create, 74
 - Delete, 75
 - Download, 73
 - Mix and Match, 74
 - Search, 75
 - Share, 75
- Three-finger Gesture, 20
- Three-finger Tap, 21
- Timer, 190
- Touch, 16
- Touch and Hold, 16
- Touch Autoexposure, 160
- Touchscreen, 6
 - Turn off, 52
- Transfer Content, 23, 233
 - From Android Phone, 23
 - iPhone, 25

- Other Ways to Transfer, 26
 - To/From Your Computer, 25
 - Transfer Contacts, 26
 - Using USB Connection, 25
- Transfer Files, 218
- Travel Mode, 239
- Trim Video, 173
- TTY Mode, 100
- Turn Device Off, 15
- Turn Device On, 15
- Twitter, 132
- Two-finger Swipe, 20
- Update Phone
 - Back Up Data, 53
 - Prepare, 53
 - Update Operating System, 54
 - Update PRL, 54
 - Update Your Profile, 54
- USB Type-C, 141
- USB-C, 141
- Video, 163
- Video Resolution, 163
- VideoPic, 164
- Virtual Private Networks (VPN), 143
- Visual Disturbance, 211
- Visual Voicemail, 92
 - Listen to multiple messages, 93
 - Options, 94
 - Review, 92
 - Set up, 92
 - Settings, 94
- Voice Dial, 85
- Voice Memos, 191
- Voice Recorder, 191
- Voice Typing, 42
- Voicemail, 91
 - Display name, 95
 - Greeting, 94
 - International, 136
 - Password, 245
 - Setup, 91
- Volume
 - Key, 6
- Wallpaper
 - Multiple, 66
 - Set, 65
 - Time-based, 66
- Water Resistance, 26
- Weather, 191
- Wi-Fi, 141
 - Disconnect, 142
 - Turn On or Off, 141
 - WPS, 142
- Wi-Fi Calling, 95
- Wireless Router, 144
- World Clock, 190
- Your Phone Number, 38
- YouTube, 197
 - Post Videos, 198
 - Search Videos, 197
 - Share Video Link, 198
 - Watch Videos, 197
- Zoe Camera, 169
- Zoom, 19
- Zooming, 160